



[Home](#) » [nutrarchef](#) » **nutrarchef NCS3PWOK Durable Wok with Side Handle User Guide** 

## Contents [ [hide](#) ]

- [1 nutrarchef NCS3PWOK Durable Wok with Side Handle](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 FAQ](#)
- [5 Documents / Resources](#)
  - [5.1 References](#)



## **nutrarchef NCS3PWOK Durable Wok with Side Handle**



## **Product Information**

## Specifications

- Brand: NutriChef
- Website: [nutrichefkitchen.com](https://nutrichefkitchen.com)
- Language Options: English (ENG), Spanish (SPA), French (FRE), Italian (ITA), German (GER), Polish (POL), Turkish (TUR), Dutch (NLD)
- Contact Phone: 1.718.535.1800

## Visit Our Website



**SCAN ME**

[nutrichefkitchen.com](https://nutrichefkitchen.com)

## Questions or Comments

We are here to help!

Phone: 1.718.535.1800

[nutrichefkitchen.com/ContactUs](https://nutrichefkitchen.com/ContactUs)



## Product Usage Instructions

- Wash item with warm water and dry thoroughly before first use.
- For best cooking results, we recommend greasing the non-stick surface prior to cooking.
- Do not use sharp or metal utensils on the non-stick surface.
- In order to avoid scratching
- glass/ceramic hobs, raise the product upwards when moving it, do not slide it.

- Always match the hob diameter to that of the pot/pan. Using a pot/pan base that has a larger or smaller diameter than the cooking zone may result in a weaker magnetic field and a reduced heat output. In extreme cases, the hob may not recognize the pot/pan and no heat will be generated.
- Do not overheat the pot/pan.
- Allow the pot/pan to cool down before washing; immersing in cold water may cause warping and damage the non-stick surface.
- Do not use harsh detergents, metallic brushes or scouring pads whilst cleaning.
- Hand-wash with liquid detergent and a soft sponge, to help maintain product performance and appearance.

## FAQ


- **Q: Can I change the language settings on the product?**

A: No, the language options provided are for the website and support services. The product interface language may vary.

- **Q: How do I get in touch with customer support?**

A: You can contact our customer support team at 1.718.535.1800 or visit [nutrarchefkitchen.com/ContactUs](https://nutrarchefkitchen.com/ContactUs) for assistance.

## Documents / Resources

	<p><a href="#">nutrarchef NCS3PWOK Durable Wok with Side Handle [pdf]</a> User Guide</p> <p>NCS3PWOK Durable Wok with Side Handle, NCS3PWOK, Durable Wok with Side Handle, Wok with Side Handle, Side Handle</p>
---	--

## References

- [User Manual](#)

nutrarchef

Durable Wok with Side Handle, NCS3PWOK, NCS3PWOK Durable Wok with Side Handle, nutrarchef, Side Handle, Wok with Side Handle

---

## Leave a comment

Your email address will not be published. Required fields are marked \*

Comment \*

Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

**Post Comment**

**Search:**

**Search**

[Manuals+](#) | [Upload](#) | [Deep Search](#) | [Privacy Policy](#) | [@manuals.plus](#) | [YouTube](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.