



nutr Chef PCRM15D Electric Crepe Maker Griddle User Guide

[Home](#) » [nutr Chef](#) » nutr Chef PCRM15D Electric Crepe Maker Griddle User Guide

Contents [[hide](#)]

- [1 nutr Chef PCRM15D Electric Crepe Maker Griddle](#)
- [2 Important Safety Instructions](#)
- [3 BEFORE THE FIRST USE](#)
- [4 PARTS IDENTIFICATION](#)
- [5 USING YOUR APPLIANCE](#)
- [6 CLEANING AND CARE](#)
- [7 Storage](#)
- [8 Features:](#)
- [9 What's in the Box:](#)
- [10 Technical Specs:](#)
- [11 Documents / Resources](#)
 - [11.1 References](#)
- [12 Related Posts](#)



nutr Chef PCRM15D Electric Crepe Maker Griddle



Please read these instructions carefully and retain for future reference.

Important Safety Instructions

WARNING: When using electrical appliances especially when children are present, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

READ ALL INSTRUCTIONS

- Make sure the voltage in your outlet is the same as the voltage indicated on the appliance's rating label.
- Always turn the power off at the power outlet before you insert or remove a plug. Remove by grasping the plug – do not pull on the cord.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning appliance.
- Do not use your appliance with an extension cord unless this cord has been checked and tested by a qualified technician or service person.
- Close supervision is necessary when your appliance is being used by children.
- Young children should be supervised to ensure that they do not play with the appliance.
- Never leave an appliance unattended while in use.
- Do not use an appliance for any purpose other than its intended use.
- Do not place appliance on or near a hot gas flame, electric element or any other appliance.
- Do not let the power cord of an appliance hang over the edge of a table or bench top or touch any hot surfaces.
- Do not operate any appliance that has malfunctioned or has been damaged in any manner. In order to avoid the risk of an electric shock, never try to repair the appliance yourself. Take it to an authorized service station for examination and repair.
- Do not use outdoors or for commercial purposes.
- Unplug the unit when finished using.
- Extreme caution must be exercised when moving an appliance.


SAVE THESE INSTRUCTIONS THIS APPLIANCE IS FOR HOUSEHOLD USE ONLY.

BEFORE THE FIRST USE

- Remove all packaging materials.
- Clean the baking plates with a damp cloth or sponge.
- Slightly grease the baking plates with a little cooking oil.
- Take care to prevent water from running into the appliance.

PARTS IDENTIFICATION

Before using your appliance for the first time, you should become familiar with all of the parts. Read all Instructions and Safeguards carefully.

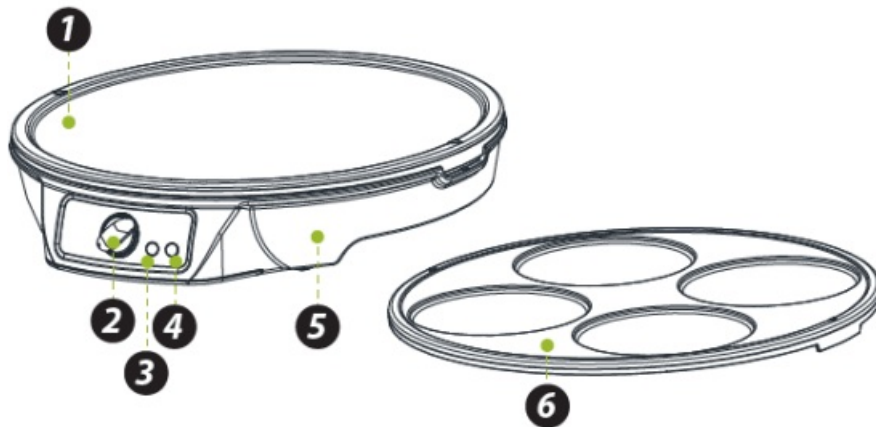

1. Non-stick Plate
2. Knob
3. Power Light (Red)
4. Ready Light (Green)
5. Base
6. Non-stick Plate

USING YOUR APPLIANCE

Before using the appliance for the first time, peel off any promotional materials and packaging materials, and check that the cooking plates are clean and free of dust. If necessary, wipe over with a damp cloth. For best results, pour a teaspoon of vegetable oil on to the non-stick plates. Spread over with an absorbent kitchen towel and wipe off any excess oil.

NOTE: When your appliance is heated for the first time, it may emit slight smoke or odor. This is normal and does not affect the safety of your appliance.

- Place the unit on a level surface making sure it is not in contact with a wall, corner or curtains.
- Never cut crepes on the baking plate. Use only wooden or heatproof plastic utensils to avoid scratching the nonstick coating.
- Insert the pin plug into the power outlet, you will notice that the red power light and the green ready light will go on. Turn the temperature knob to MAX and the green ready light goes off. Indicating the appliance is heating up.
- Allow your appliance to pre-heat until the green ready light goes on.

This indicates that the cooking plate has reached the correct temperature for cooking.

- For best results, lightly spray the cooking plate with a cooking oil spray before using it. This will assist in the removal of the crepes after cooking.
- Once the green ready light goes on pour crepe batter onto the baking plate spreading it with a circular motion using the batter spreader.
- The green ready light will continue to go off and on during the cooking process indicating that the appliance is heating up appropriately.
- Allow the crepe to cook until the surface is no longer liquid and the crepe can be moved slightly.
- Using a spatula, lift and flip the crepe completely.



- Continue to cook on this side until the underside is browned slightly and easily lifted. Remove crepe to a wire rack and allow to cool slightly before stacking on a plate.
- Adjust the temperature as needed after the first crepe is done.
- Repeat as needed, stacking crepes layered between sheets of wax paper. Cover stack with foil and place in a 200°F oven to keep warm.

To remove cooking plate

Always unplug the appliance and allow it to cool before removing cooking plate.

CLEANING AND CARE

- Always unplug the appliance and allow it to cool before cleaning. The unit is easier to clean when slightly warm. There is no need to disassemble appliances for cleaning. Never immerse the appliance in water or place in the dishwasher.
- The cooking plate can be cleaned in water or a dishwasher.
- Do not use anything abrasive that can scratch or damage the non-stick coating.
- Do not use metal utensils to remove your foods, they can damage the non-stick surface.
- Wipe the outside of the appliance with a damp cloth only. Do not clean the outside with any abrasive scouring pad or steel wool, as this will damage the finish. Do not immerse in water or any other liquid.

Storage

- Always unplug the appliance before storage.
- Always make sure the appliance is cool and dry before storing.

Features:

- Power & Ready Light Indicators
- Adjustable Temperature Control Knob
- Non-stick Coating Plate for Easy Cleaning
- Cord-Wrap For Storage
- Simple Crepe & Blintz Cooking
- Compact, Quick & Convenient Cooktop
- Temperature Adjustable Rotary Dial
- Aluminum Griddle Hot Plate Non-Stick Construction
- Detachable Plate
- Great for Cooking Breakfast Eggs, Bacon, Pancakes
- Safe for Any Countertop, Tabletop, Kitchen Top
- Ultra-Quiet Operation
- LED Indicator Lights
- High-Powered Heating Element

What's in the Box:



- Crepe Maker/Griddle
- (2) Foam
- PE Bag
- Wood T Stick
- (1) Set of Spatula

Technical Specs:

- Power Supply: 1200W
- Power Output: 120V, AC 60Hz
- Cooking Surface Diameter: 12" Inch
- Power Cord Length: 2.5' Feet 0.85m≈2.78 Feet
- Construction Material: (Housing): PF (Plate): Aluminum

- Product Dimensions (L x W x H): 13.0" x 12.16" x 2.48" -inches

Questions? Issues?

We are here to help! Phone: (1) 718-535-1800 Email: support@pyleusa.com

Documents / Resources



[nutriChef PCRM15D Electric Crepe Maker Griddle](#) [pdf] User Guide
PCRM15D, Electric Crepe Maker Griddle

References

- [NutriChef Kitchen | Vacuum Sealers, Air Fryers, Blenders & More!](#)