



## **nutrTchef PKSTIND48 Dual Induction Cooktop Digital Display User Manual**

[Home](#) » [nutrTchef](#) » nutrTchef PKSTIND48 Dual Induction Cooktop Digital Display User Manual 




**PKSTIND48  
Dual Induction Cooktop  
Double Countertop Burner with Digital Display**




## Contents

- 1 PRODUCT CONFIGURATION
- 2 SAFETY CAUTIONS:
- 3 PRODUCT OPERATING INSTRUCTIONS
- 4 COOKING MODE:
  - 4.1 TIMER OR PRESET FUNCTION: 4 HOURS TIMER & 23:59 PRESE
  - 4.2 LOCK FUNCTION:
- 5 SELECTION OF COOKWARE:
- 6 MAINTENANCE AND DAILY CARE
- 7 TROUBLESHOOTING AND TREATMENT
- 8 Documents / Resources
  - 8.1 References
- 9 Related Posts

## PRODUCT CONFIGURATION

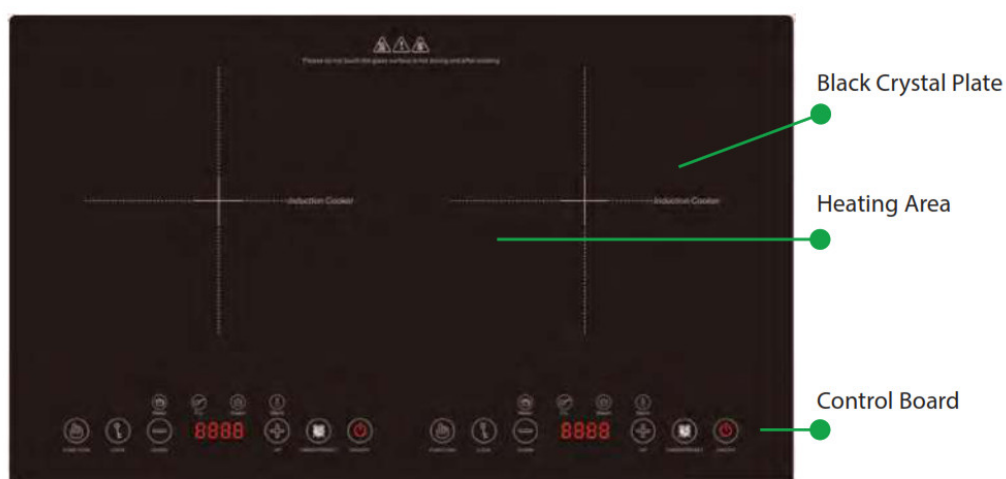

## CONTROL PANEL:

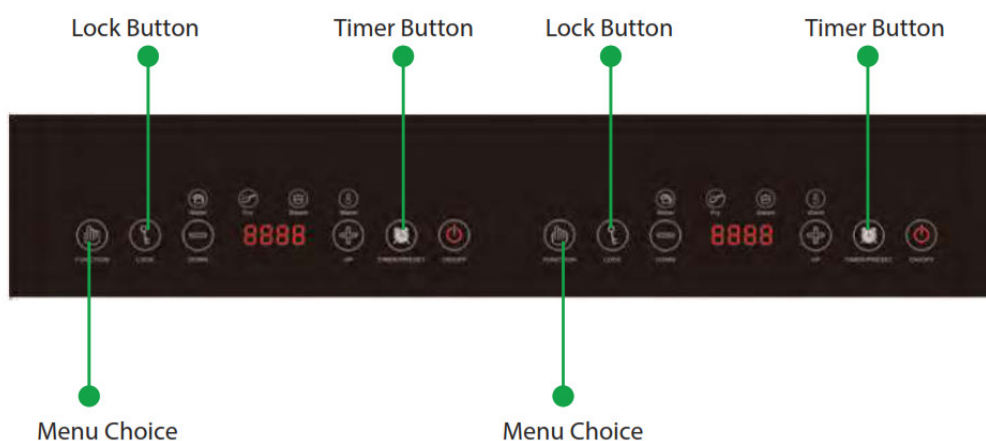

## SAFETY CAUTIONS:

### WARNING:

**SWITCH OFF THE INDUCTION COOKER IN CASE OF ANY CRACK ON THE COOK-TOP PANEL**

1. Do not place the unit in any place that is near gas or hot environment in order to avoid damages or malfunction.
2. To reduce the risk and damage, this plug should be fit into an individual outlet. The rated electrical current is not less than 15A.
3. Place the unit on a level surface, the distance between the unit and background surrounding must be not less than 10cm.
4. Do not immerse the appliance and electric cord in water liquid, or allow liquid to go into the cabinet and get short/contact inner electrical parts, the power cord must be plugged out before cleaning.
5. Do not cover gas vent with anything during cooking, otherwise, it will cause danger.
6. To avoid danger, please uncap the cover before heating tinned food.
7. If it is still not working after inspection, please immediately contact our service center and do not open the unit to avoid any danger.
8. Do not operate any appliance with a damaged cord or plug, or after appliance malfunctions or has been damaged in any manner
9. It would get dangerous when the metal gets heated directly or indirectly.
10. Do not place any metal on the plate and also to the nonmetal pad within 10cm.
11. Do not cook with an empty pot to avoid malfunction or danger.
12. Always clean the unit and avoid any dirt that may go into the fan to effect normal working.
13. Do not touch the plate while the unit is working to avoid getting burned.
14. To avoid injuries such as scalding, do not let children operate the appliance alone.
15. If you have a pacemaker, you should consult with your doctor before you take advantage of any induction cooking device
16. Do not place on or near a hot gas , electric burner, or in a heated oven
17. To avoid danger, do not place paper, aluminum foil, cloth or other unsuitable articles onto the induction cooker heating plate for indirect heating.
18. Do not place the unit on the cloth or carpet to avoid blocking the rear exhaust vent.
19. Please kindly avoid hitting the plate of the unit, in case of getting cracked, should turn off the unit and plug out immediately and then contact with service points of our company.
20. Do not touch the control panel with any sharp objects.
21. Do not place any metal on the unit while operating.

## **PRODUCT OPERATING INSTRUCTIONS**

1. Place suitable cooking utensils in the center of the top plate.
2. Insert the plug in to AC 120V, 60Hz Socket, Press ON/OFF to switch on, after pressing Function, The default "Fry" will auto select.  
Different cooking functions, setting and adjustments.
3. To switch off, Press ON/OFF again, then plug out to shut off power.

## **COOKING MODE:**

### **Right Side/Left Size:**

**1.** Manual Control Function: Fry, Steam, Water, Fry Function:

- Press the [Function] key until the indicator of [Fry] remain to light up, the display will show [900] representing

that the default power is 900W.

It can be adjusted by pressing the [+] or [-] key to set the desired Power level.

- There are 8 Power levels in total (140-210-260-300-350-390-430-460°F, Default 300°F)
- To cancel this mode, press to Function mode or [On/Off] key to stop the operation.
- Time: 4 Hours Timer

#### **Steam Function:**

- Press the [Function] key until the indicator of [Steam] remain to light up, the display will show[1300] representing that the default power is 1300W. It can be adjusted by pressing the [+] or [-] key to set the desired Power level.
- There are 8 Power levels in total (140-210-260-300-350-390-430-460°F, Default 390°F)
- To Cancel this mode, press to Function mode or [On/Off ] key to stop the operation.
- Time:23:59 Hours Preset

#### **Water Function:**

- Press the [Function] key until the indicator of [Water] remain to light up, the display will show[1800] representing that the default power is 1800W. It can be adjusted by pressing the [+] or [-] key to set the desired Power level.
- There are 8 Power levels in total (140-210-260-300-350-390-430-460°F, Default 460°F)
- To cancel this mode, press to Function mode or [On/Off ] key to stop the operation.
- Time:4 Hours Timer

#### **2. Automatic Control Function: Warm**

##### **Warm Function:**

- Press the [Function] key directly until the indicator of [Warm] remain lit up, display will show [140] representing that the default Temperature is 140°F.
- To Cancel this mode, press Function Mode or [On/Off] key to stop the operation.
- Time: 23:59 Hours Preset

#### **TIMER OR PRESET FUNCTION: 4 HOURS TIMER & 23:59 PRESE**

1. User can set the cooking time when cooking mode is selected.
2. Press the [Timer] or [Preset] key until the indicator of [Time] or [Preset] lights up.
3. Display will show the default time [0], user can press [+] or [-] key t set the desired time.
4. Press [+] or [-] key once to increase or decrease a minute.
5. Press and hold for 3 second to access quick adjustment, the time can be adjusted from 0 minutes to 4 hours/23:59 Hours.
6. After setting, user can press Cooking key once to confirm or wait until the display stop.
7. To Cancel this mode, press Cooking Key or [Timer] Key or [On/Off] key to stop the operation.

#### **LOCK FUNCTION:**

- Press the [Lock] key and hold for 3 seconds the display will show [Loc] indicates that the appliance is locked.

- To Cancel this mode, press [Lock] key and hold for 3 seconds or [On/Off] key to stop the operation.

## SELECTION OF COOKWARE:

### 1. Material required:

- Steel, cast iron, enameled iron, stainless steel, flat-bottom pans/pots with diameter from 12 to 26cm.
- It is suggested to use the required pot. Do not attempt to use other pot instead (especially pressure sensors vessels).



### 2. Please kindly check according to the below requirements if its necessary to use the vessel.

- Pan/Pot must be suitable for induction cooker.
- Pan/pot should be tried out if it's bought by self to see if compatible with the induction cooker
- Pan/Pot should be flat and comes with cover and gas vent.

## MAINTENANCE AND DAILY CARE

1. Remove the power plug prior to clean the unit. Do not clean it until the surface cools down.
2. Glass Plate, Panel and Shell:
  - Soft Cloth for slight stain.
  - For greasy, dirt, blot by using a clean damp cloth with neutral detergent.
3. While the radiator fan is working, dust and dirt would remain on the gas vent, please clean it by brush or cotton stick regularly.
4. Do not wash the unit by water directly to avoid damage.
5. To protect the induction cooker, be sure to have a good contact between plug and socket before use.
6. Do not pull out the power cord directly during operation. To extend the appliance's life, press the "On/Off" button first to power off then pull out the power cord.
7. In order to make operating time longer, the fan will still work for cooling the plate, it is better to plug out after the fan stops working.
8. If the appliance is not be used for a long period of time, pull out the power plug.
9. Some models have structural design against cockroaches, if needed, you can put something like mothball to expel the cockroaches.

## TROUBLESHOOTING AND TREATMENT

During operations, if any errors occurred, please check the following table before calling for service. Below are common errors and solutions.

PROBLEM	CHECKPOINTS	SOLUTION
After connecting the power and pressing the “Power” key, the appliance has no response	Power outage?	Use when electricity resumes
	Is the plug connected firmly?	Check the root causes carefully. If the problem can't be fixed, please contact service center for checking and repairing.
	Is the fuse broken down?	
Induction Cooker send out “Beep” Sound	Incompatible cookware or no cookware is used?	Use compatible cookware for the induction cooker
	Is the cookware not properly placed from the center of the heating zone?	Replace the cookware at the center of the defined heating zone
	Is the cookware bigger than 12cm?	Change the diameter cookware bigger than 12
No operation during the heating being in use	Is the cookware empty or the temperature too high.	The appliance is misused
	Is the air intake/exhaust vent clogged or dirt has accumulated	Remove the stuff clogging the air intake/exhaust vent. Operate the appliance again after cooling down.
	Is the cooker working over 2 hours without any external instruction?	Reset cooking modes or use timer function

PHENOMENON	CHECK POINTS	SOLUTION
Error Codes Occur EO	No Cookware or Incompatible cookware used	If error signal EO, E3, ES shows, please check whether the cookware is not suitable or switch on the appliance again after it cooled down naturally. If error signal EI, E2, E4, E6, E7, occurs please contact service center for checking and repairing
Error Codes Occur EI	Low-Voltage	
Error Codes Occur E2	High-Voltage	
Error Codes Occur E3	Top Plate Overheat	
Error Codes Occur E4	Top Plate Sensor Open Circuit	
Error Codes Occur ES	IGBT Overheat	
Error Codes Occur E6	Top Plate Sensor Short Circuit	
Error Codes Occur E7	Internal Circuit Error	

If the above solutions can't fix the problem, unplug the appliance immediately, contact service center for inspection and repairing, note the error code and report it to service center Ltd. To avoid any danger and damage to the appliance, do not disassemble or repair it by yourself.



**VISIT US ONLINE:**

Have a question?

Need service or repair?

Want to leave a comment?

[PyleUSA.com/ContactUs](https://www.pyleusa.com/contact-us)

**Documents / Resources**



[nutrichef PKSTIND48 Dual Induction Cooktop Digital Display](#) [pdf] User Manual

PKSTIND48, Dual Induction Cooktop, Digital Display

**References**

- [NutriChef Kitchen | Vacuum Sealers, Air Fryers, Blenders & More!](#)