

**NUTSHELL**  
**NS18 Wireless**  
**Earbuds for**  
**Workouts**



## NUTSHELL NS18 Wireless Earbuds for Workouts User Manual

[Home](#) » [NUTSHELL](#) » NUTSHELL NS18 Wireless Earbuds for Workouts User Manual 

### Contents

- [1 NUTSHELL NS18 Wireless Earbuds for Workouts](#)
- [2 PACKAGE LIST](#)
- [3 PRODUCT INFORMATION](#)
- [4 POWER ON AND PAIRING](#)
- [5 CONTROLS](#)
- [6 LIGHTS GUIDES](#)
- [7 Specifications](#)
- [8 CUSTOMER SERVICES](#)
- [9 Documents / Resources](#)
  - [9.1 References](#)
- [10 Related Posts](#)

**NUTSHELL**

**NUTSHELL NS18 Wireless Earbuds for Workouts**



## PACKAGE LIST



 
Wireless Earbud ×2  
Magnetic Charging Case ×1



User Manual ×1



Ear Tips ×3 (L/M/S)



Type-C Charging Cable ×1

## PRODUCT INFORMATION

 
 
### IMPORTANT NOTES

- Register your product on [nutshellx.com/pages/register-product](https://nutshellx.com/pages/register-product) to get an EXTRA three-month warranty for free.
  - **15-MONTH Extended Warranty Aclivate Within 14 Days**




- Before using the NS18 wireless earbuds, please charge both the case and earbuds.

- If you have any questions about product usage, please contact us on [support@nutshellx.com](mailto:support@nutshellx.com) or +1346-697-204 (English CDT 9am-6pm)
- If the earbuds don't charge, please clean the charging slot on the case and the contact surface on the earbuds.

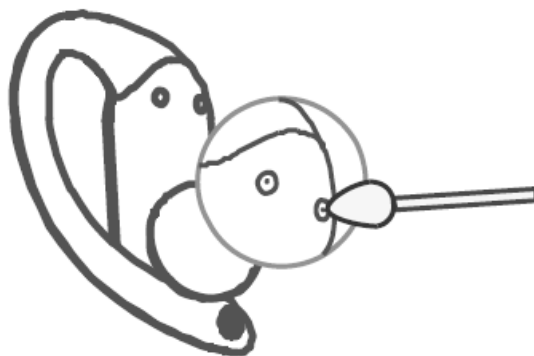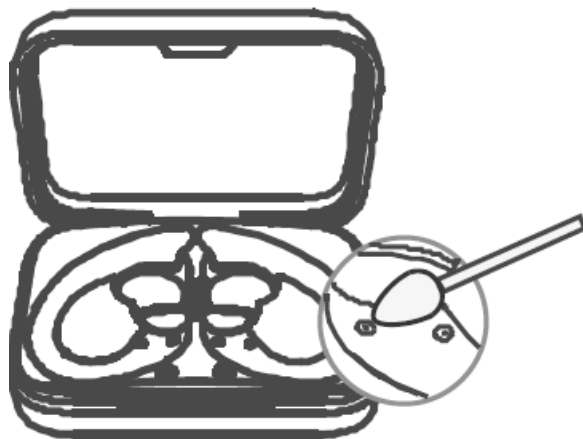

 - If the sound becomes low without control, please use tweezers to take out/remove the net inside the earbuds.

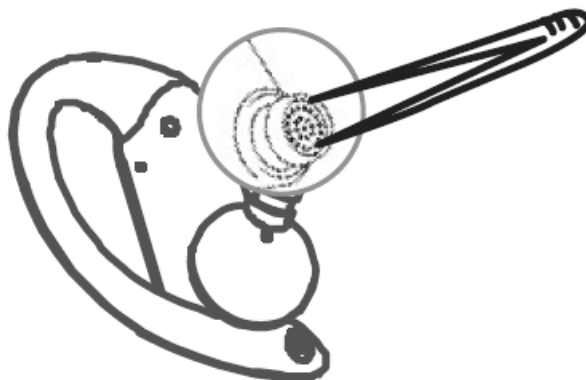

## APP

Open your App Store or Google play and search “Nutshell Audio” Ito install it.



Nutshell Audio



Apple and the Apple logo are trademarks of Apple Inc.

 


Google Play and the Google Play logo are trademarks of Google Inc.



## WEARING

1. We provide three pairs of rubber eartips (including the set installed on the earbuds), please choose the best fit for you.

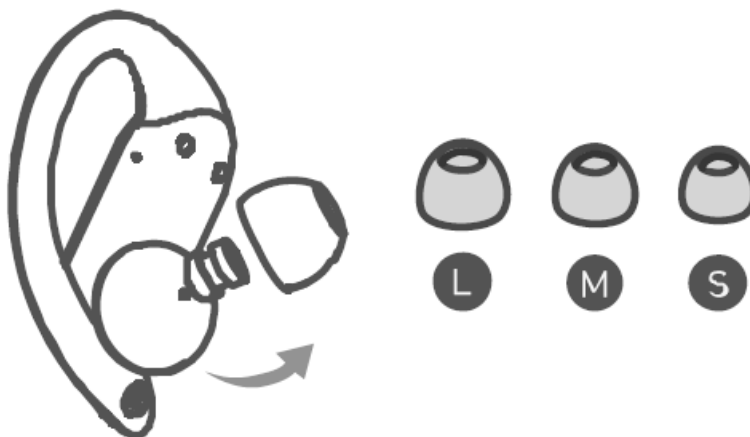


2. Place the earbuds on your ears and rotate them backward until they fit securely.




## CHARGING

 - Place the earbuds in the charging case and close it to charge the earbuds.

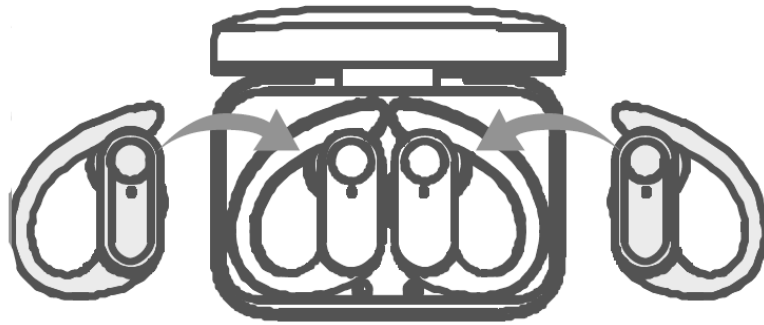

 - Connect the charging case to the power supply by using a certified USB-C charging cable.

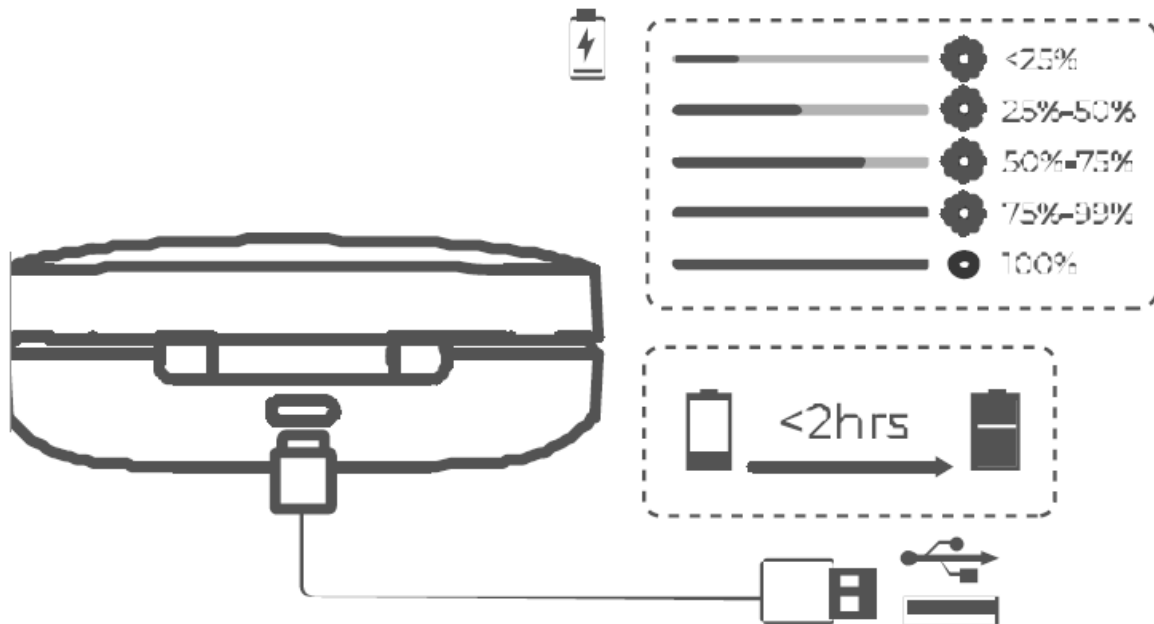


- **Note:** Fully charge both the earbuds and the charging case before the first use.

## POWER ON AND PAIRING

  
### • Power On

- Pick up the earbuds out of the charging case, the earbuds will automatically power on or you can long press and hold either earbud for 3 seconds to power on manually.

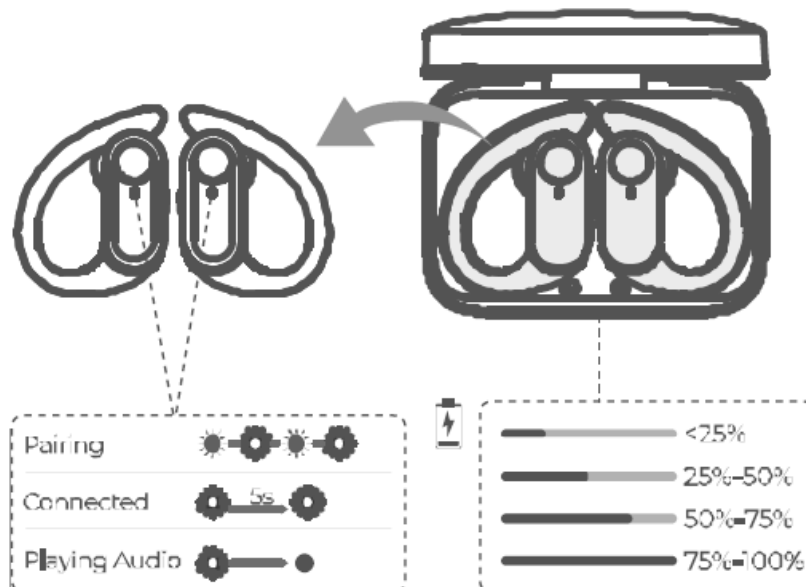



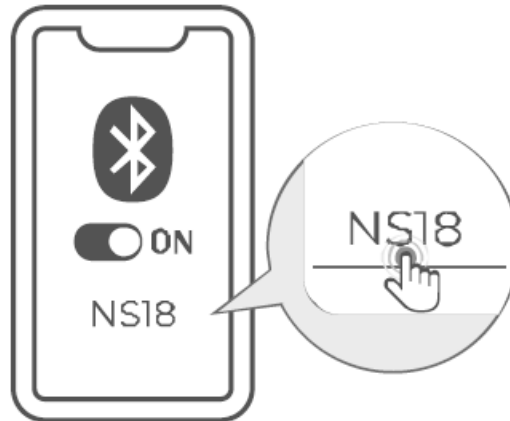

## • Pairing

- The earbuds will enter Bluetooth Pairing mode when they power on. Select "NS18" from your device's Bluetooth list when connecting for the first time.



## CONTROLS

 
	Reject a call	Press and hold for 1 second (L/R)
	Answer/End a call	Press once (L/R)
	Play/Pause	Press Once (L/R)
	Volume down	Press twice (L)
	Volume up	Press twice (R)
	Previous	Press 3 times (L)
	Next track	Press 3 times (R)
	Game Mode on	Press 5 times (L)
	Game Mode off	Press 5 times (R)
	Voice assistant	Press and hold for 2 seconds (L/R)

### Note:


1. You can also customize controls in the Nutshell Audio App.
2. Game mode will turn to Normal mode when the earbuds are disconnected with Bluetooth devices

## POWER OFF

1. To power off, return the earbuds to the charging case and close it. The earbuds will automatically power off when they are fully charged.

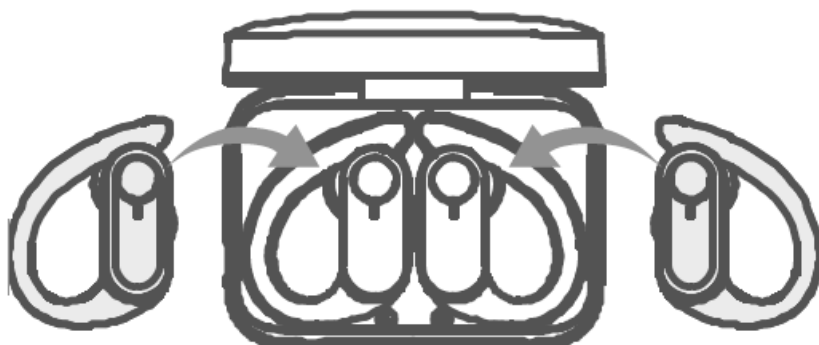

 
2. You can long press and hold either earbud for 5 seconds to power off manually.

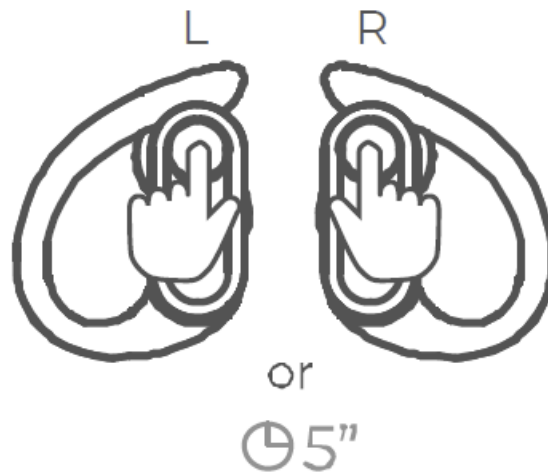


## RESET

If your earbuds won't connect to your phone or other device (but they are syncing), try resetting them.

 1. Long press and hold either button for 5 seconds to power off the earbuds.

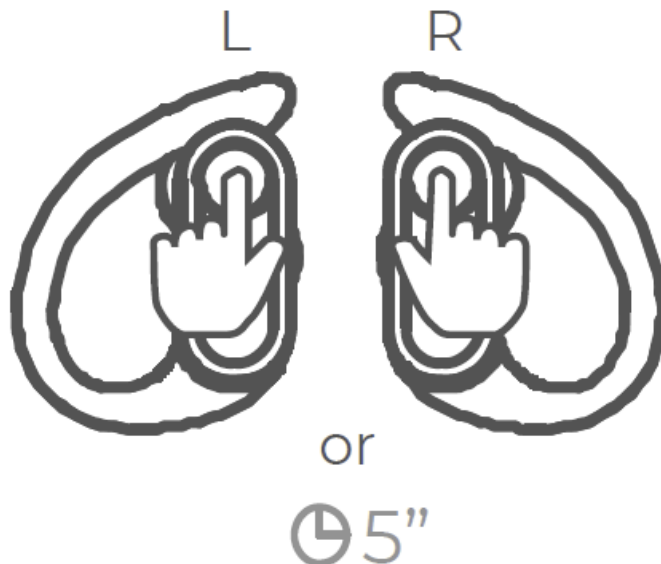

 
2. Long press and hold both buttons for about 8 seconds until both lights flash red rapidly 3 times simultaneously.

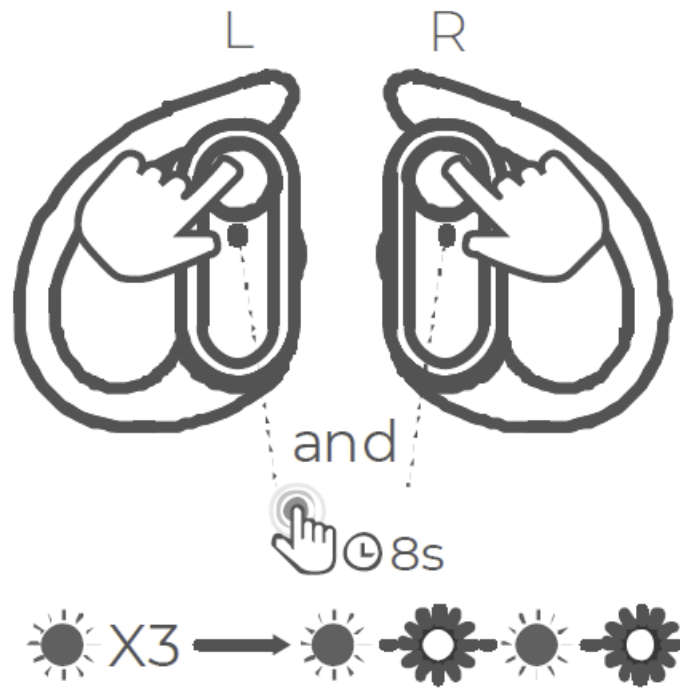

3. The earbuds enter Bluetooth pairing mode. Either light will flash red and white alternately.

If your earbuds aren't syncing together properly, the lights will flash differently. Reset them to fix the issue.

 1. Press both buttons three times simultaneously.
2. The red light will be on for one second.
3. The earbuds are synced and enter to Bluetooth Pairing mode when light flash red and white alternately.

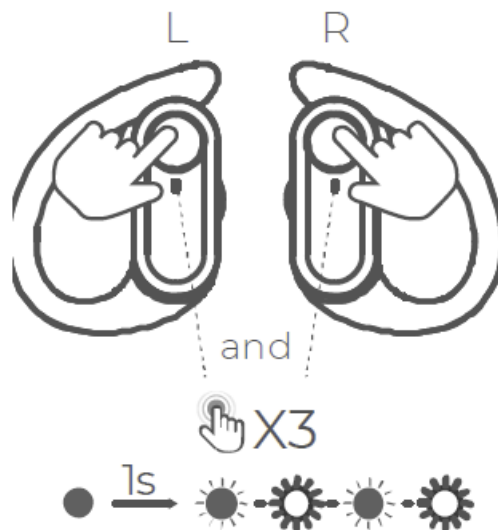

## LIGHTS GUIDES



LED	Description	Status
	Flashing red and white alternately	Pairing
	Flashing white slowly	Connected
	The lights are off	Playing audio
	Flashing red 3 times	Reset "Bluetooth pairing" completed
	Steady red for 1 second	Reset "syncing" completed

## Specifications

Specifications are subject to change without notice.


Input	5V $\Rightarrow$ 0.5A
Rated Output Power	2mW
Battery Capacity	70mAh x 2 (earbuds); 500mAh (charging case)
Charging Time	Up to 2 hours
Playtime	Up to 9 hours (27 hours in total with the charging case)
Driver Unit	13mm dynamic driver
Impedance	16 $\Omega$
Waterproof Rating (Earbuds)	IPX7
Bluetooth Version	5.3
Bluetooth Range	10m / 33ft

## CUSTOMER SERVICES

- [support@nutshellx.com](mailto:support@nutshellx.com)

- +1 346-697-204(English CDT 9am-6pm)
- +1 346-697-204
- [nutshellx.com/pages/support](https://nutshellx.com/pages/support)

Documents / Resources

	<a href="#">NUTSHELL NS18 Wireless Earbuds for Workouts</a> [pdf] User Manual 2BKHB-NS18, 2BKHBNS18, ns18, NS18 Wireless Earbuds for Workouts, NS18, Wireless Earbuds for Workouts, Earbuds for Workouts
---	---

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.