



nVent HOFFMAN AL23SS Fast-Operating Junction Box Clamp Instruction Manual

[Home](#) » [nVent HOFFMAN](#) » nVent HOFFMAN AL23SS Fast-Operating Junction Box Clamp Instruction Manual 



Fast-Operating Junction Box Clamp Instruction Manual



Contents


- [1 INSTALLATION INSTRUCTIONS](#)
- [2 OPERATION INSTRUCTIONS](#)
- [3 Documents / Resources](#)
 - [3.1 References](#)

INSTALLATION INSTRUCTIONS

1. Remove the clamp and clamp screws.
2. Insert clamp screw through the latch and shim with washers to get good gasket compression. If the latch is too loose, remove washers to tighten the latch. If the latch is too tight, add washers to loosen.

OPERATION INSTRUCTIONS

1. Lower lever to the hanging position.
2. Hook catch over cover hem.
3. Lift lever to vertical position to catch.

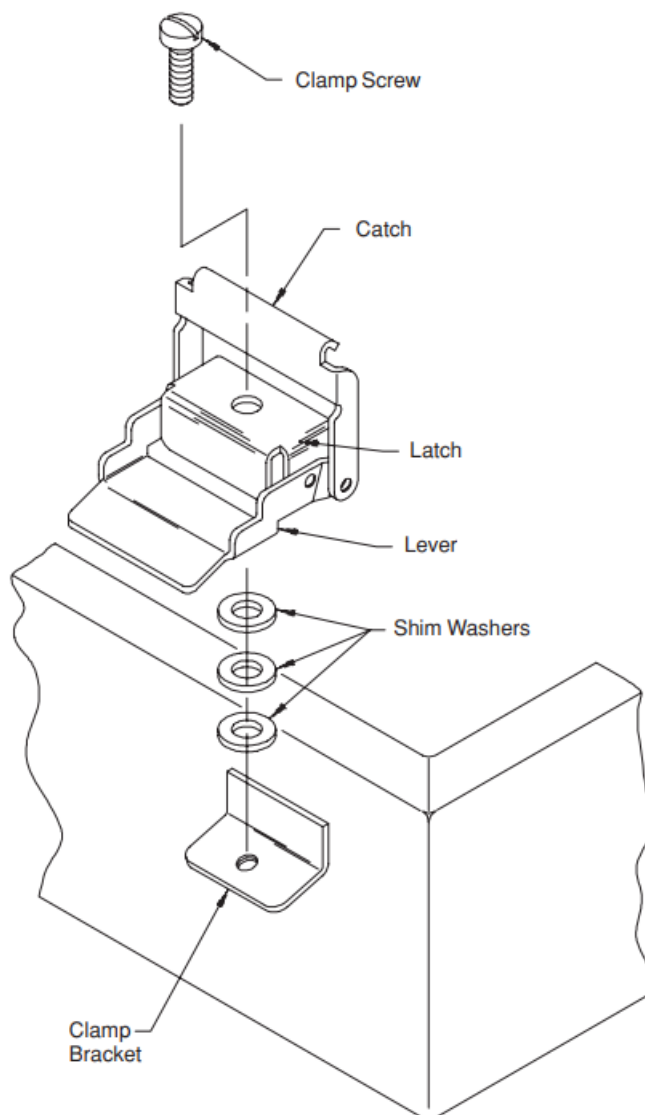

Rev. B


© 2018 Hoffman Enclosures Inc.

PH 763 422 2211

nVent.com/HOFFMAN

P/N 99401792

Documents / Resources

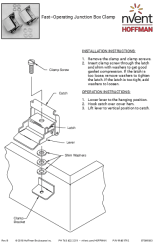 <p>The diagram shows a cross-section of the nVent HOFFMAN AL23SS Fast-Operating Junction Box Clamp. It illustrates the internal components, including the clamp body, the fastening mechanism, and the connection points for the conductors. The diagram is labeled with 'nVent HOFFMAN' and 'AL23SS'.</p>	<p>nVent HOFFMAN AL23SS Fast-Operating Junction Box Clamp [pdf] Instruction Manual 87569083, AL23SS Fast-Operating Junction Box Clamp, AL23SS, Fast-Operating Junction Box Clamp, Junction Box Clamp, Box Clamp, Clamp</p>
--	--

References

-  [We connect and protect | nVent](#)