

nVent HOFFMAN LDSWITCH Light Switch Touch Instruction Manual


[Home](#) » [nVent HOFFMAN](#) » nVent HOFFMAN LDSWITCH Light Switch Touch Instruction Manual 

Contents

- [1 nVent HOFFMAN LDSWITCH Light Switch Touch](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 Required Tools](#)
- [5 FUSION G7](#)
- [6 Type 12 Freestanding](#)
- [7 Documents / Resources](#)
 - [7.1 References](#)



nVent HOFFMAN LDSWITCH Light Switch Touch

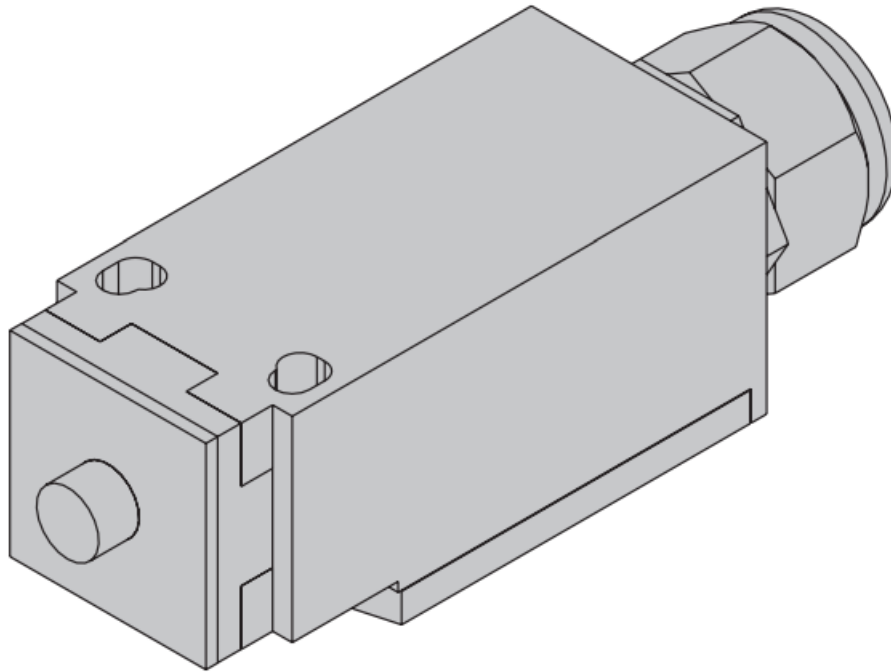

Product Information

- Product Name: Fusion G7TM
- Model Number: 89047575
- Revision: D
- Part Numbers: 89046609, 89047575
- Enclosure Type: Type 12 Freestanding

Product Usage Instructions

1. Before installing the switch, ensure that all power supplies to the enclosure are disconnected to avoid electric shock and equipment damage.
2. Prior to energizing any circuits, perform the following checks to ensure safe and proper functioning of the assembled equipment:
 - Verify all internal and external electrical clearances.
 - Verify all internal and external mechanical clearances.
3. Install the switch according to the provided installation instructions.
4. For proper operation, ensure that all assembled equipment functions safely and properly.
5. If any issues or abnormalities are observed during or after installation, refer to the troubleshooting section of the user manual or contact customer support for assistance.



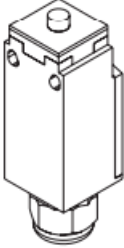




Note: The product user manual may contain additional information regarding specific installation steps, maintenance procedures, and safety precautions. It is recommended to refer to the complete user manual for comprehensive instructions on product usage.



WARNING

To avoid electric shock and equipment damage, disconnect any power supplies to the enclosure before installing

the switch. Do not energize any circuits before all internal and external electrical and mechanical clearances are checked to assure that all assembled equipment functions safely and properly

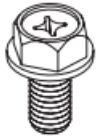
Required Tools

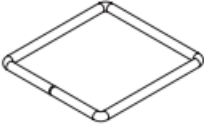1  (2x)	2  (1x)	3  (1x)
4  (2x)	5  (2x)	6  (1x)
7  (2x)		

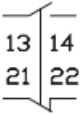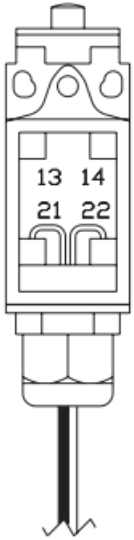


LD SWITCH18
LD SWITCH72

FUSION G7


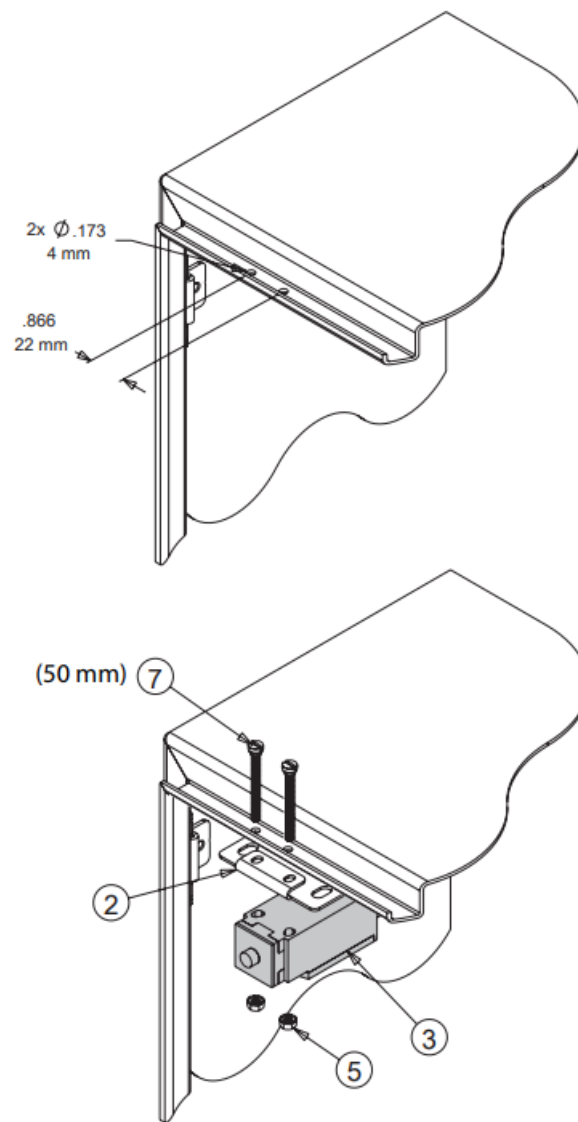




CONCEPT

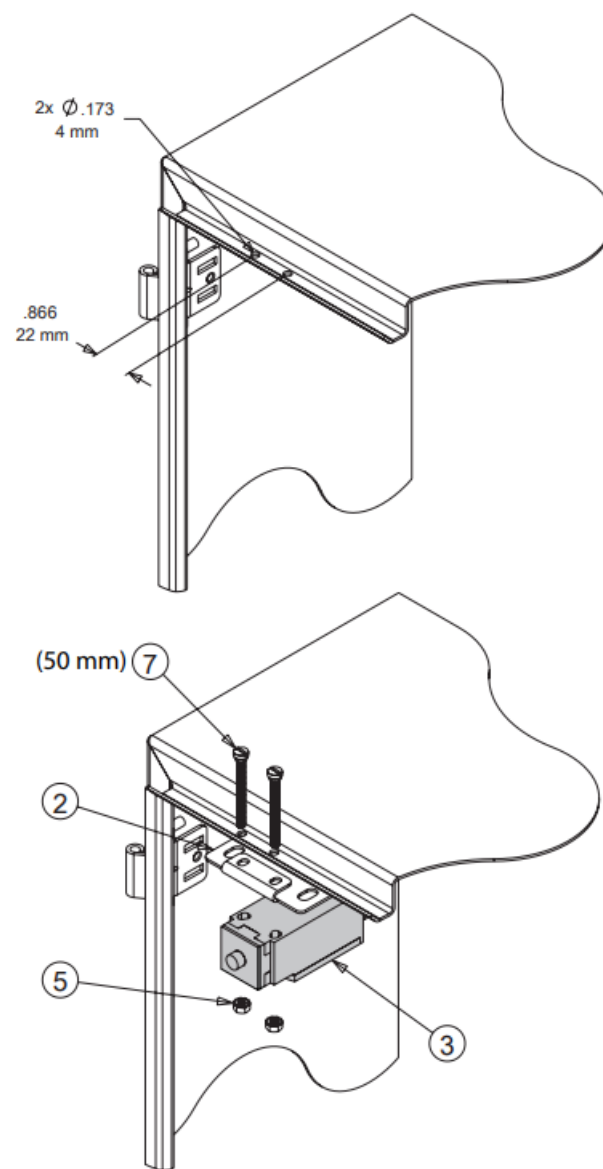



PROLINE®

PROLINE®

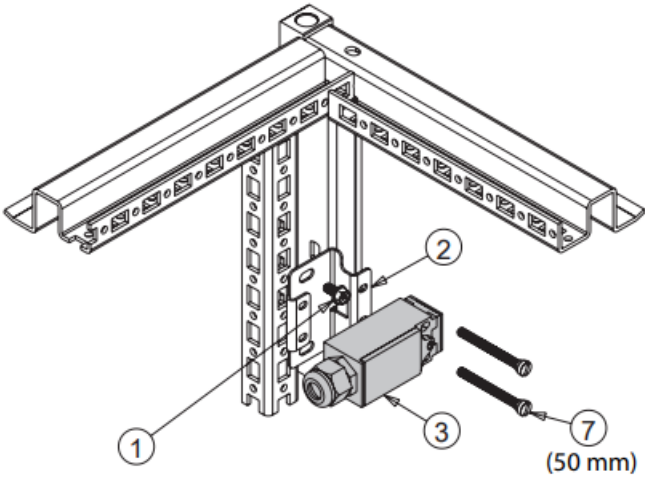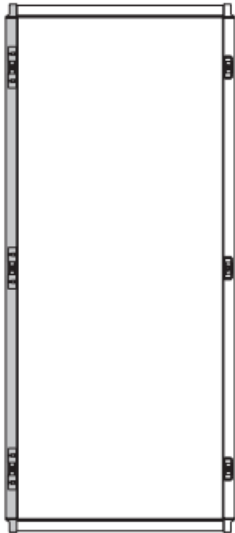

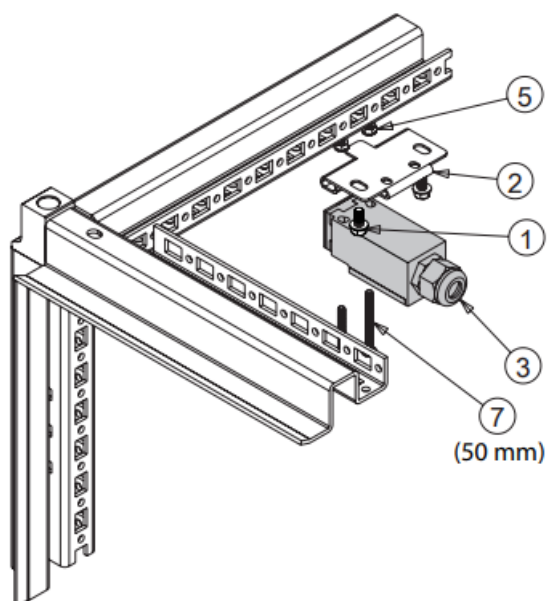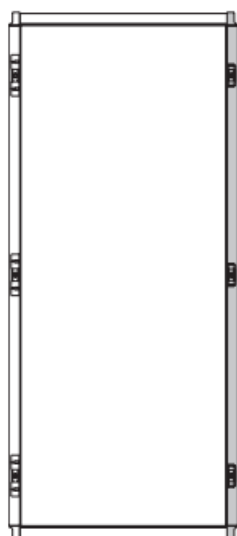
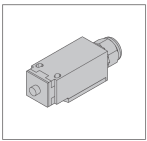


Type 12 Freestanding

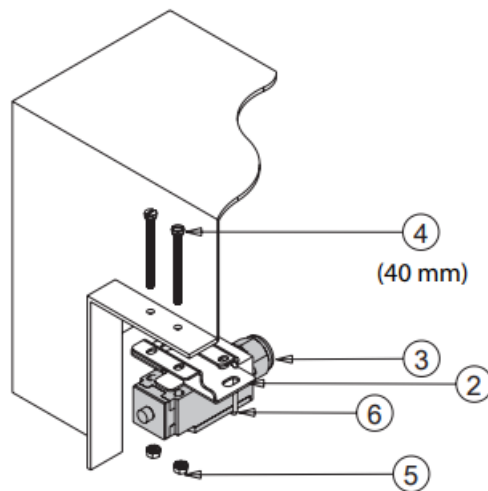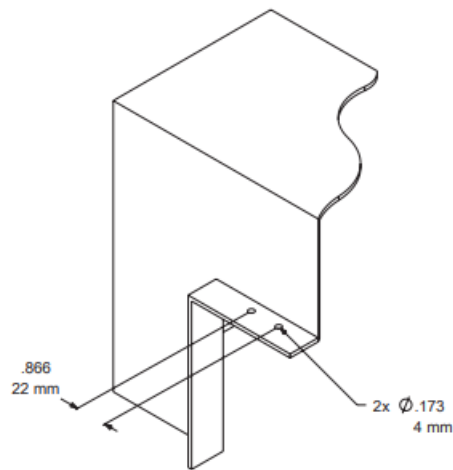

© 2018 Hoffman Enclosures Inc. PH 763 422 2211 • nVent.com/HOFFMAN 89047575

Documents / Resources

 	<p>nVent HOFFMAN LDSWITCH Light Switch Touch [pdf] Instruction Manual LDSWITCH Light Switch Touch, LDSWITCH, Light Switch Touch, Switch Touch, Touch</p>
---	--

References

-  [We connect and protect | nVent](#)