
Manuals+ — User Manuals Simplified.




nVent FLEXCOND50 Eriflex Flexbus Supports and Bracing **System Instruction Manual**

Home » nVent » nVent FLEXCOND50 Eriflex Flexbus Supports and Bracing System Instruction Manual

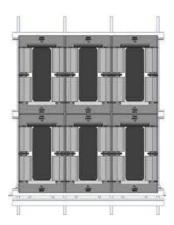

nVent FLEXCOND50 Eriflex Flexbus Supports and Bracing System

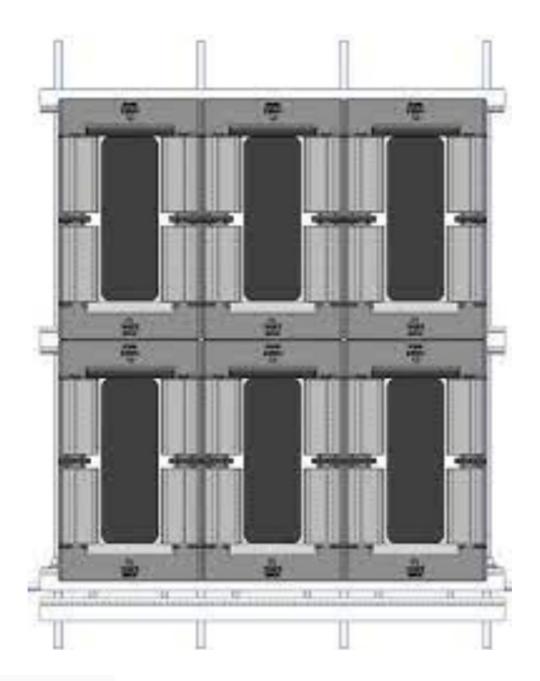


Contents


- 1 INSTRUCTION SHEET
- 2 On Edge Support Kit
- 3 Flat Support Kit
- **4 WARNING**
- 5 Documents /


Resources


- **5.1 References**
- **6 Related Posts**


INSTRUCTION SHEET

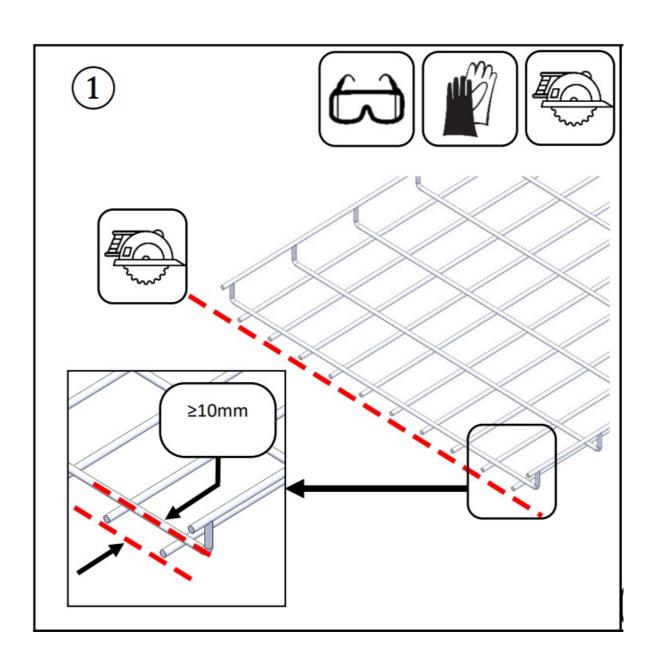


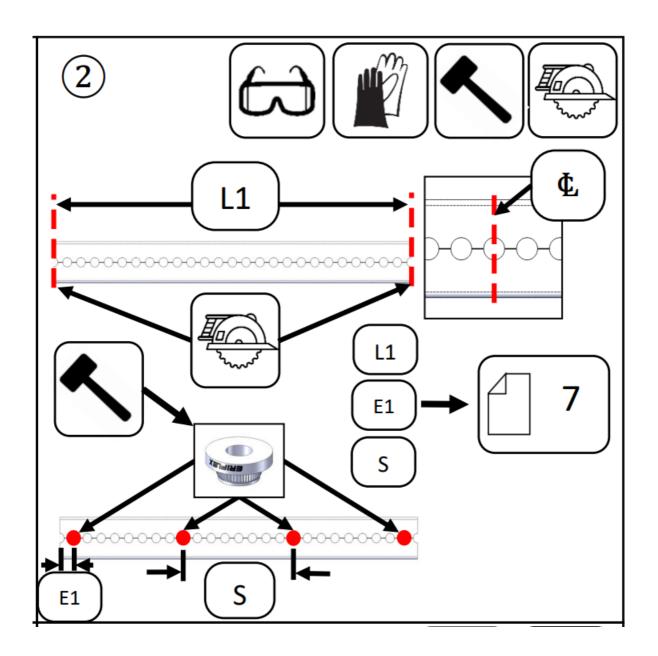


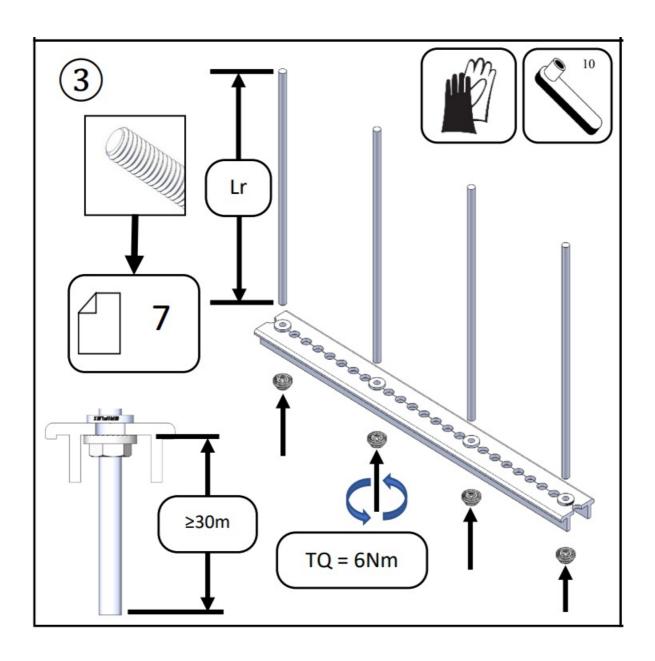


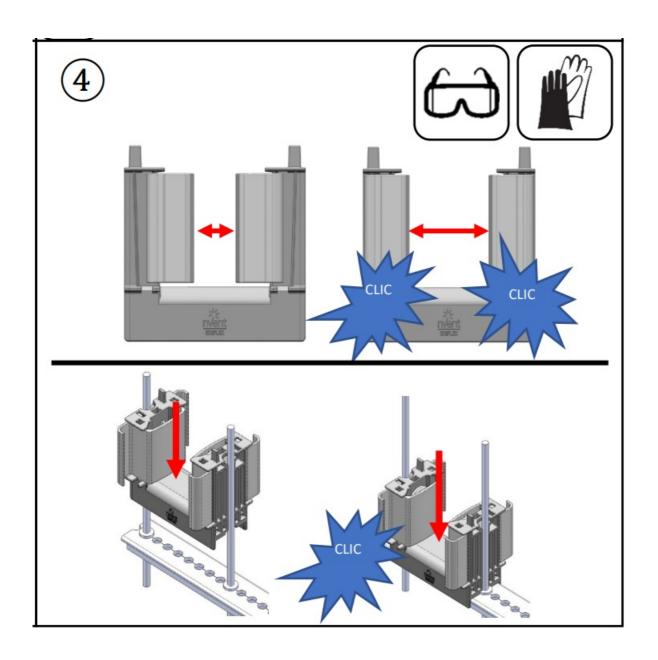


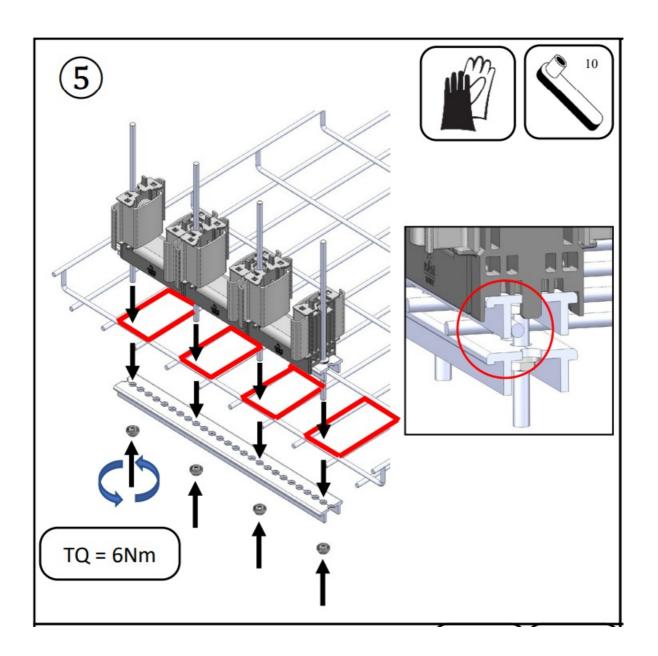


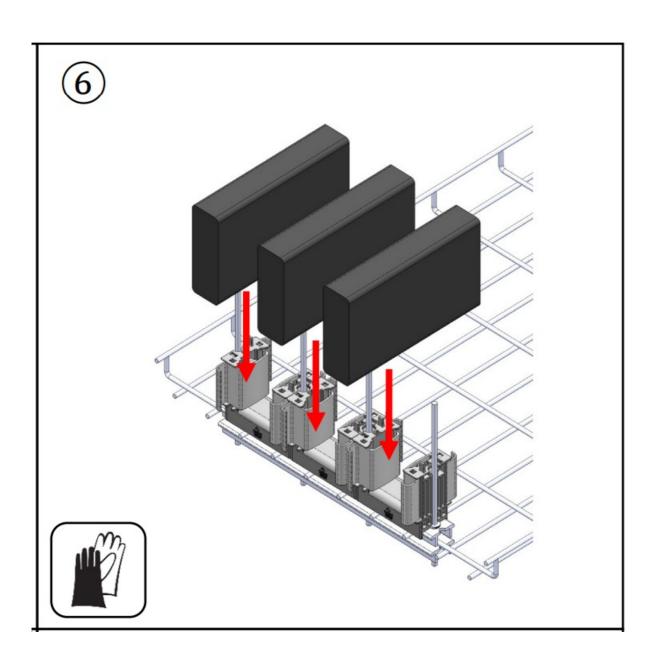


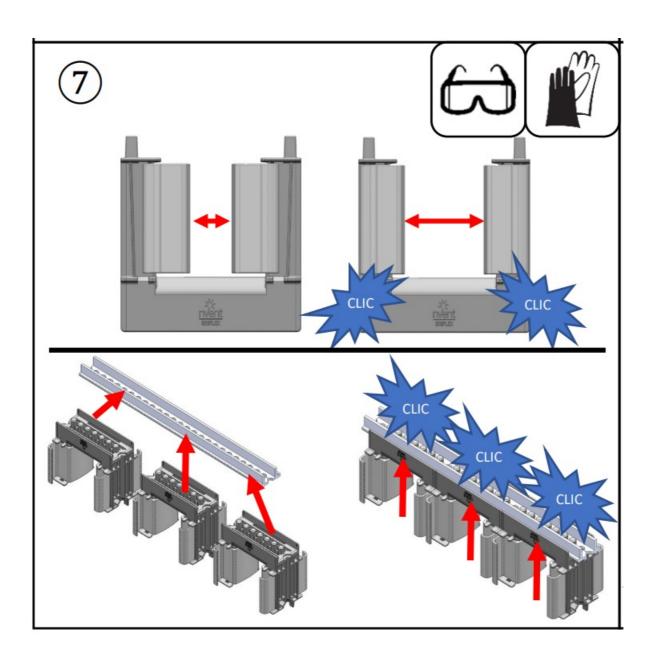


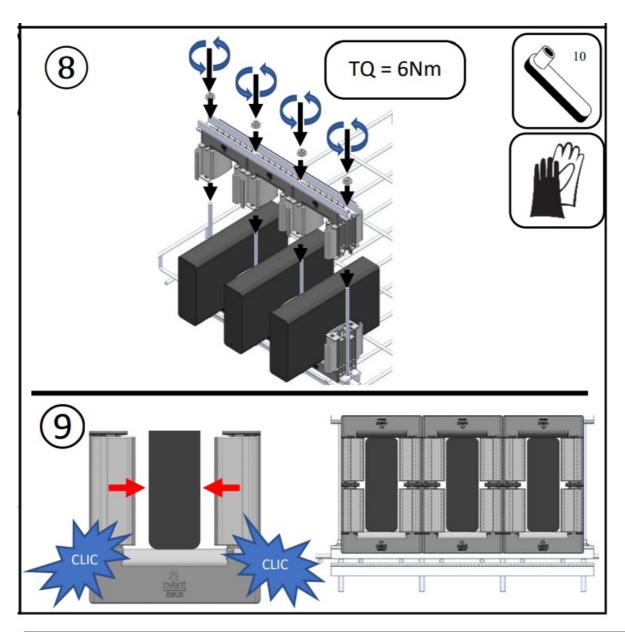

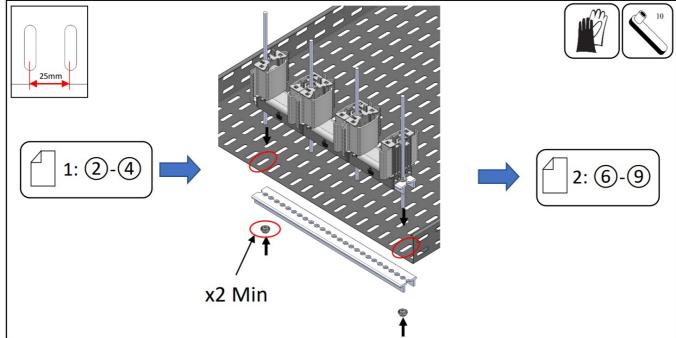


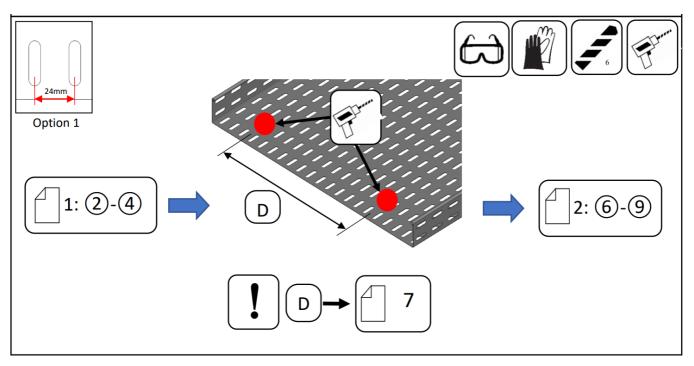

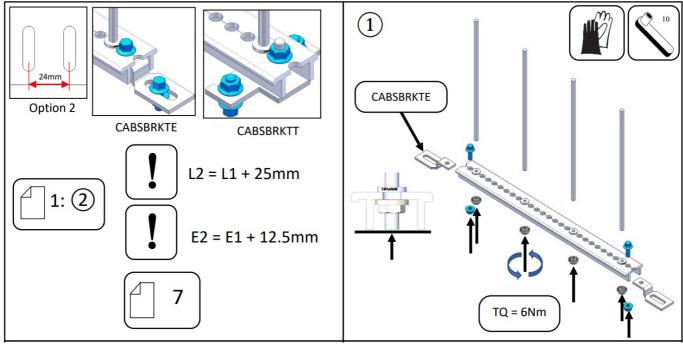

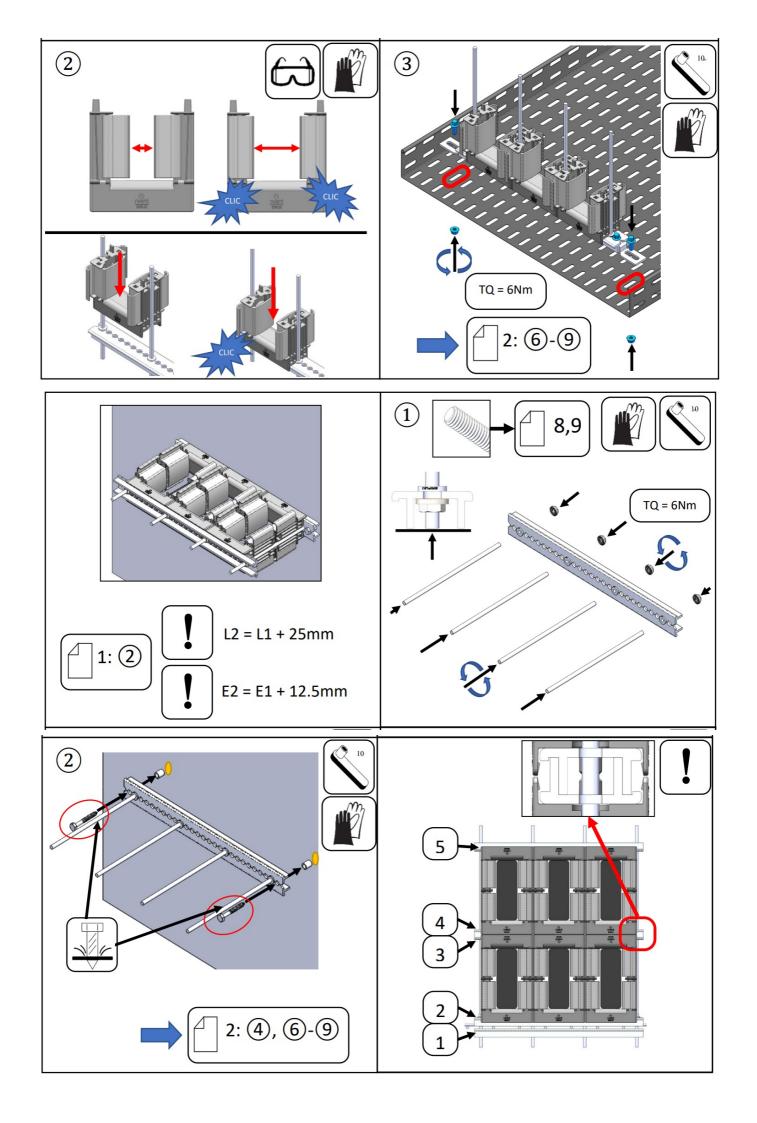

On Edge Support Kit

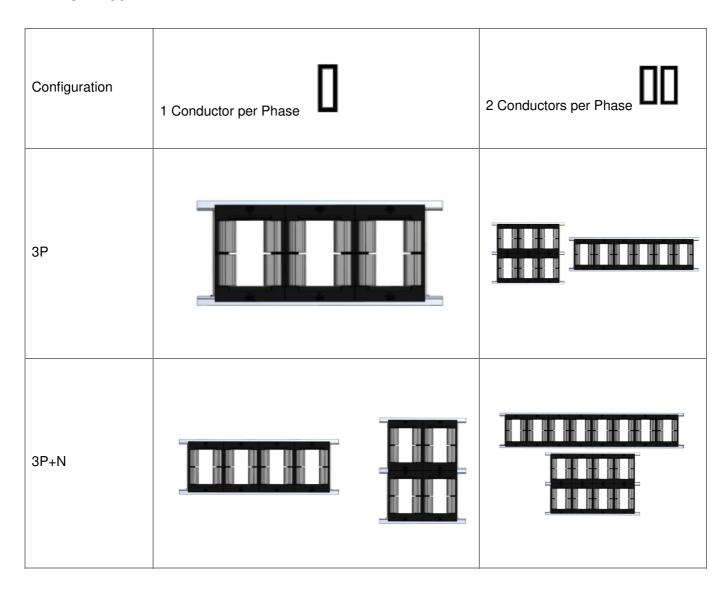

Flat Support Kit

Configuration	1 Conductor per Phase	2 Conductors per Phase
3P		
3P+N		

	FLEX	COND	50					FLEXCOND100							
CONFIGURATION	L1	#L	E1	S	Lr	# Lr	D	L1	# L1	E1	s	Lr	#L	D	
	287, 5	3	12, 5	87, 5	15 0	4	262,5	325	3	12, 5	100	18 6	4	300	

3 P (I)	112, 5	7	12, 5	87, 5	42 0	2	87,5	162, 5	7	12, 5	137,5	18 6	2	137, 5
	287, 5	3	12, 5	87, 5	15 0	4	262,5	437, 5	3	12, 5	137,5	29 0	4	412, 5
	550	3	12, 5	87, 5	15 0	7	525	625	3	12, 5	100	18 6	7	600
	287, 5	5	12, 5	87, 5	24 5	4	262,5	325	5	12, 5	100	34 3	4	300
3 P (II)	200	7	12, 5	87, 5	42 0	3	175	300	7	12, 5	137,5	42 0	3	275
	I						l							

	287, 5	5	12, 5	87, 5	29 0	4	262,5	437, 5	5	12, 5	137,5	29 0	4	412, 5
	375	3	12, 5	87, 5	15 0	5	350	425	3	12, 5	100	18 6	5	400
	200	5	12, 5	87, 5	24 5	3	175	225	5	12, 5	100	34	3	200
3 P + N	200	5	12, 5	87, 5	29 0	3	175	300	5	12, 5	137,5	29 0	3	275
(I)	112, 5	9	12, 5	87, 5	55 0	2	87,5	162, 5	9	12, 5	137,5	55 0	2	137, 5

	375	3	12, 5	87, 5	15 0	3	350	575	3	12, 5	137,5	18 6	3	550
	725	3	12, 5	87, 5	15 0	9	700	825	3	12, 5	100	18 6	9	800
3 P	375	5	12, 5	87, 5	24 5	5	350	425	5	12, 5	100	34 3	5	400
+ N (II)	200	9	12, 5	87, 5	55 0	3	175	300	9	12, 5	137,5	55 0	3	275
	375	5	12, 5	87, 5	29 0	5	350	575	5	12, 5	137,5	29	5	550

WARNING

- nVent products shall be installed and used only as indicated in nVent product instruction sheets and training materials. Instruction sheets are available at <u>www.nVent.com</u> and from your nVent customer service representative.
- 2. nVent products must never be used for a purpose other than the purpose for which they were designed or in a manner that exceeds specified load ratings.

- 3. All instructions must be completely followed to ensure proper and safe installation and performance.
- 4. Improper installation, misuse, misapplication or other failure to completely follow nVent's instructions and warnings may cause product malfunction, property damage, serious bodily injury and/or death, and void your warranty.

SAFETY INSTRUCTIONS: All governing codes and regulations and those required by the job site must be observed. Always use appropriate safety equipment such as eye protection, hard hat, and gloves as appropriate to the application.

nVent, nVent CADDY, nVent ERICO Cadweld, nVent ERICO Critec, nVent ERICO, nVent ERIFLEX, and nVent LENTON are owned by nVent or its global affiliates. All other trademarks are the property of their respective owners. nVent reserves the right to change specifications without prior notice.

TECHNICAL SUPPORT:

www.nVent.com



Documents / Resources



nVent FLEXCOND50 Eriflex Flexbus Supports and Bracing System [pdf] Instruction Manual FLEXCOND50 Eriflex Flexbus Supports and Bracing System, FLEXCOND50, Eriflex Flexbus Supports and Bracing System, Supports and Bracing System, Supports and Bracing System, Bracing System



nVent FLEXCOND50 Eriflex Flexbus Supports And Bracing System [pdf] Instructions FLEXCOND50 Eriflex Flexbus Supports And Bracing System, FLEXCOND50, Eriflex Flexbus Supports And Bracing System, Bracing System

References

- * The Future of Connection and Protection | nVent
- * The Future of Connection and Protection | nVent

Manuals+,