





nVent VARISTAR CP Single Point Locking Door User Manual

[Home](#) » [nVent](#) » nVent VARISTAR CP Single Point Locking Door User Manual 



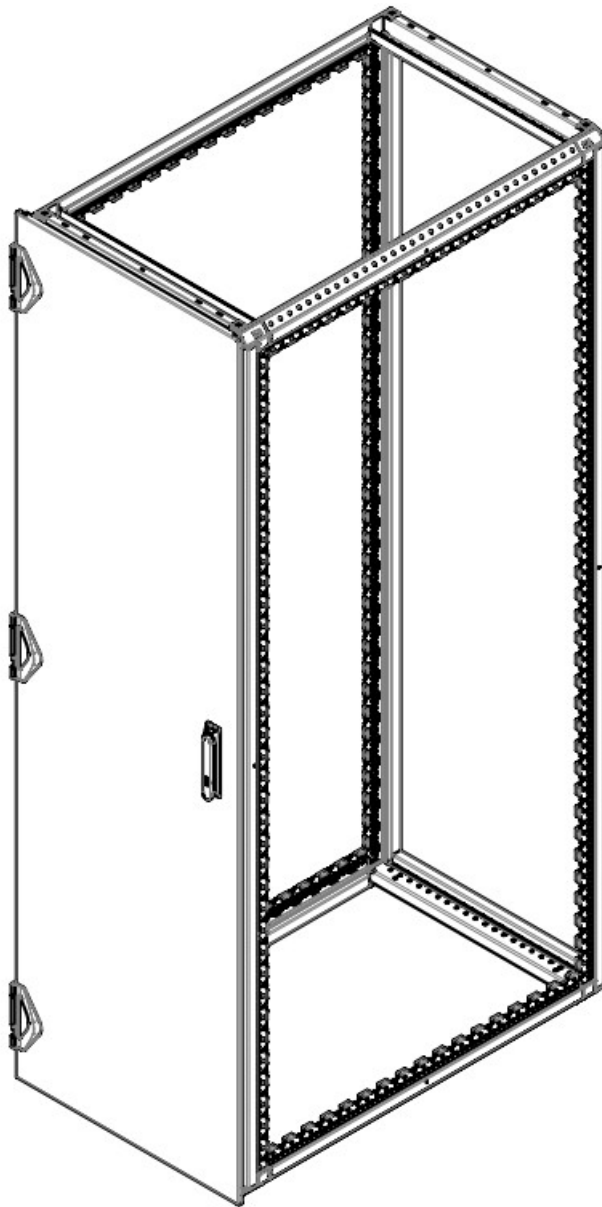

Left hinged page 2-3
User Manual
VARISTAR CP
Single point locking door

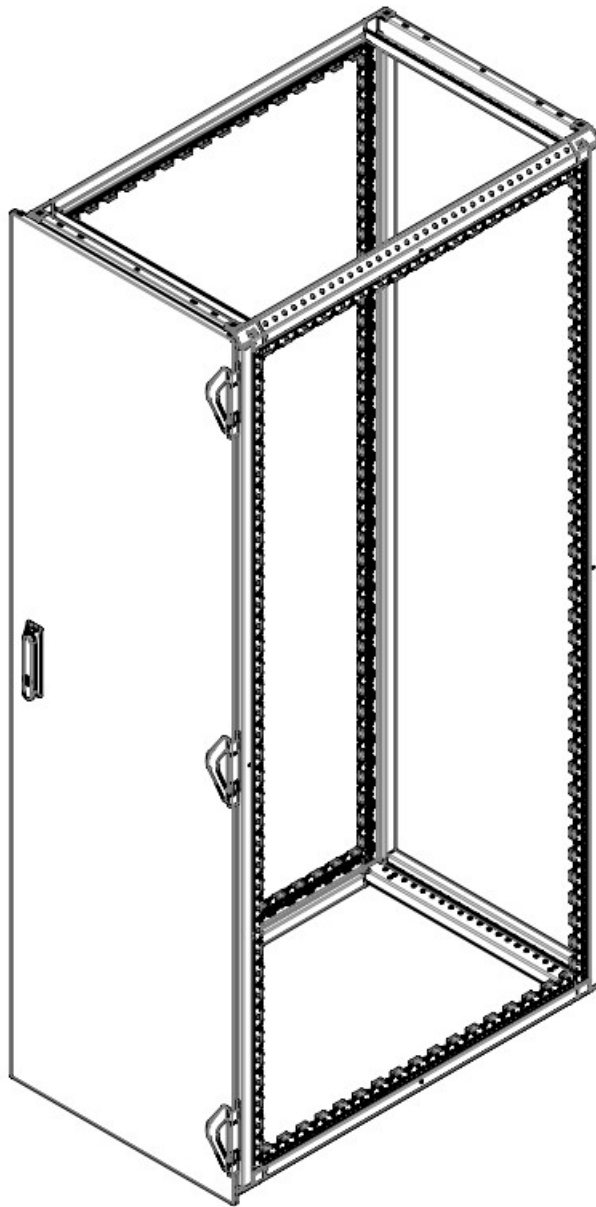

Right hinged page 3-4

Contents

- [1 Safety:](#)
- [2 VARISTAR CP Single Point Locking Door](#)
- [3 Documents / Resources](#)
 - [3.1 References](#)
- [4 Related Posts](#)

Safety:

At least two persons are required to install or remove equipment or components which weight more than 25 kg. Tightening torques are given with a tolerance of $\pm 15\%$ unless otherwise stated.

VARISTAR CP Single Point Locking Door

Middle hinge only for height ≥ 1800



1 (2x H<1800)
(3x H ≥ 1800)






2 (4x H<1800)
(6x H ≥ 1800)




3 (1x)

1

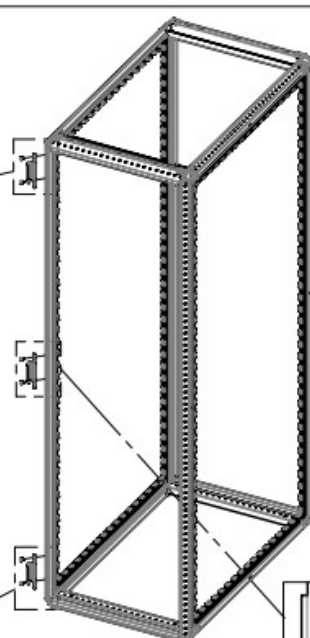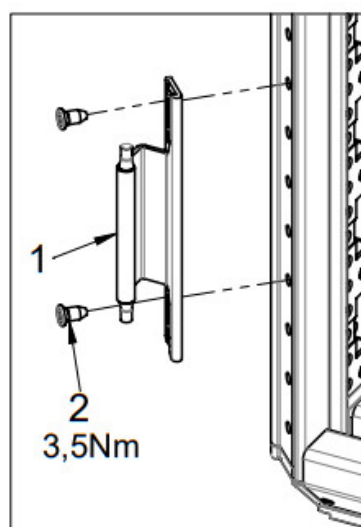
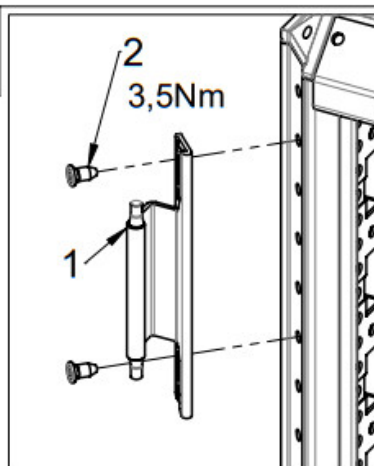


Only for height ≥ 1800

Marking

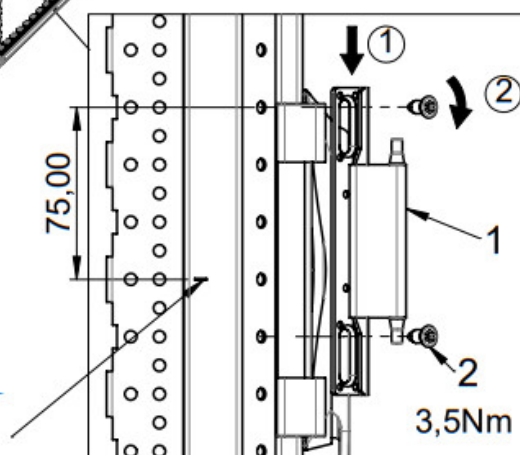


2


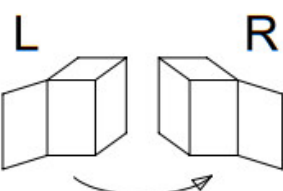
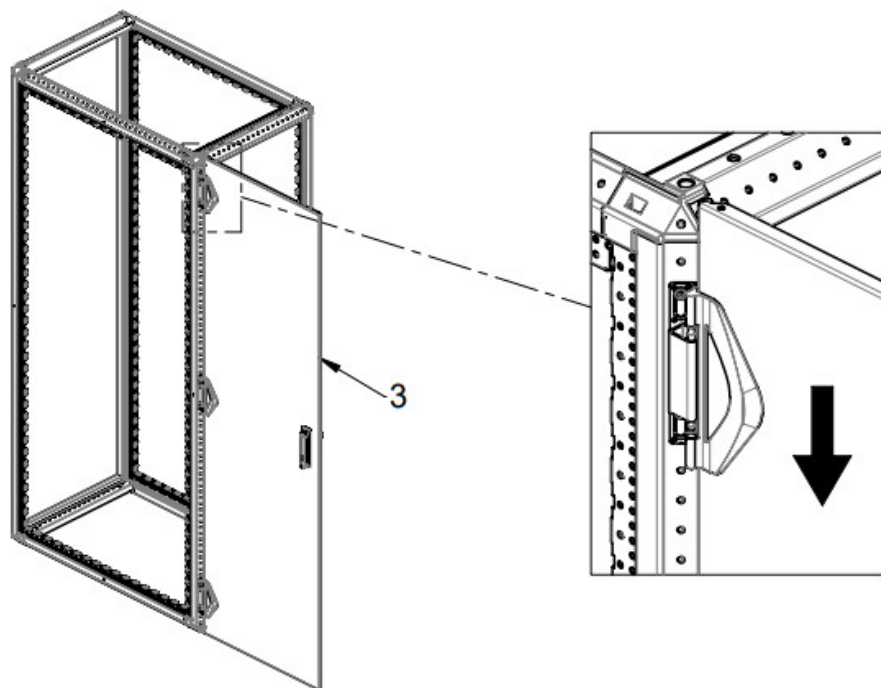



1


Only for height ≥ 1800

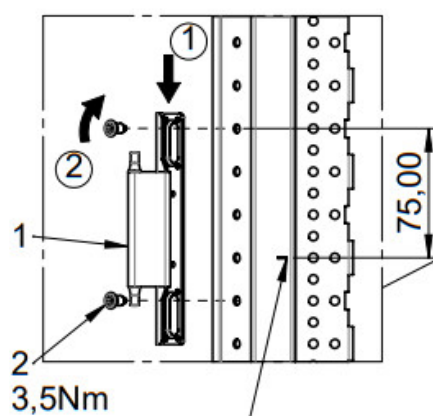


Marking

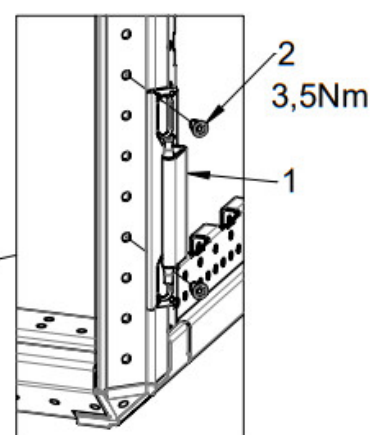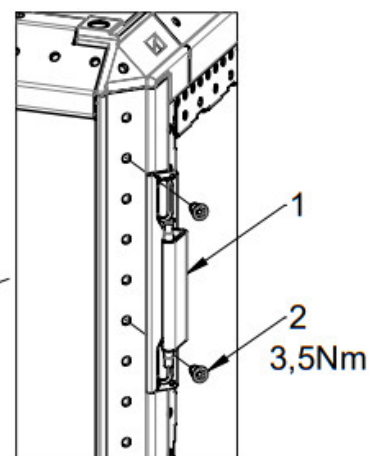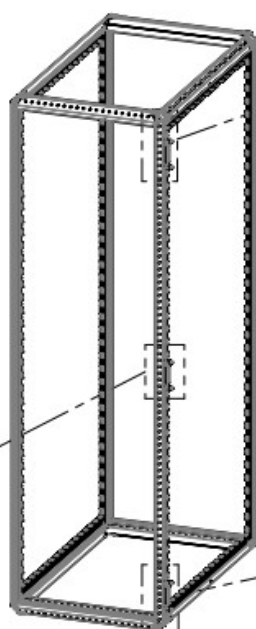

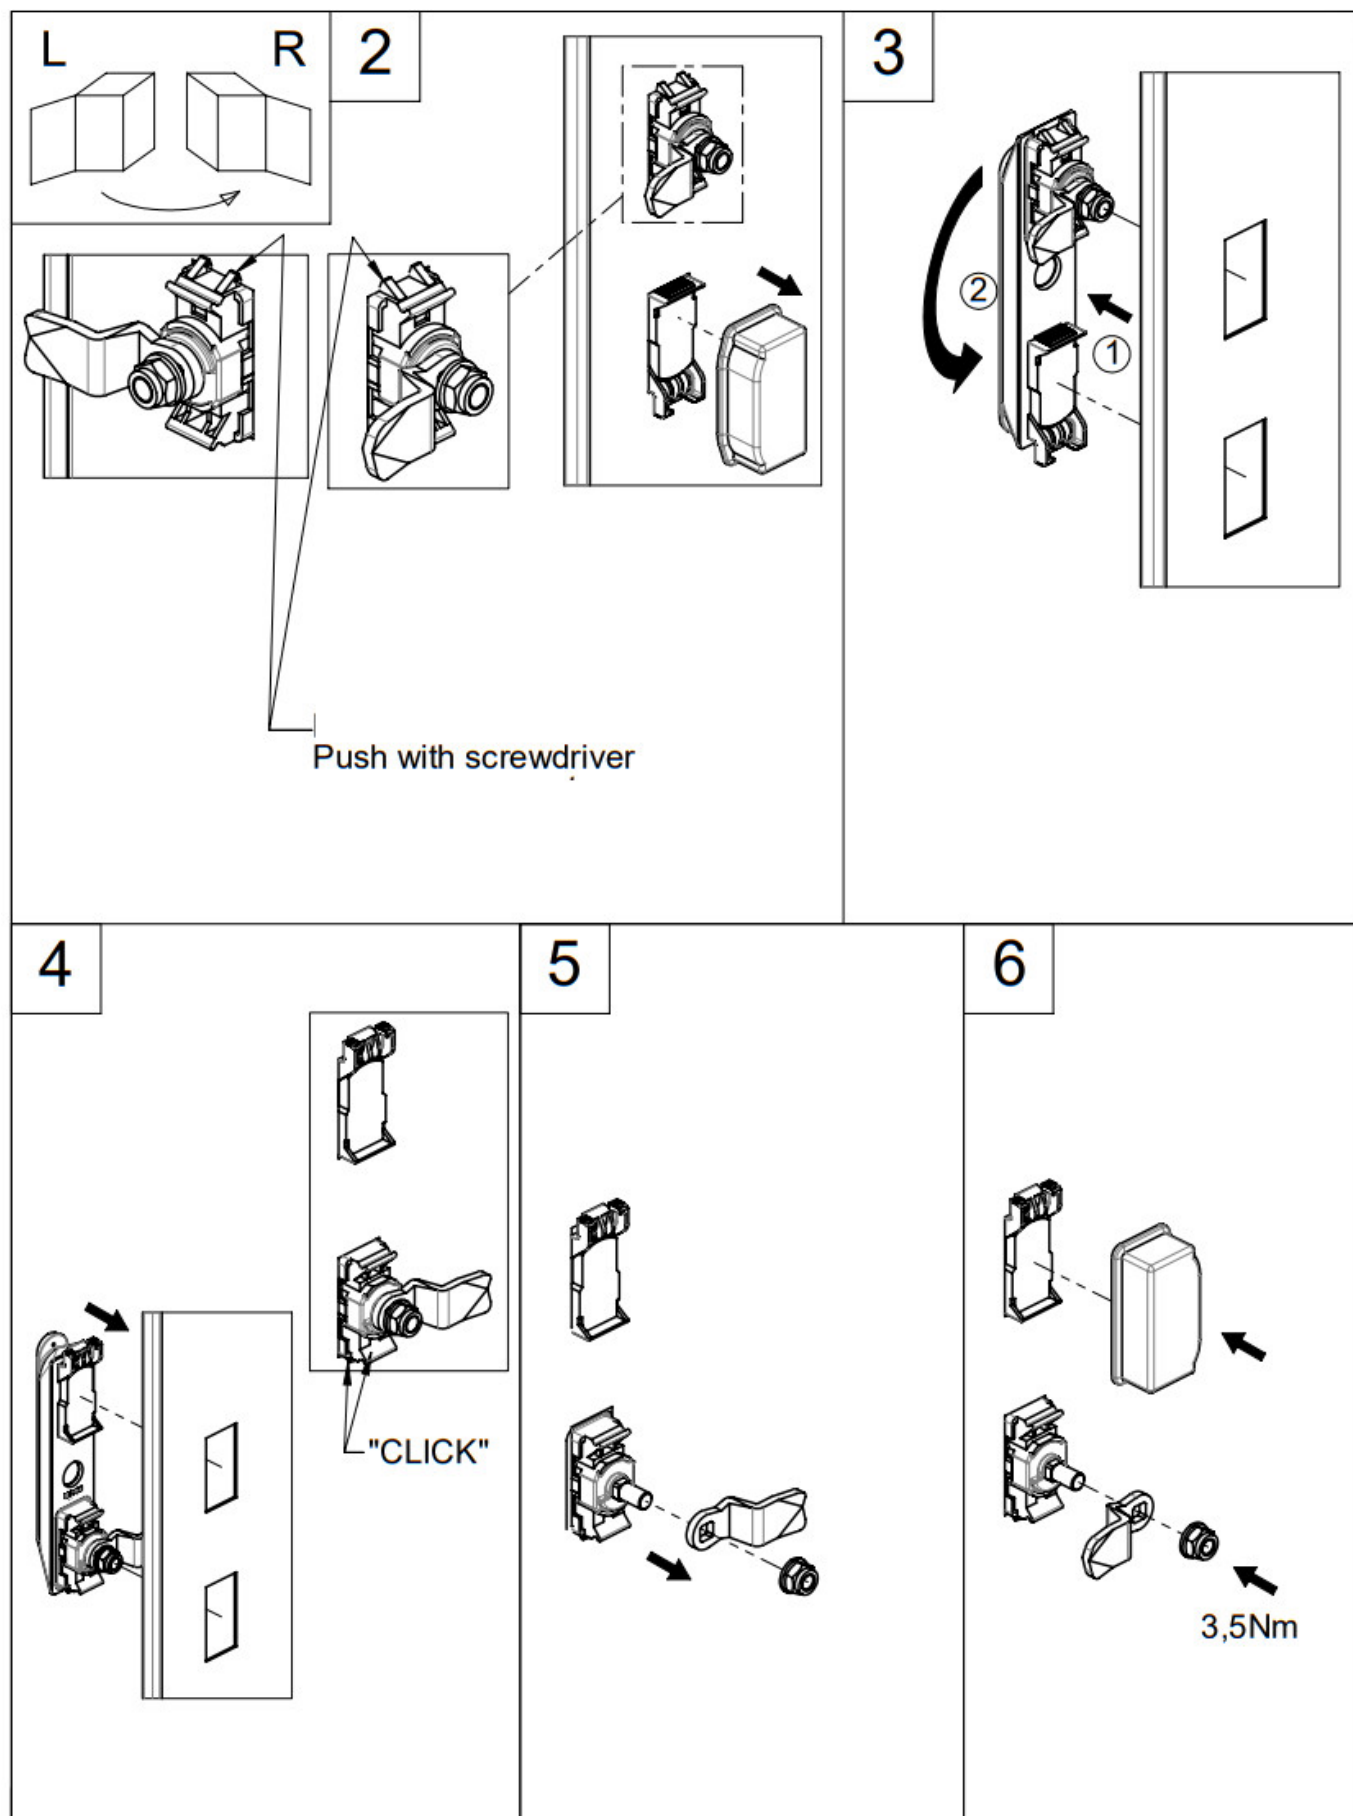


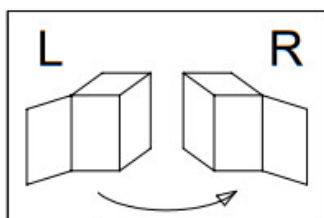

7

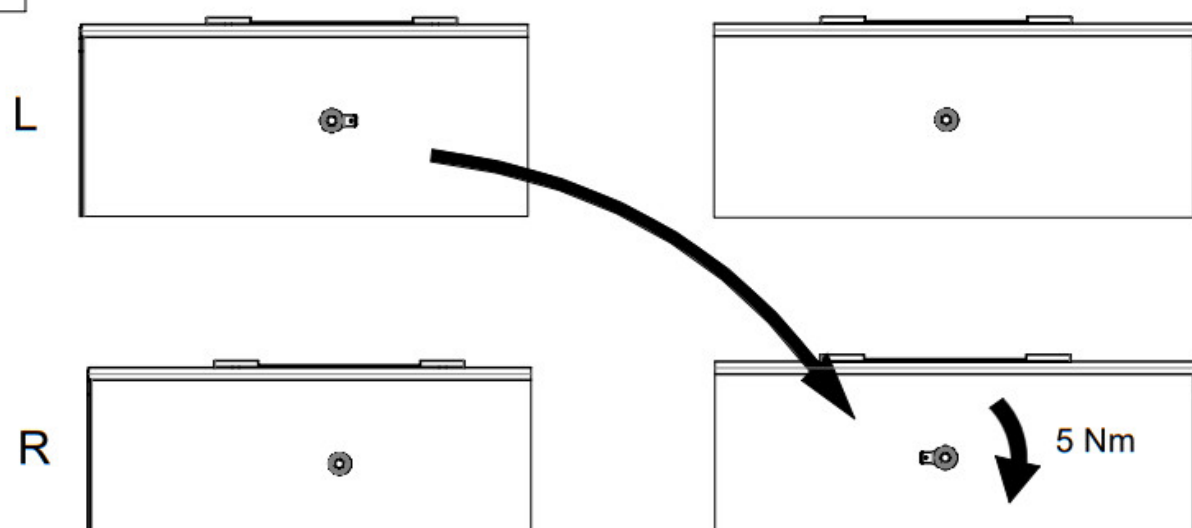


8

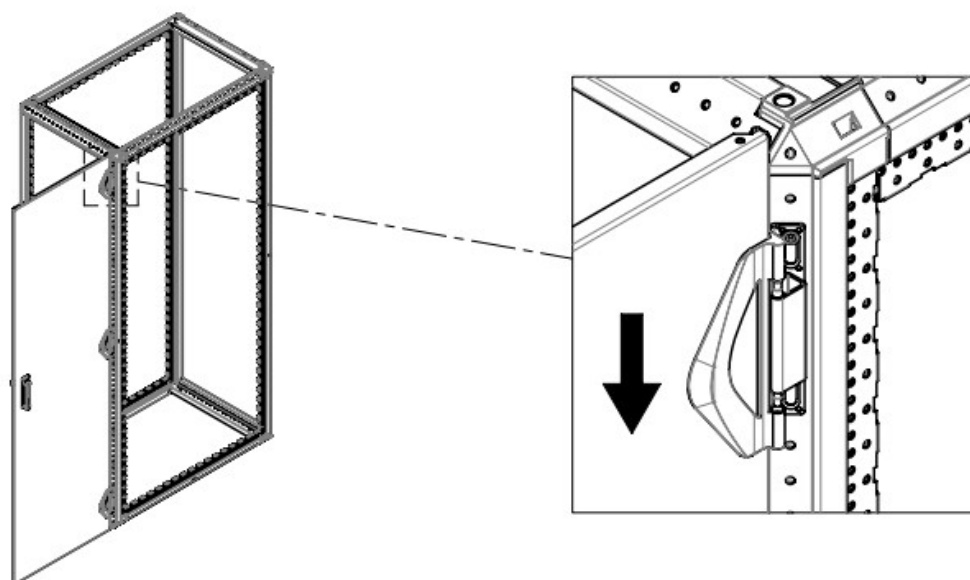

nvent

Documents / Resources

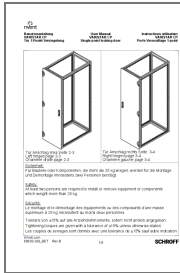

[nVent VARISTAR CP Single Point Locking Door](#) [pdf] User Manual
60630-298_BET_01_B, VARISTAR CP Single Point Locking Door, VARISTAR CP, VARISTAR C
P Locking Door, Single Point Locking Door, Locking Door, Single Point Door, Door

References

- 🌟 [The Future of Connection and Protection | nVent](#)
- 🌟 [The Future of Connection and Protection | nVent](#)