



Home » NYXI » NYXI Hyperion 2 Wireless Controller User Guide 📆

Contents [hide]

- 1 NYXI Hyperion 2 Wireless Controller
- 2 Packaging Contents
- 3 Product Specifications
- 4 Compatibility
- 5 For use with SWITCH platform
- 6 Controller Calibration Function
- 7 Ambient RGB Indicator Light
- 8 TURBO Function Settings
- 9 Sleep Function
- 10 Restore Settings
- 11 APP Download Instructions
- 12 Documents / Resources
 - 12.1 References



NYXI Hyperion 2 Wireless Controller



Packaging Contents

- Hyperion 2 controller"1,
- Instruction Manual*1,





Product Specifications

• Product Model: NJ12

• **Product Name:** Hyperion 2 Wireless Controller

• Lithium Battery Capacity:

• Left Controller: 500mAh

• Right Controller: 500mAh

• Charging Voltage: 5V

• Charging Current:

Left Controller: 220mARight Controller: 220mA

• Product Size:

Left Controller: Approximately 51*104*46mm


• Right Controller: Approximately 51*104*46mm

• Product Weight:

 $_{\circ}$ Left Controller: Approximately 80g


Right Controller: Approximately 80g

Compatibility

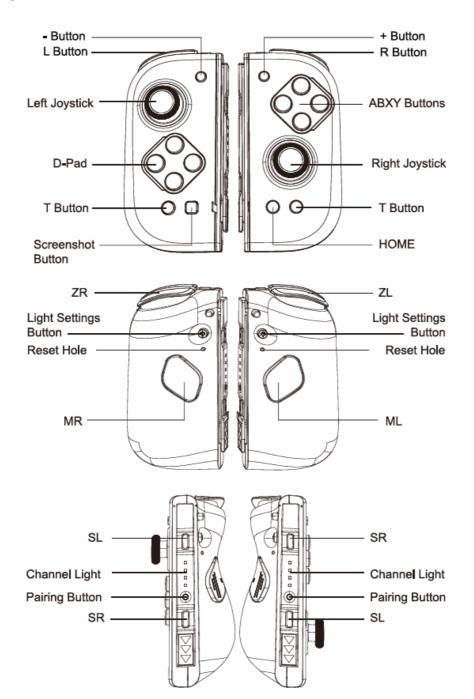

For use with SWITCH platform

1. Left and right controllers connect to the SWITCH console via a slide rail.

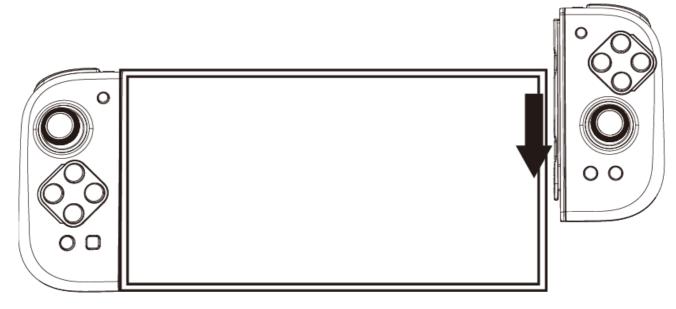

2. Controllers can be used separately

- 1. On the SWITCH main interface, click: Controller —-I' Change Grip/Order 2.2 When the controller is off, long-press the [Pairing Button] for 3 seconds, the channel indicator light will flash rapidly, entering pairing mode.
- 2. After 3-5 seconds, the corresponding channel indicator light will stay on, indicating a successful connection.



3. Wake Up Controller

- Left Controller Press the [Screenshot Button].
- Right Controller Press the [HOME] button to wake up the controller.

4. Wake Up Console

 When the controller is connected to the SWITCH device and the SWITCH device is in sleep mode, press the [HOME] button on the right controller to reconnect and wake up the SWITCH console.

Controller Calibration Function

 When the controller has joystick or motion sensor abnormalities, calibration can be performed.

1. When the controller is powered on:

- Long press [T] and [-] on the left controller for 3 seconds to enter calibration mode.
- Long press [I] and[+] on the right controller for 3 seconds to enter calibration mode.
- When the controller enters calibration mode, the RGB light effect (red/blue)
 will flash alternately.
- 2. Maximum rotation of the left joystick/right joystick: 2-3 turns
- 3. After placing the controller on a level surface:
 - Press[-] on the left controller / Press [+] on the right controller to complete calibration.

Ambient RGB Indicator Light

RGB Light Effect Switching	Short press the [Light Button] on the back of the controller to switch light effects.	Rainbow (default) – Always On - Breathing - Off	
RGB Light Color	Left Controller: [Light Button] and [Left Joystick Left/Right]	Effective in Always On/Breathing mode	
Adjustment	Right Controller: [Light Button] and [Right Joystick Left/Right]		
RGB Light Brightness	Left Controller: [Light Button] and [Left Joystick Up/Down]	Five levels of brightness adjustable	
Adjustment	Right Controller: [Light Button] and [Right Joystick Up/Down]	Off - 20% - 50% - 80% (default) - 100%	

TURBO Function Settings


Left Controller [T] button sets left controller rapid fire, right controller [T] button sets right controller rapid fire.

1. Configurable Function Keys

• Left Controller: D-Pad (Up, Down, Left, Right), L, ZL, L3

• Right Controller: A, B, X, Y, R, ZR, R3

2. Hold [Function Key] and [1] button to set the function key for rapid fire

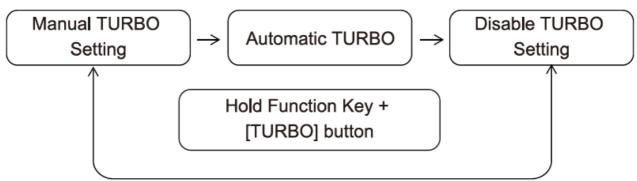

3. TURBO Clear

 Hold [T] and [-] buttons for 1 second to cancel all rapid fire functions on the left controller. Hold [Tl and [+] buttons for 1 second to cancel all TURBO functions on the right controller.

4. TURBO Speed Adjustment

T Hold [T]+ move the left joystick (right joystick) left or right to adjust speed.
 TURBO Speed: Slow (8 times/second) – Medium (16 times/second) – Fast (21 times/second).

Programming Settings

- When programming via APP, a single controller can set dual controller key mappings.
- Programmable keys through controller macro programming:
- Left Controller: Left Joystick (Up, Down, Left, Right), D-Pad (Up, Down, Left, Right),
 L, ZL, -, L3
- Right Controller: Right Joystick (Up, Down, Left, Right), A, B, X, Y, R, ZR, +, R3

1. Macro Programming Steps

- For programming the right controller:
- Long press [TI and [MR] buttons for 3 seconds, the RGB green light stays on, entering macro definition programming function.
- Input the function keys to be mapped, such as B, X, Y, and ZR.
- After inputting, press the [MR] button to exit programming mode; the green light goes out, and the RGB state is restored, ending macro programming.
- Pressing [MR] will trigger the programmed action.
- A maximum of 21 function keys can be mapped in one macro programming session.

2. Macro Programming Clear

- Long press [TI and [ML]/[MR] buttons for 3 seconds, the RGB green light stays on, entering programming.
- Press the [ML]/[MR] button on the single controller once to successfully clear the programmed keys.

3. Macro Programming Rapid Fire On/Off

• Short-press [T] and [ML]/[MR] buttons for 1 second, the corresponding controller's RGB light will flash red and then return to the original RGB light.

Motor Vibration Settings

- 1. Four levels of vibration settings: Off, Weak, Medium (default), Strong.
- 2. Motor Vibration Settings:
- Four levels of vibration settings: Off, Weak, Medium (default), Strong. Vibration Level Settings:
- Left Controller: Press [T] and [Left Joystick Up/Down] to adjust intensity. Right Controller: Press [T] and [Right Joystick Up/Down] to adjust intensity. Vibration cycle: Medium (default) – Strong – Weak – Off
- When vibration is off, RGB (red) flashes once with no vibration.
- When vibration is weak, RGB (red) flashes once with low vibration.
- When vibration is medium, RGB (red) flashes once with medium vibration. When vibration is strong, RGB (red) flashes once with high vibration.

Sleep Function

- 1. Manual Sleep: Press the [Pairing Button] to disconnect the controller and enter sleep mode.
- 2. In the initial pairing state, if there is no connection for 2 minutes and 30 seconds, it will enter sleep mode.
- 3. In working state, if there are no button presses or joystick movements for 5 minutes, the controller will enter sleep mode.
- 4. In sleep mode, press the [HOME] button on the controller to reconnect and wake up the SWITCH console.

Charging Function

Charging Power

- 1. Charge through the SWITCH console.
- 2. Charge through the controller grip.
 - Connect the controller grip using a standard USB 5V voltage data cable to charge the controller.

Charging Indicator

- 1. When charging with the controller off, all channel indicator lights flash slowly, and after fully charged, all channel indicator lights go out.
- 2. When the controller is in working state: The current mode's channel indicator light flashes slowly, and after fully charged, the channel indicator light stays on.

Low Battery Alarm

• When the controller battery level is below 30%, the RGB light will flash. When the controller battery level is below 20%, the RGB light goes out, and the channel light flashes.

Reset Function

 When the controller experiences functional confusion, freezing, or other abnormalities, press the reset hole switch on the back of the controller to perform a reset operation, and then reconnect the controller.

Restore Settings

- Long-press press reset button for 10 seconds, the controller will vibrate once.
- Perform a reset operation, restoring rapid fire, vibration, and programming to default settings.

APP Download Instructions

• Supports downloading "Keylinker" on iOS and Android, APP connection allows for programming and upgrade functions, "KeyLinker" APP download QR code.



Documents / Resources



NYXI Hyperion 2 Wireless Controller [pdf] User Guide

Hyperion 2, Wizard, Hyperion, Chaos Pro, Hyperion 2 Wireless Controller, Hyperion 2, Wireless Controller, Controller

References

- User Manual
 - Chaos Pro, controller, Hyperion, Hyperion 2, Hyperion 2 Wireless Controller, NYXI, Wireless Controller,
- NYXI WIZARD

Leave a comment

Your email address will not be published. Required fields are marked*

Comment*

Name

Email

Website

Г	Save my name.	email, and	website in	this	browser :	for the	next time	comment.
---	---------------	------------	------------	------	-----------	---------	-----------	----------

Post Comment

Search:

e.g. whirlpool wrf535swhz

Search

Manuals+ | Upload | Deep Search | Privacy Policy | @manuals.plus | YouTube

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.