



NYXI SP04 Bluetooth Gamecube Controller Instruction Manual

[Home](#) » [NYXI](#) » NYXI SP04 Bluetooth Gamecube Controller Instruction Manual 



Contents

- 1 SP04 Bluetooth Gamecube Controller**
- 2 Package Contents**
- 3 Product Specifications**
- 4 Android**
- 5 iOS**
- 6 GameCube**
- 7 Turbo Function**
- 8 Programmable back button function**
- 9 Battery Status**
- 10 Reset Function**
- 11 Documents / Resources**
 - 11.1 References**

SP04 Bluetooth Gamecube Controller

WARRIOR BLUETOOTH CONTROLLER For NGC/NS/Wii/Windows

Dear Gamer,

Thank you for purchasing our product.

Before you use the product, please read the product manual carefully.

Package Contents

- NYXI Warrior Wireless Controllerx1
- USB-Cx2
- Instruction Manualx1
- Replaceable Back Paddle~x1
- Standard Stickx1
- Joystick Ringx2
- Adapterx1



Product Specifications

Brand:	NYXI
Input Voltage:	DC5V
Charging Current:	390mA
Operating Voltage:	3.4-4.2V
Operating Current:	≤ 290mA
Battery Capacity:	900mAh
Bluetooth Transmission Distance:	≤ 10M

First-time Use:

When using the controller for the first time, please charge it using a USB cable and exit “lock mode”.



* Wake-up and sleep mode

* Wake-Up mode (in the status of wireless connection to the console)

Press the Home button to wake up the console from sleep mode.

* **Sleep Mode**

1. When the controller is already turned on, pressing the pairing button will put the controller into sleep mode.
2. When the controller is in pairing mode, if no connection is made within 60 seconds, the controller will automatically enter sleep mode.
3. When connected to the console, if there is no activity for 5 minutes, the controller will go into sleep mode.

NS 

- Required system: NS 3.0.0 or above.
- Pairing is only required for the first time connection
- After the first time pairing, when the NS console is in sleep mode, pressing the Home button on the controller will automatically connect it to the console.

Bluetooth Connection

1. Press the Home button to turn on the controller.
2. Press the controller's pairing button for about 3 seconds to enter its pairing mode, the status LED will blink white rapidly.
3. Go to Switch settings, select "Controllers and Sensors" and then "Change Grip/Order" and wait for the connection to be made.
4. Once connected successfully, the status LED will remain solid white.



Wired Connection

- After the wired connection is successful, pressing any controller button can wake up the controller.
- After the wired connection, the controller can automatically connect to the Switch via Bluetooth even if the USB cable is disconnected.

Connect the controller to the Switch via a USB cable and wait for it to be recognized by the system before starting to play.

Windows

* Required system: Win10 or above.

Wireless Connection

1. Connect the adapter to the computer using a short USB cable and press the adapter's pairing button for 3 seconds to enter its pairing mode.
2. Press the controller's pairing button for 3 seconds to enter its pairing mode and wait for connecting. The status LED will blink blue rapidly.
3. Once connected successfully, both the controller's status LED and the adapter's pairing button will remain solid white.

Bluetooth Connection

1. Press the pairing button and the X button at the same time until the status LED blinks blue.
2. Open the Windows device's Bluetooth settings, search for and discover [Xbox Wireless Controller], and click to connect.
3. Once connected successfully, the status LED will remain solid blue.



Wired Connection

Connect the controller to the computer via a USB cable. The status LED will remain solid blue. Wait for the system to recognize the controller before starting to play.

Android

* Required system: Android10.00 or above

Bluetooth Connection

1. Press the pairing button and the A button at the same time until the status LED blinks green.
2. Open the Android device's Bluetooth settings and turn it on, pairing with [Gamepad], and wait for the connection.
3. Once connected successfully, the status LED on the controller will remain solid green.



Wired Connection


Connect the controller to the Android device using a USB cable. The status LED will remain solid green. Wait for the system to recognize the controller before starting to play.

iOS

* Required system: iOS14 or above

Bluetooth Connection


1. Press the pairing button and the Y button simultaneously until the status LED blinks purple.
2. Open the iOS device's Bluetooth settings and turn it on, pairing with [Xbox Wireless Controller], then tap to connect. Wait for the connection.
3. Once connected successfully, the status LED will remain solid purple.

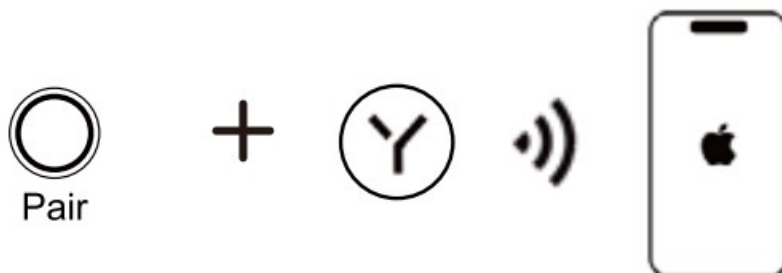

GameCube

Wireless Connection

1. Connect the adapter to the GameCube console and press the adapter's pairing button for 3 seconds until it starts blinking white.
2. Press the pairing button on the controller for 3 seconds until the status LED blinks white. Wait for the windows device to recognize the controller before starting to play.
3. Once connected successfully, both the status LED on the controller and the Home button on the adapter will remain solid white.

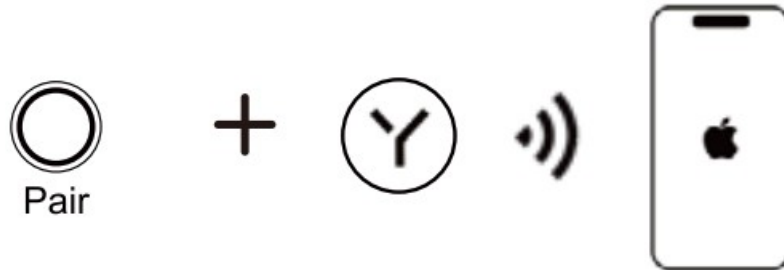

Wireless Connection

1. Connect the video cable of the Wii console to the TV, plug in the original adapter, power on, and insert the game disc into the console.
2. After entering the game, unplug the original adapter, and plug in the NYXI adapter at the top of the Wii console.
3. When pairing the controller with the adapter for the first time, press the adapter's pairing button for 3 seconds until it blinks white, then wait for the adapter and controller to pair.
4. Press the controller's pairing button for 3 seconds until the status LED blinks white. Once connected successfully, the status LED and the adapter's pairing button will stay solid white.
5. For subsequent connections, simply press the HOME button on the controller to reconnect with the adapter instantly.

Turbo Function

- Supported buttons for Turbo function: A, B, X, Y, L, R, ZL, ZR, D-pad
- Turbo function settings persist even after powering off, requiring manual clearing when necessary.
- Quickly clear Turbo function: Press and hold the Turbo button for 5 seconds, the controller will vibrate to indicate that all Turbo function settings have been successfully cleared.

Turbo Mode

1. Turn on: Hold the button you'd like to assign the Turbo function and press the Turbo button to enable Turbo mode, indicated by rapid blinking of the Turbo status LED.
2. Turn off: Hold the button you'd like to deactivate the Turbo function and press the Turbo button twice to disable Turbo mode, indicated by the Turbo status LED turning off.

Auto Turbo Mode

1. Hold the button you'd like to assign the Turbo function and press the Turbo button twice to enable auto Turbo

mode, indicated by rapid blinking of the Turbo status LED.

2. Hold the button you'd like to deactivate the Turbo function and press the Turbo button to disable auto Turbo mode, indicated by the Turbo status LED turning off.

Speed Adjustment

1. The Turbo speed can be set to Fast, Medium, or Slow, with Medium being the default setting. The blinking frequency of the Turbo status LED corresponds to the speed of the turbo.
2. To adjust the Turbo speed, hold down the Turbo button and simultaneously tilt the right joystick up or down. Tilt up to increase the speed and tilt down to decrease the speed.

Programmable back button function

* Supported buttons for programmable function

A,B, X, Y, L, R, ZL, ZR, L3, R3, D-pad, -, +

Setup

1. Hold the Setting button and press the back button (FL/FR) to enable customization mode, indicated by rapid blinking of the FL/FR status LED.
2. Input the button you'd like to set programming, and press the setup button again, and the FL/FR status LED will remain solid blue.

Clearing settings

1. Hold Setting button and press the back button (FL/FR) for seconds. After releasing, the FL/FR status LED blinks slowly;
2. Press the Setting button again to clear programmable function, the FL/FR status LED will remain solid white.
3. Quickly clear the programmable function: hold the Setting button for 3 seconds, and the joystick will vibrate to indicate that all the programmable function have been cleared successfully.

Battery Status

Status	LED indicator
Low Battery	Green light flashing
Charging	Green light flashing
Fully Charged	Green light off when not connected Solid green light when connected

Reset Function

In case of controller malfunction, perform a reset by holding down the Home button for 5 seconds.

WARNING


- Contains small parts. Please keep out of reach of children under 3 years old.

- Avoid using the product near sources of fire.
- Do not disassemble or modify the product yourself.
- Do not expose the product to damp or dusty environments.
- Do not use the product for purposes other than its ntended use.
- Follow local regulations for proper disposal of the product and its components; do not dispose of them as household waste.

If you have any quest ons or need assistance, please contact NYXI's support team at support@nyxigame.com.



Documents / Resources

 <p>WARRIOR BLUETOOTH CONTROLLER For NGC / NS / Wii / Windows</p>	<p>NYXI SP04 Bluetooth Gamecube Controller [pdf] Instruction Manual SP04 Bluetooth Game cube Controller, SP04, Bluetooth Game cube Controller, Game cube Co ntroller, Controller</p>
---	--

References

- [User Manual](#)

Manuals+. Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.