



OBH NORDICA TYPE 7737 Blender Sharp Mix Instruction Manual

[Home](#) » [OBH NORDICA](#) » OBH NORDICA TYPE 7737 Blender Sharp Mix Instruction Manual 

Contents


- [1 OBH NORDICA TYPE 7737 Blender Sharp Mix Instruction Manual](#)
- [2 Safety instructions](#)
- [3 Before use](#)
- [4 Use](#)
- [5 Programmes](#)
- [6 Smoothie](#)
- [7 ICE CRUSH](#)
- [8 Important!](#)
- [9 PULSE](#)
- [10 Important!](#)
- [11 Overheating](#)
- [12 Cleaning and maintenance](#)
- [13 IMPORTANT!](#)
- [14 TEFAL – OBH Nordica Group AB](#)
- [15 Technical data](#)
- [16 Documents / Resources](#)
 - [16.1 References](#)

OBH NORDICA TYPE 7737 Blender Sharp Mix Instruction Manual



Safety instructions

- Please read the instructions for use carefully before using the appliance for the first time. Save the instructions for use. The manufacturer is not responsible for any use that deviates from the instructions for use.

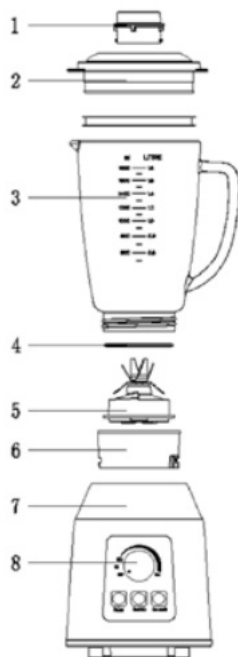

- Check that the appliance's rated voltage corresponds to that of the wall socket. All connection faults void the warranty.
- The appliance is intended for indoor household use only and for use up to a maximum height of 2,000 metres above sea level.
- The warranty becomes void if the commercial use is inappropriate or is not in accordance with the instructions for use.
- Always unplug the appliance from the wall socket if you leave it unattended and before assembly, disassembly or cleaning.
- Beware of the risk of injury in the event of incorrect use of the appliance.

- Do not use the appliance if it is not working properly or is If this is the case, contact an authorised service centre.
- All maintenance, apart from cleaning and everyday care performed by the customer, must be carried out by an authorised service
- Never use this appliance to blend or mix anything other than food
- Do not operate the blender empty or with only dry ingredients in the
- Always pour liquid ingredients into the jug first and then add the other
- Do not use the jug or accessories (depending on the model) as containers for preservation, freezing, cooking or
- In order to prevent overflow, do not fill the jug above the maximum level, when
- Never touch the moving parts of the appliance (blades,).
- The blades for the jug and accessories (depending on the model) are very Handle them with care to prevent injury when pouring, when assembling/ dismantling the blade unit on the jug(depending on the model) or the accessories (depending on the model), and when cleaning.
- Never put your fingers or other objects not intended for this purpose into the jug when the appliance is
- Do not remove the lid and/or the jug until the appliance has come to a complete
- Never wrap the cord around the
- Always use the jug with the lid
- Use the mixer on a flat, clean and dry
- Never immerse the appliance, power cord or plug in water or any other
- Make sure the power cord is out of the reach of children.
- Never leave the power cord near or in contact with the hot parts of the appliance, near a source of heat or sharp edges or inside the jug where it can come into contact with the blades.
- The power cord must not come into contact with the moving parts of the appliance (the blades) when in
- Do not unplug the appliance by pulling on the
- Make sure that long hair, scarves, ties, etc. do not hang over the appliance and its accessories when in
- Do not use the appliance if the power cord or plug is Have the parts replaced by an authorised service centre to avoid any risk.
- For your own safety, you should only use the accessories and the loose attachments that have been adapted for this
- Do not add ingredients with a temperature above 50 °C, and do not run the appliance continuously for more than 3
- Be careful if warm liquid is poured into the blender or mixer, as it may be ejected from the appliance due to sudden
- The appliance is not intended for use by persons (including children) with disabilities (physical, sensory or mental), or by persons who have no experience or knowledge of how to use the appliance. Exceptions can be made if the persons are supervised or if they are instructed in the use of the appliance by someone responsible for their safety.
- Children should be supervised to ensure that they do not play with the
- Do not allow children to use the
- This appliance is intended for domestic use It is not intended for use in the following environments, which are not covered by the warranty:
 - Kitchen areas in shops, offices and other work
 - Staff kitchen areas in shops, offices and other commercial On farms.

- By guests in hotels, motels and other residential- type
- Bed and breakfast-type
- Switch off the appliance and unplug it before changing accessories or touching the parts that move when the appliance is
- Please refer to the instructions for use for information on controlling the speed and the operating time for each
- Please refer to the instructions for use for information on assembling and fitting the accessories to the appliance.
- Please refer to the instructions for use for information on initial cleaning and regular cleaning of the parts that come into contact with food and for general cleaning and maintenance of the
- The appliance together with all accessories is intended solely for the European
- Keep the appliance and power cord out of the reach of
- Children must not play with the appliance. This appliance may be used by persons with disabilities (physical, sensory or mental), or by persons who do not have sufficient experience or knowledge of the use of the appliance, provided that they are supervised or instructed in how the appliance can be used safely and that they fully understand any risks this

NB: These safety instructions are an integral part of the appliance. Please read them carefully before using your new appliance for the first time. They should also be saved for future reference.

Before use

Clean the appliance, jug and lid as per the instructions under “Cleaning and maintenance”. The blade unit is very sharp and must be handled with the utmost care. The blade unit should be removed and washed separately.

Main components (see illustration page 3)

2. Filler cap
3. Lid
4. Blender jug 8 litres
5. Seal (not shown in illustration)
6. Blade unit
7. Lock ring
8. Motor section
9. Switch/speed knob

Use

Do not add ingredients with a temperature above 50 °C, and do not run the appliance continuously for more than 3 minutes.

The blender can be used for blending, chopping, puréeing and mixing, e.g. milkshakes and sauces. You can also crush ice for drinks, etc. Fit the blender jug to the motor section after cleaning by first placing the seal around the blade unit. Then place the blade unit in the base of the blender jug and then screw the lock ring onto the blender jug. Make sure that the appliance is switched off and then place the blender jug on the motor section so that the lock ring fits into the slots on the motor section. Check to ensure that the jug is straight and stable.

The blender motor moves the blade at high speed in order to guarantee thorough mixing. It is important, therefore, that the blender is always placed on a flat, dry surface before it is started. Also check that the blender jug is correctly positioned on the motor section, otherwise the appliance will not start. Remember to place the lid and filler cap on the blender jug before starting the blender. Fill the blender jug with the ingredients to be mixed (never exceed the maximum limit of 1.8 l) and place it on the motor unit. Check that the speed knob is set to “OFF” and

then plug the appliance in. Turn the speed knob to “ON” (indicator lights come on) and then turn to the required speed setting. Mix for a few seconds and then turn the speed knob back to “OFF” and check the consistency. Continue mixing as required.

It is recommended that you try various speeds to work out what is best for the ingredients you are mixing. Never remove the blender jug from the appliance when the motor is running. You can also select one of the preset programmes suitable for the ingredients you are mixing.

Programmes

Turn the switch to “ON” and then press any programme button. The programme begins and the indicator light for the selected programme comes on. Always keep an eye on the mixing process and switch the appliance off (by turning the speed knob to “OFF” or pressing the programme button) if the required results have been achieved before the programme ends automatically. Always unplug the appliance after use. If the appliance is not switched off manually within 3 minutes, the appliance switches off automatically.

Smoothie

Programme suitable for smoothies, etc. The blender works at various speeds alternating for approx. 2 minutes unless it is turned off manually by turning the speed knob to “OFF” or by pressing the programme button.

ICE CRUSH

Ice crushing. Put a maximum of 200 g of ice into the jug. The blender works in pulse intervals for approx. 1 minute unless it is turned off by turning the speed knob to “OFF” or by pressing the programme button.

Important!

Use tepid water to clean the jug after mixing frozen berries or crushing ice, as the cold ingredients will have chilled the jug and water that is too hot may create stress in the glass and so cause it to crack.

PULSE

Use pulse mode for a short time only or for crushing ice. In pulse mode the button must be kept depressed in order for the blender to work. As soon as the button is released, the blender switches off.

Important!

If deep-frozen ingredients (e.g. fruit, berries, vegetables) are to be mixed, they must be mixed immediately upon being put into the glass jug, as they can freeze into a lump that may block the blade. If you wish to add additional ingredients or liquid during use, you can do so. Make sure that the ingredients to be added are not too thick or too heavy for the motor to process. If necessary, add a little liquid through the lid if the motor is struggling or stop the mixing process and scrape the mixture toward the blade using a rubber spatula.

MAKE SURE THAT THE LID AND FILLER CAP ARE BOTH PLACED ON THE JUG BEFORE RESTARTING THE BLENDER! Never remove the glass jug from the appliance when the motor is running.

Overheating

If the appliance’s overheating cut-out is activated and the appliance switches off (before 3 minutes of use): Turn the switch to “OFF” and unplug the appliance. Wait 30 minutes before restarting the appliance.

Cleaning and maintenance

Clean the jug immediately after use.

- Fill the jug with 1 litre of hot water and 2 to 3 drops of washing-up Use only the recommended amount of water and washing-up liquid. Too much washing-up liquid produces more foam, causing the jug to overflow.
- Run the automatic cleaning programme to wash out the
- Unplug the appliance once the programme is
- Remove the
- Stand it on a flat
- Carefully remove the Pour out the water.
- Remove the blade unit + seal and clean them under running water. The blades are extremely sharp and should be handled with care to avoid
- Remember to put the seal back correctly on the blade unit after Take care to ensure that the seal does not come into contact with the blades.
- NB: If the seal is not fitted correctly, the ingredients may leak out of the
- Rinse the inside of the jug and the lid under running These parts can be cleaned in a dishwasher.
- Be careful when cleaning the blades inside the jug and when emptying it as they are The blade unit must be cleaned by hand, as it is not dishwasher safe.
- Clean the motor unit with a damp Wipe it over carefully.

Do not use abrasive cleaning products. Remove any stubborn stains by soaking and rubbing with a soft cloth and mild detergent. Use a damp cloth when cleaning the motor unit. Dry thoroughly before using the appliance again or putting it away.

IMPORTANT!

THE MOTOR SECTION MUST NEVER BE IMMERSSED IN ANY LIQUID!

The conformity according to EN60335 clause 11 was verified by using the following recipe: 720 g Carrots + 1080 ml water blending for 2 minutes.

Environment protection first!

!Your appliance contains valuable materials which can be recovered or recycled.

Ü Leave it at a local civic waste collection point.

Information about your warranty is available at www.obhnordica.com

TEFAL – OBH Nordica Group AB


Löfströms Allé 5
172 66 Sundbyberg
Phone 08-629 25 00 www.obhnordica.com

Technical data

OBH Nordica TYPE 7737 220-240V ~, 50-60 Hz 1000 watt
These instructions are subject to alterations or improvements

Read More About This Manual & Download PDF:

Documents / Resources

	<p>OBH NORDICA TYPE 7737 Blender Sharp Mix [pdf] Instruction Manual TYPE 7737 Blender Sharp Mix, TYPE 7737, Blender Sharp Mix, Sharp Mix, Mix</p>
---	---

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.