



OBZ A11 Bluetooth Label Maker Machine with Tape Instructions

[Home](#) » [OBZ](#) » OBZ A11 Bluetooth Label Maker Machine with Tape Instructions 



OPERATION INSTRUCTION

Contents

- [1 PRODUCT OVERVIEW](#)
- [2 BASIC USE](#)
- [3 PROBLEMS & SOLUTIONS](#)
- [4 WARNINGS](#)
- [5 SPECIFICATIONS](#)
- [6 INDICATOR DESCRIPTION](#)
- [7 Documents / Resources](#)
 - [7.1 References](#)

PRODUCT OVERVIEW



BASIC USE

Step 1

Please charge the label maker before you turn it on for the first using.

Step 2

Open the lid



Step 3

Load the paper with the stickers facing up



Step 4



Please make sure to leave
0.1-0.2 inches of label paper
on the outside

Step 5



Press the power button about 2 seconds to start the printer.

Step 5



↑ Cut

Slide up

Label calibration

***For gap label**

Press the power button once, the label will run out and stay in the gap.

***For continuous label**

Slide up to cut the label outside the slot port to start printing.

1. APP download

Search FlashMini in App Store or Google Play.

Or scan below QR code to download the APP.




<https://qr23.cn/DJPUbZ>

2. Bluetooth connection

- Turn on the device and phone Bluetooth, and then open FlashMini app.


⚠ Please pair in A2°, NOT in setrg.

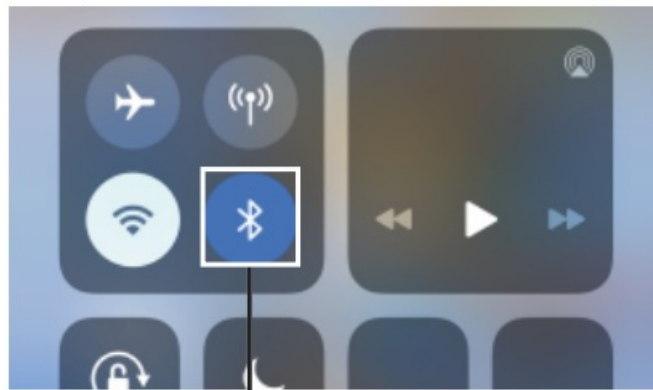


Turn on Bluetooth

- Open the APP
- Click '🔍' to search the device and choose the correct device (e.g. A11_7E7C_BLE).
- Click on correct device, it will successfully connect to the Bluetooth.

Note: If a PIN code is needed, please enter 0000.

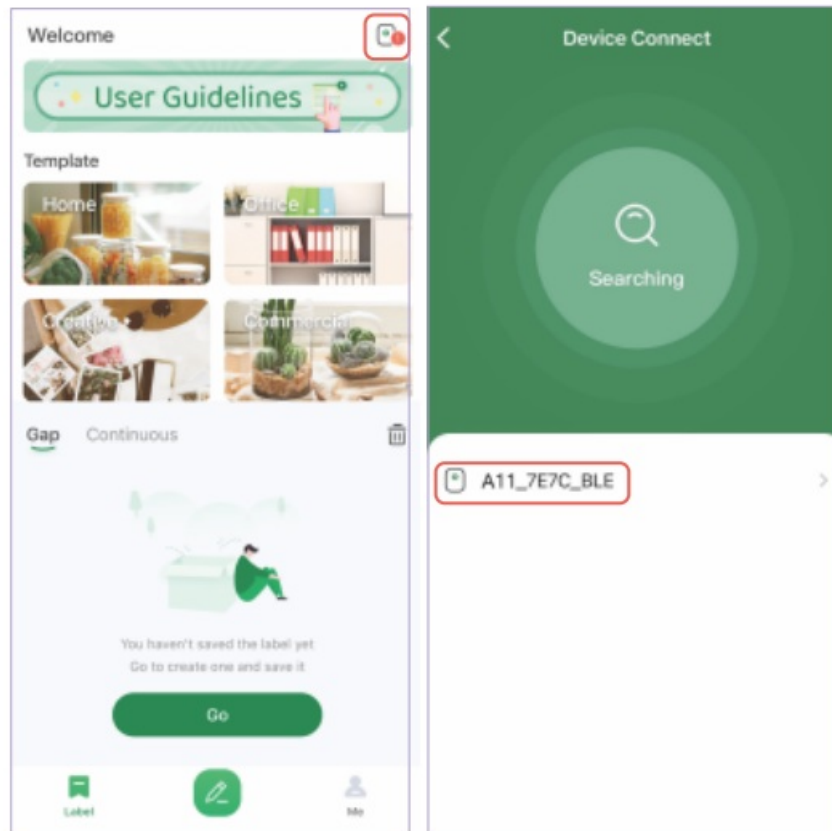


- The color of power indicator will become to blue from green after pairing done.

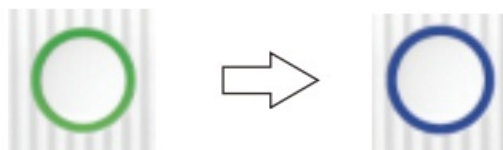

3. Select the right lable / size

If select wrong label paper,the printer can't print all the words

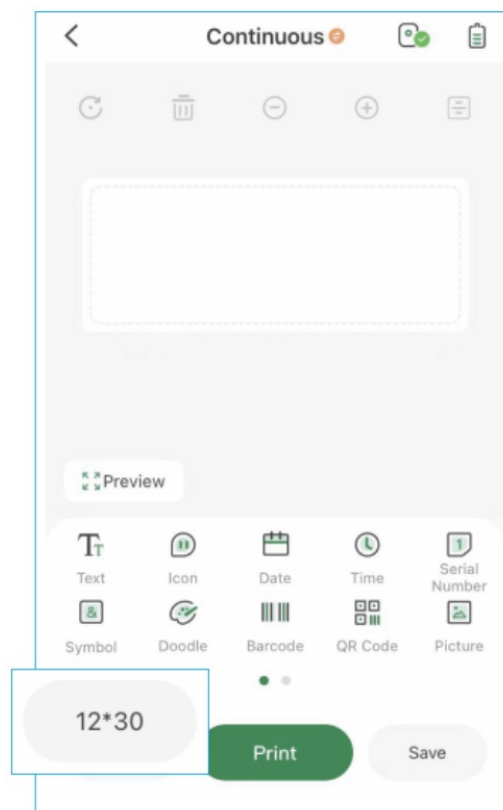

4. Edit


- Click on 'Text' at the lower part of the page, the 'Double click' pops up, then edit labels in the entry bar. Click

'T' to adjust the font size. Click 'OK' to finish the editing.

Then you can adjust the position of the text box.

(if you want to edit the text again, Double click the text box again)

- Click the 'Print' option and set number of copies, then click 'OK'

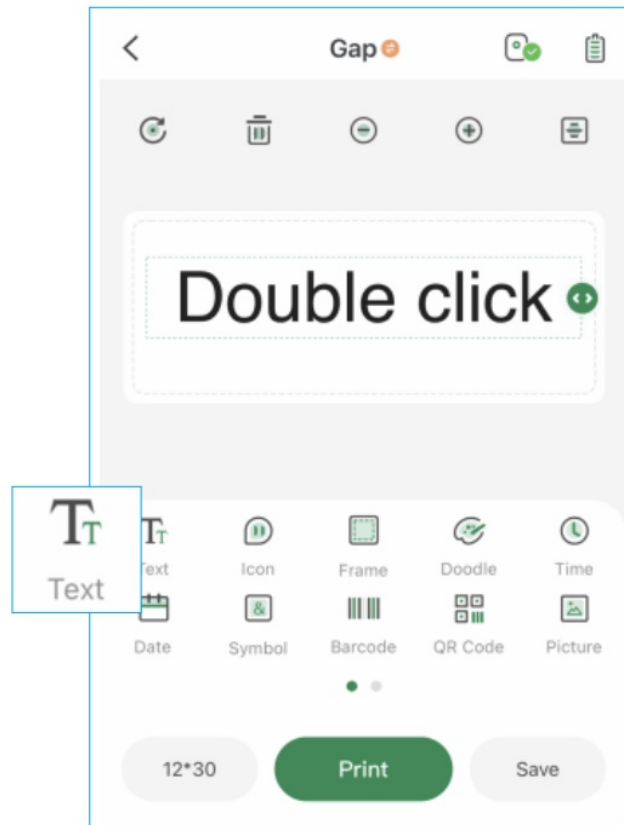

5. Cut paper



PROBLEMS & SOLUTIONS

Question: Why cannot the device be searched by the app?

Answer: (1) Bluetooth responses slowly. Please re-open the app and reboot the device and try to connect again. (2) Please update or re-install the app and try. Or please contact the customer service.

Question: Why does the device work normally but keep printing blank paper?

Answer: (1) It may be because the label paper is laid reversely, please make the label sticker face up. (2) Improperly load the paper without leaving 1-3mm outside the slot port. (3) Residues is sticking on the cutter or feed slot and the label paper fails to be detected. Please clean the dust or residues with an alcohol cotton pad.

Question: What is the reason for the sudden stopping of printing?

Answer. In order to ensure the safety of the label maker, multiple protection modes have been programmed. In the event of 'lack of paper', 'cover open', 'overheat temp' and other issues, the printer will stop printing. Please analyse the problem according to the actual situation.

Question: How can I center the label content when editing?

Answer: When edit text, click T', there are options to align center, left, or right-click to adjust the text position in the text box. In the 'Align' section, the position of the text box on the label paper can be adjusted. At the same time, the text box can be moved with fingers.

Question: Does the label maker support batch printing?How many numbers of labels can be printed in one batch at most?

Answer: The printer supports batch printing. The app currently supports up to 999 labels in a single batch. But taking into account the actual number of label paper of different sizes, the printer can print up to 200 label stickers in a batch.

Question: Why does blank paper come out after printing and the device keeps making a cracking sound?

Answer: (1) No label left outside when loading the label paper will lead to failed paper feeding. Please make sure 0.1-0.2 inch of label paper left outside. (2) The paper has been used up, please replace.

Question: Why it can't print any of the colored labels or cute characters, just the words or icons?

Answer: (1) All the label makers on the market apply thermal printing technology and uses chemically-treated paper that darkens when heated by a thermal print head. (2) Thus, it **ONLY SUPPORTS BLACK PRINTING**. Color options are the labels themselves. The colored labels are just for reference only.

Question: Will the machine be automatically shut down?

Answer: To save power and protect the battery, the printer will automatically shut down after disconnecting Bluetooth or after 15 minutes of non-use of the app.

Question: Why is the Bluetooth suddenly disconnected and fail to be connected for many times?

Answer: It may be because the Bluetooth system crashes. Please reboot the phone and the Bluetooth.

Question: Why does the printout look gray or in a light color?

Answer: (1) The actual number of label printed exceeds the number which is preset. (2) The label used is not our label range. (3) The maker is malfunctioning.

WARNINGS

1. Make sure that the paper bin is clean before using.

If the print head is clogged, it may be damaged during printing. Please use alcohol to clean the paper bin and print head.

2. Turn off the power immediately when it malfunctions.
3. There are complex circuits and devices inside the printer, please do not disassemble the printer without authorization.
4. Charge the battery in a cool and airy room. Do not expose the printer and power adapter to high- temperature and high-humidity environments, or water to avoid short circuits that can cause the battery to heat up, smoke, deform, damage, or even explode. If the power adapter comes into contact with water or other liquid, cut off the power immediately. When you notice smoke or an odor from your printer or power adapter, unplug the power adapter immediately and take care to avoid burns.
5. Do not squeeze or shake the printer and power adapter. Do not remove or modify the power adapter.
It is prohibited to use the power adapter when the power cord is damaged.
6. When unplugging the printer, grab the power adapter. Pulling the power cable will damage the cable.
7. Do not use the printer near flammable products such as gas station and fuel warehouses.
8. Do not use the printer when it is charging or on low battery.

SPECIFICATIONS

Model	All
Printing Method	Thermal
Resolution	203 dpi
Printing Life	50 km
Printing Speed	20 mm/s
Effective Printing width	12 mm
Input	DC 5V, 2A
Battery capacity	1200 mAh
Battery life	>500 circuits
Interface	Type-C
Working Temp	14°F-122°F (-10°C-50°C)
Max Label Loading Width	15mm

INDICATOR DESCRIPTION

Indicator	Description
Green	Power on
	Full charged
	Bluetooth disconnected
Blue	Bluetooth connected
	Normal using
	Printing
Red	Without paper
	Cover opening
	Overheating
	Charging
Red flashing	Low battery

Customer Service Contact Information

We want you to love your purchase, but if you are not completely satisfied, please contact our Customer Service team with any questions you may have.

• **Service Support:**
support@obzshop.com



<https://wa.me/qr/UNKTKXAQIHGKN1>

Documents / Resources



[OBZ A11 Bluetooth Label Maker Machine with Tape](#) [pdf] Instructions

A11 Bluetooth Label Maker Machine with Tape, A11, Bluetooth Label Maker Machine with Tape, Label Maker Machine with Tape, Maker Machine with Tape, Machine with Tape

References

- [User Manual](#)