



Offacy CEK-204 Kettle with Temperature Control User Guide

[Home](#) » [Offacy](#) » Offacy CEK-204 Kettle with Temperature Control User Guide 

Contents

- [1 Offacy CEK-204 Kettle with Temperature Control](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 PRODUCT DIAGRAM](#)
- [5 Package Contents](#)
- [6 OPERATION GUIDE](#)
- [7 Documents / Resources](#)
 - [7.1 References](#)
- [8 Related Posts](#)

Offacy

Offacy CEK-204 Kettle with Temperature Control



Product Information

The Gooseneck Kettle (CEK-204) is a kitchen appliance designed for heating water to specific temperatures. It features a sleek and durable exterior with a handle and a gooseneck spout for easy pouring. The kettle comes with a user manual that provides detailed instructions for safe and efficient usage.

Package Contents

- Gooseneck Kettle (CEK-204)

Important Safety Instructions

- Do not wash the jug exterior under running water.
- Never immerse the jug in water or place it in the dishwasher.
- To prevent electrical hazards, please refer to the cleaning instructions in the user manual.

Product Usage Instructions

Add water to the kettle.

Note: Ensure that you do not exceed the maximum fill line indicated on the kettle.

Turn the knob to adjust the preset temperature to the temperature you need.

Note: Refer to the user manual for temperature settings and guidelines.

1. Press the START button to start the heating process.


2. Once the desired temperature is reached, the machine will beep, indicating that the water is ready.

Note: Use caution when handling the hot kettle and its contents. Always use the handle to pour the water.

For more detailed instructions and safety information, please refer to your user manual.

This Quick Start Guide is designed for first-time use. For safety and more information, refer to your USER MANUAL


PRODUCT DIAGRAM

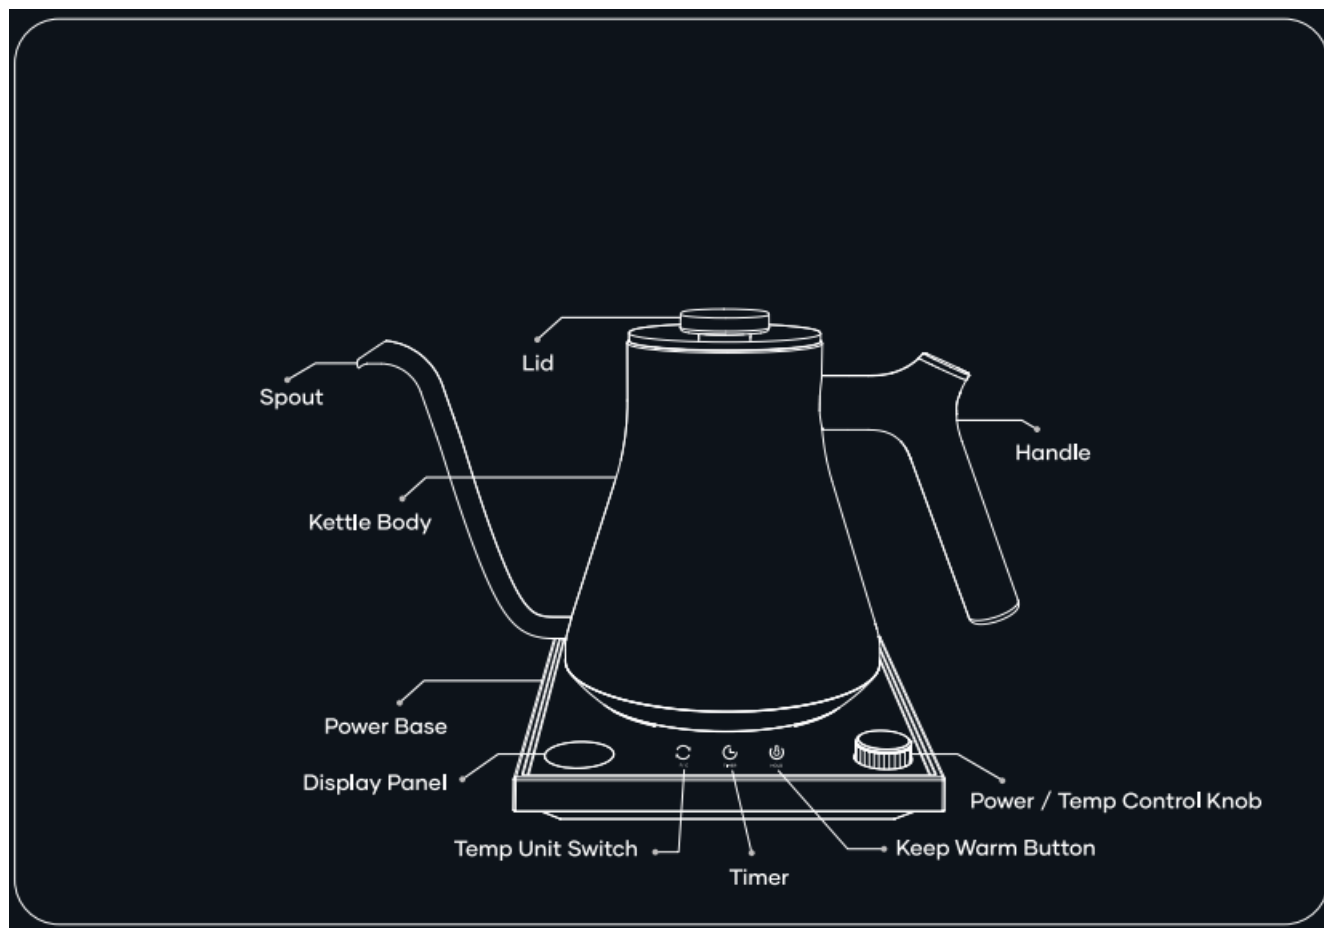

Package Contents

- Gooseneck Kettle × 1
- Quick Start Guide × 1
- Power Base × 1
- Warranty Card × 1

WARNING

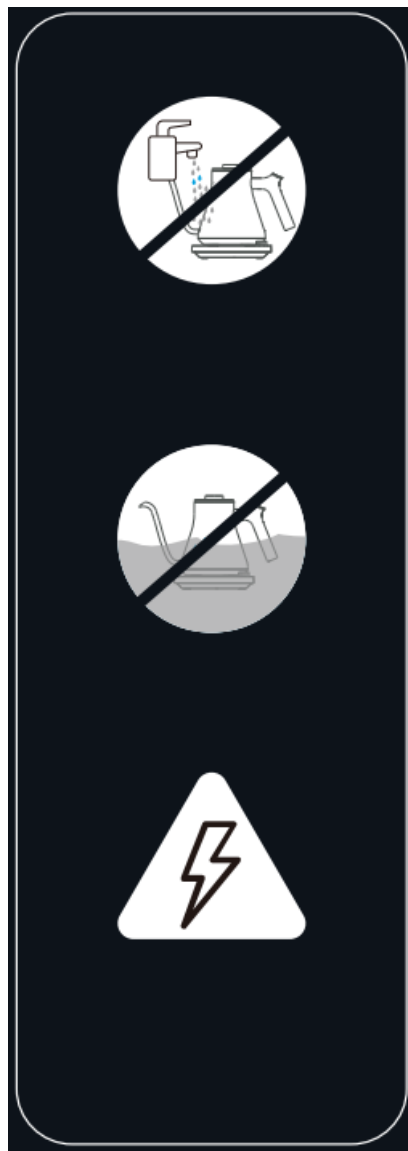

- Do not wash jug exterior under running water.
- Never immerse jug in water or place in dishwasher.
- To prevent an electrical hazard, please refer to the cleaning instructions in the USER MANUAL

OPERATION GUIDE



1. Add water to the kettle.
2. Turn the knob to adjust the preset temperature to the temperature you need.
3. Press the “START” to start.
4. Once the desired temperature is reached, the machine will beep.

NOTE:

Please clean the kettle by boiling water 3 times before using it.

Documents / Resources

	<p>Offacy CEK-204 Kettle with Temperature Control [pdf] User Guide CEK-204 Kettle with Temperature Control, CEK-204, Kettle with Temperature Control, Temperature Control</p>
---	---

References

- [User Manual](#)