

Oilsky M7 MP3 Player Bluetooth 5.0 Built in Speaker



Oilsky M7 MP3 Player Bluetooth 5.0 Built in Speaker User Manual

[Home](#) » [Oilsky](#) » Oilsky M7 MP3 Player Bluetooth 5.0 Built in Speaker User Manual 

Contents

- [1 Oilsky M7 MP3 Player Bluetooth 5.0 Built in Speaker](#)
- [2 Product Usage Instructions](#)
- [3 Instruction of Buttons](#)
- [4 Charge the Player](#)
- [5 Quick Guide](#)
- [6 Main Functions](#)
- [7 Tools](#)
- [8 Support and Troubleshooting](#)
- [9 Specifications](#)
- [10 Documents / Resources](#)
 - [10.1 References](#)

Oilsky

Oilsky M7 MP3 Player Bluetooth 5.0 Built in Speaker



Specifications:

- Model: MP3 PLAYER M7
- Charger: 5V 1A
- Supported Music Formats: MP3, WMA, APE, FLAC, WAV
- Bitrate: MP3 (8Kbps~320Kbps), WMA (20Kbps~499Kbps), APE (800Kbps~1000Kbps), FLAC (1000Kbps~1200Kbps), WAV (32Kbps~384Kbps)
- Sampling Rate: 8MHz~48MHz for all supported formats

Product Usage Instructions

Charge the Player

Ensure to follow these steps to charge your MP3 player:

1. Use only the provided 5V 1A charger for charging.
2. To charge via computer, connect the device using the included charging cable.
3. If the player is not used for an extended period, charge the battery at least once every 2 months.

Quick Guide

Follow these steps for basic operations:

- **Power On/Off:** Hold the power button for about 3 seconds to turn the player on. Repeat the process to turn it off.
- **Returning to Music Interface:** Press the designated button to return to the music playing interface from any other screen.
- **Volume Adjustment:** Use the +/- buttons on the right side to adjust the volume.

Main Functions

Explore the main functions of the MP3 player:

- **Music:** Access different functions such as All Songs, Now Playing/Last Played, Artists, Albums, Genres, Playlists, and Update Playlist from the main interface.
- **Operations on Music Playing Interface:**

Icon	Operation	Function
...

Frequently Asked Questions

How many music tracks can be displayed in the music lists?

Only 4000 music tracks can be displayed in the music lists. If needed, navigate through folders to find additional tracks.

What should I do if my computer cannot detect the MP3 Player?

If your computer cannot detect the MP3 Player, update your USB driver to version 2.0 or try using another cable. If the issue persists, contact Oilsky Technical Support for assistance.

How can I better organize my music or audio files?


To sort your music or audio files effectively, create folders on your PC/Mac and transfer files into these folders for better organization. You can then play music directly from these folders on your MP3 player.

Thanks for your purchase!

Welcome to download manuals at www.oilsky.com.cn

Any after sales service needed, please feel free to contact us oilskyservice@hotmail.com

Instruction of Buttons

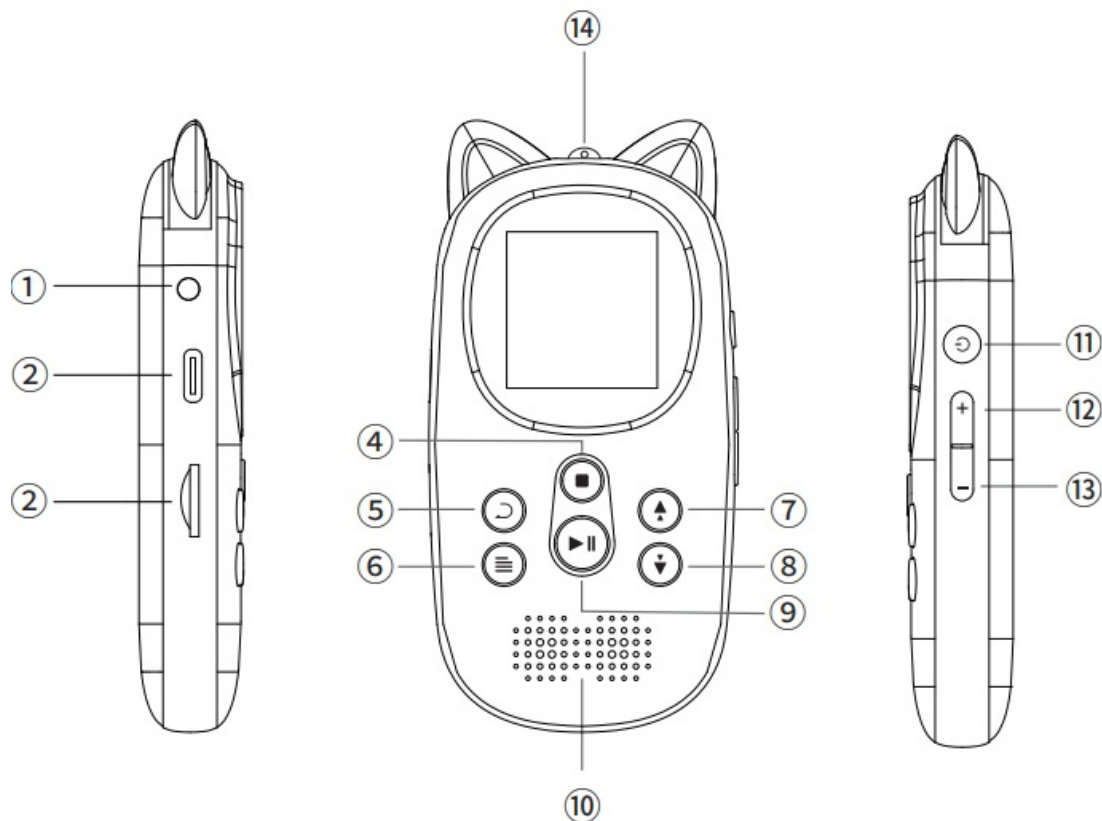

1. Earphone jack
2. Type-C port
3. TF card slot
4. Return
5. Return
6. Menu button
7. Previous/Rewind
8. Next/Forward
9. Play/Pause
10. External speaker
11. Power ON / OFF
12. Volume up
13. Volume down
14. Hanging hole

Charge the Player

1. Use 5V 1A Charger

Use only the 5V 1A charger for charging or it may lead to product failure. After fully charged, disconnect the cable from your device by pulling it straight outward.


2. Charge by Computer

Connect the device to a running computer via the included charging cable.

Note: If not used for a long time, you are supposed to charge the battery at least once every 2 months.

Quick Guide


Power on, off

Hold the power button  for about 3s to turn the player on. Repeat to turn it off.

One button returning to music playing interface

On any other interface, press this button  to get back to the music playing interface.

Return

While on playing interface, Press the button  to exit.

Volume Adjustment




Click the button +/- on the right side to increase/decrease the volume.

Data Transfer








Using the supplied charging cable, connect your computer and copy over media files as if it was a flash driver or use music management software such as Windows Media Player to transfer the files (not work for iTunes).

Main Functions

Music

Press the button  with “Music” on the main interface to access its function, then press button   to choose each function including All songs, Now Playing/Last played, Artists, Albums, Genres, Playlists, and Update Playlist.





Operations on music playing interface

Icon	Operation	Function
	Press the button	Get into the sub-menu, and select & set each function you preferred
	Press the button	Return to previous menu
	Press the button	Play the previous song
	Press the button	Play the next song
	Press the button	Pause/Play the music
	Hold the button	Rewind the current playing song
	Hold the button	Fast forward the current playing song

Music Format

Music format	Bitrate	Sampling Rate
MP3	8Kbps~320Kbps	8MHz~48MHz
WMA	20Kbps~499Kbps	8MHz~48MHz
APE	800Kbps~1000Kbps	8MHz~48MHz
FLAC	1000Kbps~1200Kbps	8MHz~48MHz
WAV	32Kbps~384Kbps	8KHz~48KHz

Steps to set A-B Repeat mode


1. On the music playing interface, press the button  > Select Play mode > Repeat settings > Repeat mode. Letter A now starts flashing on the bottom of the screen.
2. Press the button  to choose the start position, Now letter B starts flashing, press the button  and letter B stop flashing. Now AB repeat mode set successfully. And the player will only play the sound you just set until you press the button  again to cancel the repeat mode and resume normal playback.

Attention:

1. ONLY 4000 music tracks can be displayed in the music lists, please go to the folders to find the complete tracks.
2. If your computer cannot detect the MP3 Player, please update your USB driver to 2.0 version or try another cable. If still won't work please get in touch with Oilsy Technical Support for help. (See cover)
3. To better sort your music or audio we recommend you create some folders on your PC/Mac to sort them instead of the 3 default playlists. After it's done. Play music from " Folder ".

Bluetooth

How to pair M7 with Bluetooth speaker or Bluetooth headset?

1. Turn on the Bluetooth speaker or Bluetooth headset and turn on the bluetooth mode.
2. Turn on the Bluetooth mode of M7, then choose "searching for device" to find available Bluetooth device around.
3. Go "Device List" and choose the Bluetooth device you want to pair, press the button  to confirm to pair.
4. Once the bluetooth connection is done, you will find a green Bluetooth icon on the screen.



Attention:

1. The M7 cannot pair with Smart Phones.
2. Must select Bluetooth to reconnect with your Bluetooth device if you turned off the MP3 Player last time.
3. If you have connected your Bluetooth earphone with your mobile phone , please disconnect them before pairing





with the M7, or the connection would be a failure.

4. When listen to radio by Bluetooth, wired headphones are needed as radio antenna


FM Radio

Press the button  with “ FM radio ” on the main interface to access to the radio playing interface, press  to its sub menu:

Steps to start FM radio recording:

1. On the radio playing interface, press the button  and choose “ Start FM radio recording, press the button  enter to the recording interface, press the button  to exit and confirm whether to save the recording or not.
2. On radio playing interface, press the button  and choose “FM recording file” to select each file to play as you wish.




Steps to select different FM band

On the radio playing interface, press the button  and choose “ Tuner Region ” to set each FM band as you wish:
Common Band 87.0 MHZ ~ 108.0 MHZ
European Band 87.0 MHZ ~ 108.0 MHZ
Japan Band 76 MHZ ~ 90 MHZ

Attention:

1. Wired headphones are required as antenna for FM radio function.
2. Plug in wired headphones when play FM radio in Bluetooth Mode.


Recorder

Press the button  with “Recorder” on the main interface, then press buttons   to select each function.


Record format & bitrate

Record format	Mp3, WAV
Record bitrate	512kbps
	768kbps
	1024kbps
	1536kbps
	3072kbps


How to record from Line-in?

1. Connect the mp3 player with smartphone or audio device by a 3.5 mm AUX cable
2. Select Recorder > Record from > Line in
3. Press the button  to go back, then select Start voice recording
4. After saved the file, you can play it from Recording library.


Settings

- Press the button  with “Settings” on the main interface, then choose or set each function here. Points need to know below:


Sleep timer:


1 to 99 Minutes: Regardless of whether it is operated or not, the machine auto-shutdown when the time reaches the specified time you set. Press the button  to save the setting.

Power management:

1 to 99 Minutes: No music being played, the machine automatically shut down when there is no operation in the time you set. Press  the button to save the setting.

Date and time:

Time settings: Set the time format you want (12-hours / 24-hours). Press the button  to save the settings.

Date settings: Set the date format you want (MM DD YYYY) etc. Press the button  to save the settings.

Format device:

Before you choose to format the device, please remember to back up all your files, otherwise, you will no longer get them back.

Folder

MP3 and micro SD card's memory will be sorted by edit time, the first file be dropped in will be listed at the top. If you renamed the file or do some other modifications, the file goes to the bottom of the list. This trick only works for “Folder” , not “Music” .

Ways to sort audio in alphabetic order.

1. Prepare your audio book files on PC/MAC.
2. Make sure these files are in correct order by file name. Such as "01 xxx", "02 xxx"... "50 xxx".
3. Now plug in your mp3 player and ready to transfer.
4. Create a folder in mp3 player and name it as you wish.
5. Select all audio files and do not copy or cut.(Important)
6. When all files are being selected, move your mouse above the first audio file (ie "01 xxx") and then right click and copy. (Important)
7. Paste these files to your mp3 player folder, make sure all files are pasted in right order. Otherwise delete them all and redo step 5.
8. Unplug the mp3 player, and go to the folder with files, they should be in correct order.

Tools

Stopwatch, Clock, Calendar, Pedometer

Support and Troubleshooting

Q: How to transfer music to the mp3 player?

A: Download music to your computer first, and then connect mp3 player with your computer thru charging cable. A new disk will pop on as flash driver, and drop all your musics to the disk. You can create folders in the disk to sort your music.

Q: Why my computer can't recognize the MP3 player?

A: Oilsky Mp3 Player can be paired with latest USB driver for all computer system. Please update your USB driver to 2.0 version before connecting the MP3 player or try another charging cable. If you still cannot connect the player to your computer, please contact Oilsky customer service for further help (see cover).

Q: How to insert the SD card into the card slot successfully?

A: Push it in with your fingernail tip till you hear a "Click! ", Push again and the card will pop back out of the SD card slot.

Specifications

Screen Size	1.44 inch
Resolution	128*128 pixels
Music Format	MP3 WMA APE FLAC WAV
External Memory	Max. 128GB
Record Format	MP3, WAV
Record Bit Rate	512Kbps 768Kbps 1024Kbps 1536Kbps 3072kbps
Battery	3.7 V/750 mAh
Charging time	1-3 hours
Earphone Jack	3.5mm
Product Dimensions	101.5mm*50.5mm*17.2mm

All rights reserved. OILSKY, the OILSKY logo and other OILSKY marks are owned by OILSKY and may be registered.

All other trademarks are the property of their respective owners. OILSKY assumes no responsibility for any errors that may appear in this document. Information contained herein is subject to change without notice.

Documents / Resources

 	<p>Oilsky M7 MP3 Player Bluetooth 5.0 Built in Speaker [pdf] User Manual</p> <p>M7 MP3 Player Bluetooth 5.0 Built in Speaker, M7, MP3 Player Bluetooth 5.0 Built in Speaker, P layer Bluetooth 5.0 Built in Speaker, Bluetooth 5.0 Built in Speaker, 5.0 Built in Speaker, Built in Speaker, Speaker</p>
--	--

References

-  [Oilsky](#)
- [User Manual](#)

[Manuals+.](#) [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.