



OKI 1GB Media Player Remote Control Instructions

[Home](#) » [OKI](#) » OKI 1GB Media Player Remote Control Instructions 

Contents

- [1 OKI 1GB Media Player Remote Control](#)
- [2 Remote Control Function](#)
- [3 Documents / Resources](#)
 - [3.1 References](#)
- [4 Related Posts](#)

OKI

OKI 1GB Media Player Remote Control



Remote Control Function



Original	Recharge
	Power
	EQ
	Mute
	Vol +
	Vol -
	Ch +
	Ch -
	1
	2
	3
	4
	5
	6
	7
	8
	9
	0

Original	Recharge
	Pre Ch
	Guide
	Smart
	Media
	Options
	Info
	Menu
	Exit
	Up
	Right
	Down
	Left
	Ok
	Format
	3D
	Red
	Green



Original	Recharge
	Yellow
	Blue
	Rec
	>>
	Play
	Pause
	Stop
	>>I
	I<<
	Shift + Pause
	Back
	Text
	AV

Original	Recharge
----------	----------



<https://tout-telecommandes.fr/fr/Oki/1058698-24702-telecommande-de-remplacement-pour-Oki-SB-MEDIA-PLAYER-1G-SOUNDBAR-1GB.html>.

Documents / Resources

	OKI 1GB Media Player Remote Control [pdf] Instructions 1GB Media Player Remote Control, 1GB, Media Player Remote Control, Player Remote Control, Remote Control, Control
	OKI 1GB Media Player Remote Control [pdf] Instructions 1GB Media Player Remote Control, 1GB, Media Player Remote Control, Player Remote Control, Remote Control, Control

References

- [Télécommande qui remplace OKI SB MEDIA PLAYER 1G \(SOUNDBAR 1GB\)](#)
- [User Manual](#)