

OLIGHT Arkflex EDC Flashlight with A 90 Degree Rotating Head User Manual

Home » OLIGHT » OLIGHT Arkflex EDC Flashlight with A 90 Degree Rotating Head User Manual



Contents

- 1 OLIGHT Arkflex EDC Flashlight with A 90 Degree Rotating Head
- **2 Product Information**
- **3 Product Usage Instructions**
- 4 What's In The Box
- **5 Product Specifications**
- 6 Charge
- **7 HOW TO OPERATE**
- **8 Battery Indicator**
- 9 WARRANTY
- 10 Documents / Resources
 - 10.1 References



OLIGHT Arkflex EDC Flashlight with A 90 Degree Rotating Head



Product Information

Specifications

• COOL WHITE CCT: 6500K CRI:70

- TURBO:
 - 1000 lumens
 - 100% 4min
 - 40% 90 min
- HIGH:
 - 400 lumens
- MED:
 - 100 lumens
 - 90min 100%
 - 15% 6h50min
- · LOW:
 - 15 lumens
 - 38h 100%
- MOON:
 - 1.5 lumens
 - 10 days 100%

USB Magnetic Charging Cable

• Cable length: 0.5m

• Input: 5V 1A

• Output: The time to fully charge is about 1 hour and 40 minutes

Additional Information

• Charge Indicator: GREEN for Charging Completed, RED for Charging

• Beam Intensity: 1,900cd

• Beam Distance: 85m

• Water Resistance: IPX7 (submersible up to 1m)

• Weight: 101g/3.56oz

• Working Temperature: Up to 90oC

Note:

The hinge is a fragile component, so please handle it with care. Avoid dropping after rotating the head to a specific angle.

Product Usage Instructions

Turning On/Off and Adjusting Brightness

To turn on the flashlight, press the ON/OFF button. Press and hold the button for more than 1 second to switch between different brightness levels.

Moonlight Mode

In the off state, press and hold the button for over 1 second to enter the Moonlight mode. If the memorized mode is Moonlight, just press the button to activate it.

Turbo Mode

Quickly double-press the button to enter Turbo mode. Double press again to return to the memorized mode.

Strobe Mode

Triple press the button to activate strobe mode. Press the button or press and hold it to return to the previous mode.

Battery Indicator

The battery indicator will show different colours based on the battery level. Refer to the provided figures for more details.

Frequently Asked Questions (FAQ)


· How long does it take to fully charge the flashlight?

The flashlight takes about 1 hour and 40 minutes to fully charge using the USB Magnetic Charging Cable.

· What is the weight of the flashlight?

The flashlight weighs 101g or 3.56oz.


What's In The Box

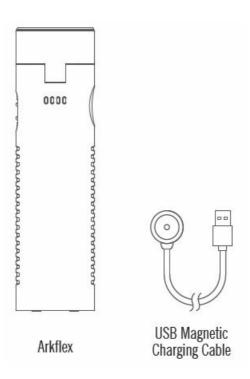

Multi-language dictionary, see Table 3;

EN	Moonlight	Low	Medium	High	Turbo	Strobe	Press	Double press	Press and hold	Triple press
CN	月光档	低档	中档	高档	极亮档	爆闪	单击	双击	长按	三击
FI	Moonlight-tila	Low-tila	Medium-tila	High-tila	Turbo-tila	Strobo	Napauta	Kaksoisnapauta	Paina ja pidä painettuna	Kolmoisnapauta
NO	Moonlight modus	Lav modus	Medium modus	Høy modus	Turbo modus	Blink modus	Trykk	Trykk to ganger	Hold inne	Trykk tre ganger
sv	Moonlight läge	Lågläge	Mellanläge	Högt läge	Turboläge	Blixt läge	Tryck	Dubbeltryck	Tryck och håll	Trippel Tryck
NL	Maanlicht modus	Lage Modus	Gemiddelde Modus	Hoge Modus	Turbo Modus	Stroboscoop	Druk	Dubbel drukken	Houd ingedrukt	Driemaal drukken
PL	Tryb moonlight	Tryb niski	Tryb średni	Tryb wysoki	Tryb turbo	Strobe	Naciśnij	Naciśnij dwa razy	Naciśnij i przytrzymaj	Naciśnij trzy razy
DE	Moonlight-Modus	Niedriger Modus	Mittlerer Modus	Hoher Modus	Turbo-Modus	Strobe	Drücken	Zweimal drücken	Gedrückt halten	Dreimal drücken
HU	Holdfény mód	Alacsony mód	Közepes mód	Magas mód	Turbó mód	Stroboszkóp	Megnyomás	Dupla megnyomás	Nyomva tartás	Tripla megnyomás
RU	Режим мунлайт	Минимальный режим	Средний режим	Максимальный режим	Турбо режим	Режим стробоскоп	Нажмите	Двойное нажатие	Нажмите и удерживайте	Тройное нажатие
ES	Modo de luz de luna	Modo de potencia baja	Modo de potencia media	Modo de potencia alta	Modo turbo	Estroboscópico	Presione	Presione dos veces	Mantenga presionado	Presione tres veces
RO	Mod de veghe	Mod mic	Mod mediu	Mod mare	Mod turbo	Stroboscop	Apăsare	Apăsare dublă	Apăsați și mențineți apăsat	Apăsare triplă
UA	Режим Moonlight	Режим Low	Режим Medium	Режим High	Турбо-режим	Режим стробоскопа	Прес	Подвійне натискання	Натисніть і утримуйте	Потрійне натискання
JP	ムーンライトモード	ローモード	メディアムモード	ハイモード	ターボモード	ストロボモード	プレス	ダブルプレス	押したまま	トリプルプレス
KR	문라이트 모드	로우 모드	미디엄 모드	하이 모드	터보 모드	스트로브	누르기	2번 누르기	길게 누르기	3번 누르기
тн	โหมดแสงจันทร์	โหมดความสว่างต่ำ	โหมดความสว่างปานกลาง	โหมดความสว่างสูง	โหมดเทอร์โบ	กระพริบ	กด	กดสองครั้ง	กดค้างไว้	กดสามครั้ง
FR	Mode Luciole	Mode Faible	Mode Moyen	Mode Haut	Mode Turbo	Stroboscope	Appuyer	Double pression	Appuyer et maintenir	Triple pression
IT	Modalità chiaro di luna	Modalità bassa	Modalità media	Modalità alta	Modalità Turbo	Strobo	Premere	Premere due volte	Premere e tenere premuto	Premere tre volte
sĸ	mesačny svit	slaby režim	stredný režim	vysoky režim	turbo režim	stroboskop	Stlačenie	Dvojité stlačenie	Stlačenie a podržanie	Trojité stlačenie
PT	Modo Luar	Modo baixo	Modo Médio	Modo alto	Modo turbo	Strobo	Pressionar	Pressionar duas vezes	Manter pressionado	Pressionar três vezes

Product Specifications

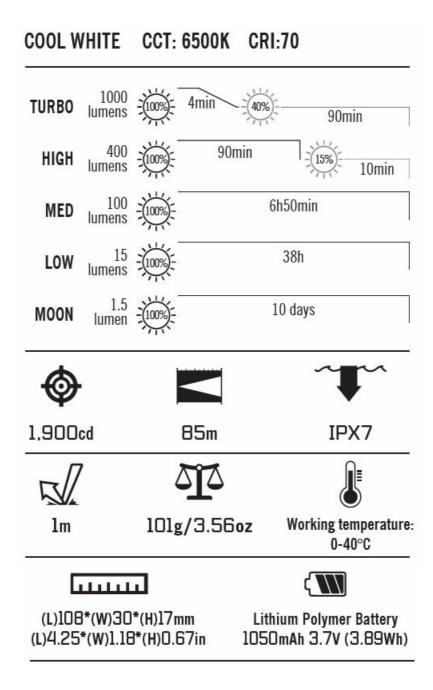


The above data are tested per ANSI/PLATO FL 1-2019 standard in Olight's labs for reference.

USB Magnetic Charging Cable


- Cable length 0.5m
- Input 5V 1A
- Output CC&CV 4.2V±0.05V 1.0A
- Time to fully charge About 1 hour and 40 minutes

Charge

Charge, see Figure 1;

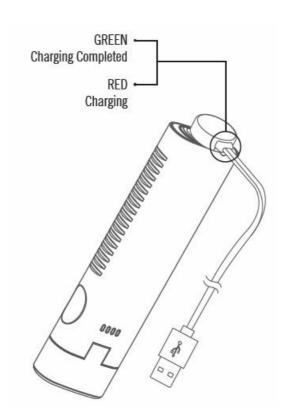

The light head can be turned 90 degrees, as shown in Figure 2;

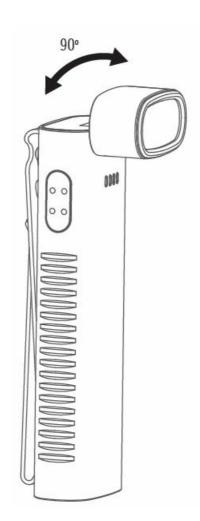


Note:

The hinge is a fragile component, so please handle it with care. Avoid dropping after rotating the head to a specific angle.

HOW TO OPERATE


On/Off, see Figure 3;

Press the the button to turn on/off. The flashlight will directly access the memorized brightness level when turned on again.

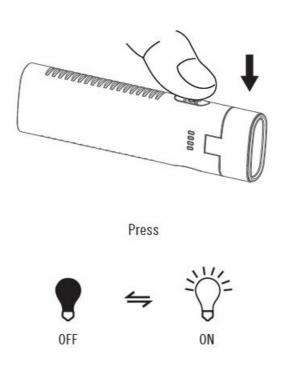


Lock/Unlock, see Figure 4;

To lock the light when it's off, press and hold the button (for about 2 seconds) until the Moonlight mode is off. When it's operated in lockout mode, the red indicator will be on briefly as a signal. To unlock the light, press and hold the button for about 1 second until the Moonlight mode is on.

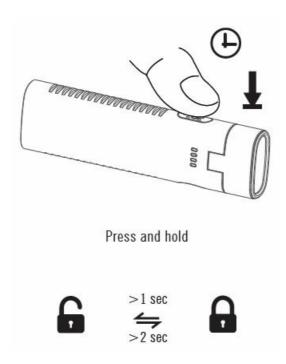

Change brightness level, see Figure 5;

In white light mode, press and hold the button to change brightness levels. The brightness will cycle through the following modes: Moonlight (or Turbo)->Low->Medium->High->Low. Release the button to select the brightness level.

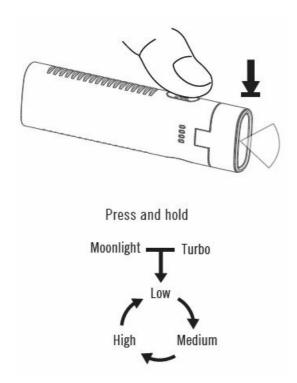


Moonlight mode, see Figure 6;

In off-state, press and hold the button for over 1 second to enter the Moonlight mode. If the memorized mode is Moonlight, just press the button.




Turbo mode, see Figure 7;

Quickly double-press the button to enter Turbo mode, and quickly double-press again to return to the memorized mode.

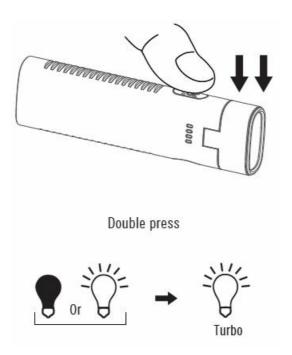


Strobe mode, see Figure 8;

- Triple-press the button to activate strobe mode.
- To return, press the button or press and hold it.

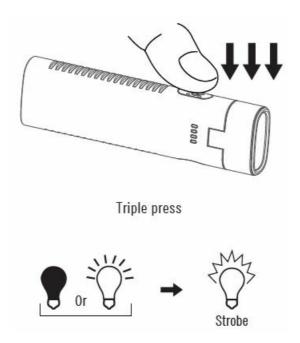


Battery Indicator

In normal mode, see Figure 9-1;

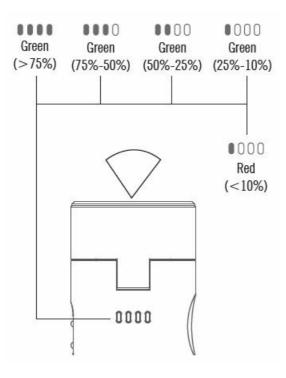

Moonlight mode, see Figure 9-2;

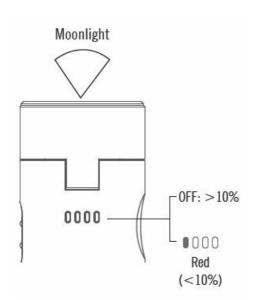

WARRANTY

We are proud to offer a lifetime warranty in Australia, China, France, Germany, and the USA. We are also working hard to expand coverage to more countries, where we provide a 2 or 5-year warranty. The warranty covers defects in material and workmanship under normal use, excluding loss, theft, deliberate damage, or cosmetic damage. For complete warranty information, please visit Olight.com or your local Olight official website.

Contact Support

- Australia Customer Support contact@olightstore.com.au
- Austria Customer Support kontakt@olightstore.at
- Canada Customer Support

cs@olightstore.ca

• China Customer Support

Wechat: lights

France Customer Support

cs@olightstore.fr

Germany Customer Support

kontakt@olightstore.de

• Italy Customer Support

contatto@olightstore.it

Japan Customer Support

cs@olightstore.jp

Korea Customer Support

olightkorea@olight.com

Spain Customer Support

contacto@olightstore.es

• Thailand Customer Support

cs@olightstore.co.th

• UK Customer Support

contact@olightstore.uk

USA Customer Support

cs@olightstore.com

 For other countries and regions, please contact Global Customer Support contact@olight.com.

Dongguan Olight E-Commerce Technology Co., Ltd.

4th Floor, Building 4, Kegu Industrial Park, No 6 Zhongnan Road, Changan Town, Dongguan City, Guangdong, China.

Made in China.

Documents / Resources



OLIGHT Arkflex EDC Flashlight with A 90 Degree Rotating Head [pdf] User Manual Arkflex EDC Flashlight with A 90 Degree Rotating Head, Arkflex, EDC Flashlight with A 90 Degree Rotating Head, Flashlight with A 90 Degree Rotating Head, 90 Degree Rotating Head, Degree Rotating Head, Rotating Head

References

- O Olight | Illuminate Your World.
- User Manual

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.