



OLIGHT Perun Mini Multi-Use LED Flashlight Kit User Manual

[Home](#) » [OLIGHT](#) » OLIGHT Perun Mini Multi-Use LED Flashlight Kit User Manual 

Contents

 
- [1 OLIGHT Perun Mini Multi-Use LED Flashlight Kit](#)
- [2 IN THE BOX](#)
- [3 SPECIFICATION](#)
 - [3.1 PRODUCT OVERVIEW](#)
 - [3.2 BEFORE FIRST](#)
 - [3.3 CHARGINNG](#)
- [4 HOW TO OPERATE](#)
- [5 Documents / Resources](#)
 - [5.1 References](#)
- [6 Related Posts](#)



OLIGHT Perun Mini Multi-Use LED Flashlight Kit



IN THE BOX

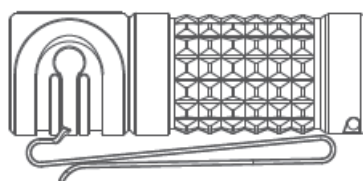

Perun Mini (with



Duty

 


USB Magnetic
Charging



Lanyard
with A Pin

SPECIFICATION

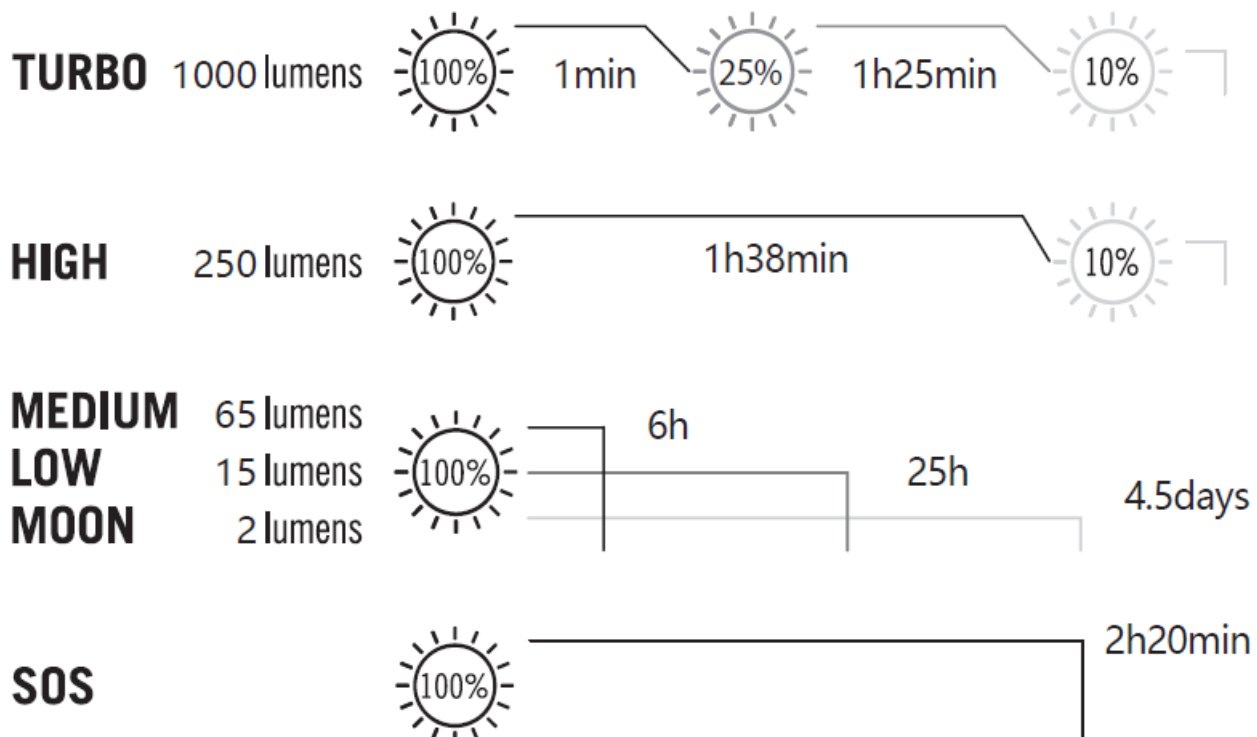

100m

2,500cd

IPX8 (2m)

1.5m

 


(L)2.42 x (D)0.83in
(L)61.5 x (D) 21mm

52g / 1.83oz
(Including Battery)


ANSI/NEMA FL1-2009 standards. The tests are performed using the battery included in the flashlight, and is measured indoors under a room temperature of 25 degrees Celsius with windless conditions. The runtime of turbo and high modes may vary depending on the external temperature and

PRODUCT OVERVIEW

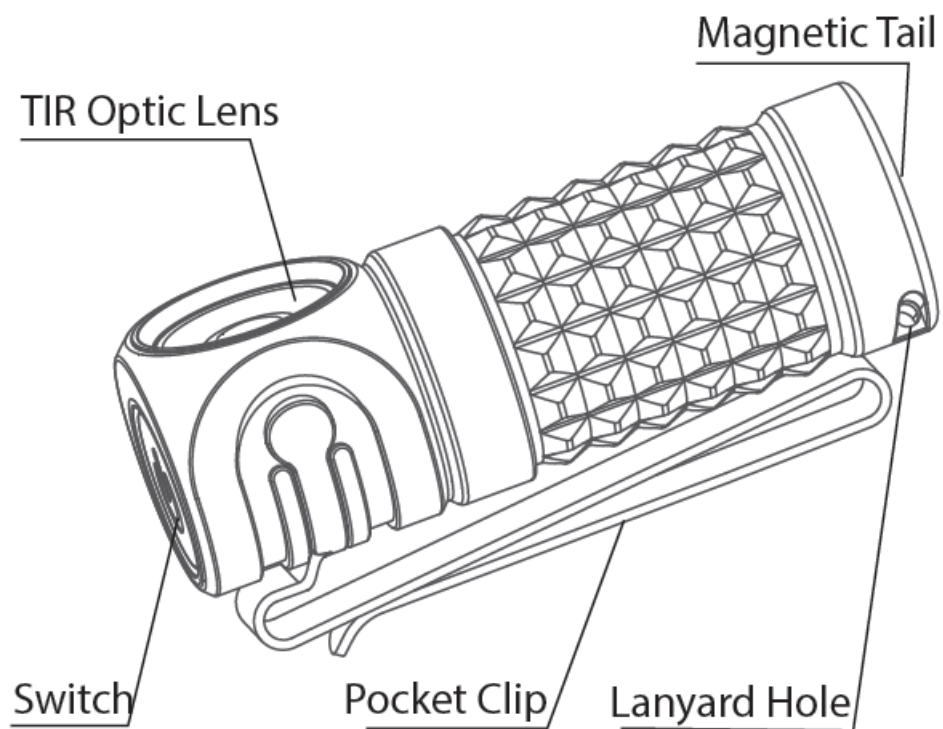


BEFORE FIRST

 Unscrew the body and remove the yellow insulating film.

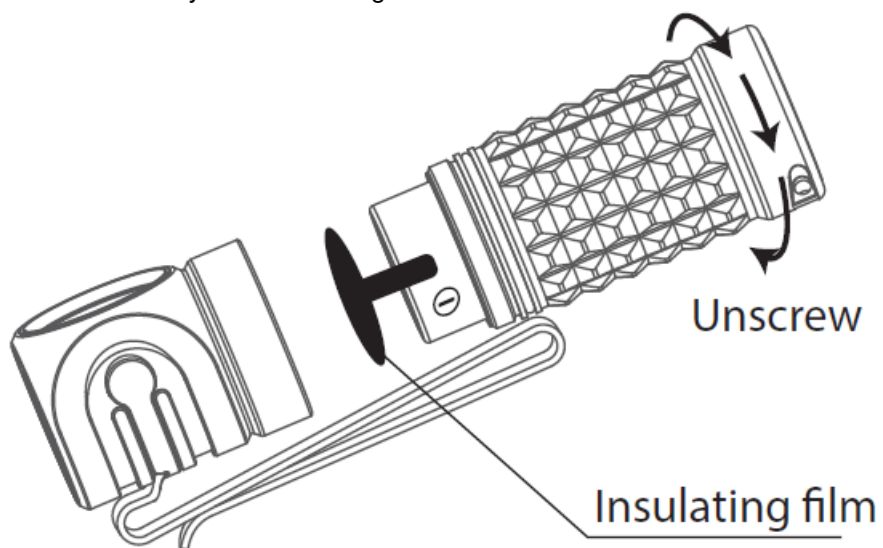

CHARGINNG

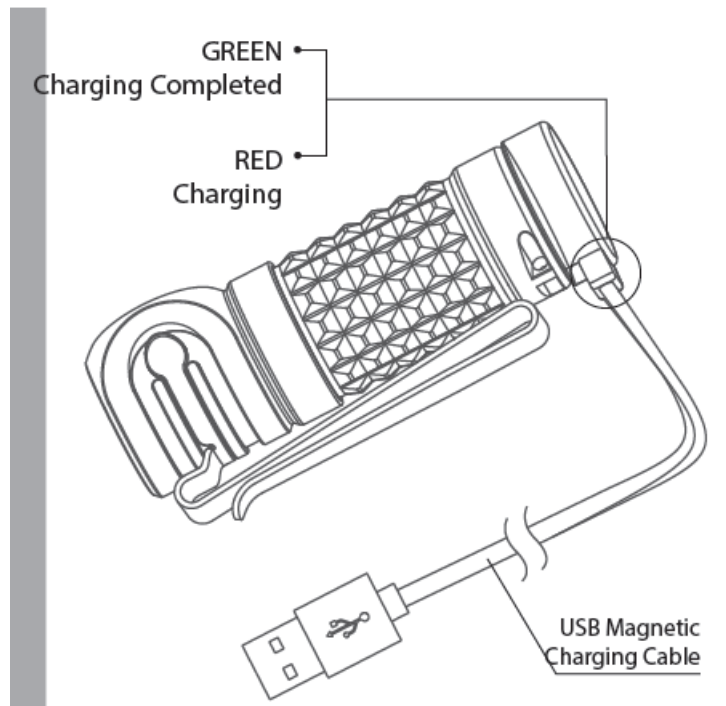


- Connect the magnetic USB end of the charging cable to an external USB power source, then attach the other end of the magnetic charging cable to the charging port. It takes no more than 1.2 hours to fully charge the light (For reference only. When the USB power supply is insufficient to provide 5V 1A
- Before first use please fully charge the

SUPPORTED BATTERY

- 1*550mAh 3.7V IMR16340 Lithium Battery.
- The product is not compatible with disposable CR123A batteries.


LANYARD ATTACHMENT

Put the pin tool through the light lanyard hole and then hook the lanyard to the hole.

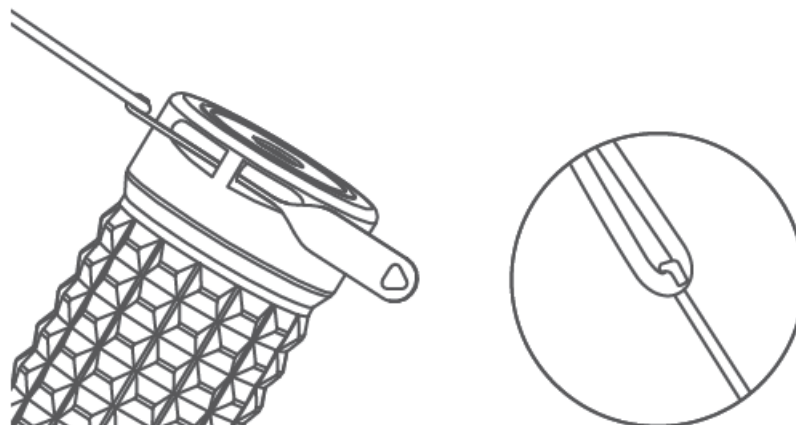


HOW TO USE THE DUTY PATCH

1. Place the product on the velcro duty patch, and insert the pocket clip into the hole of the velcro duty patch; attach it to clothes, backpacks or hats that have a similar velcro .

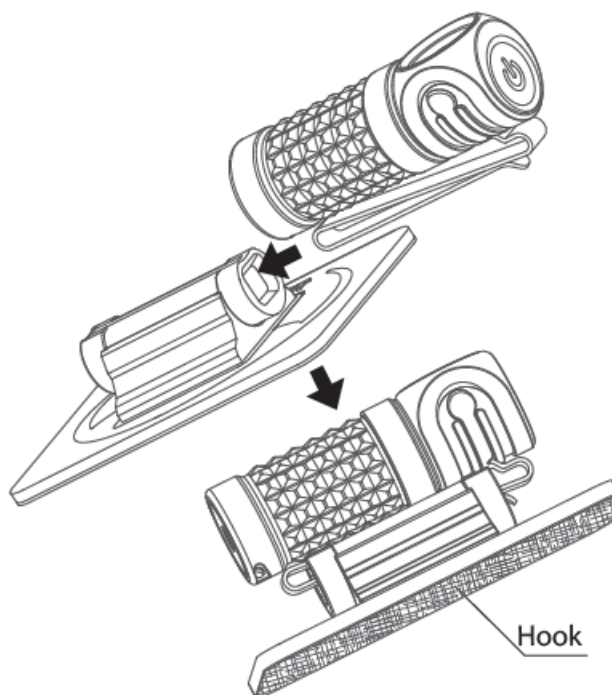

2. Turn the product to adjust the direction according to actual conditions.

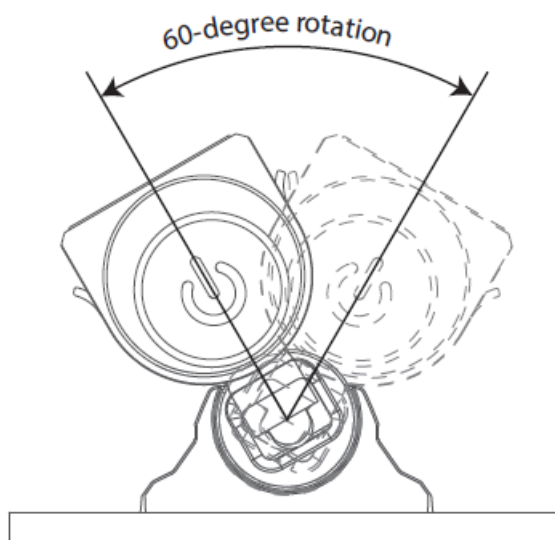

DANGER

- DO NOT throw the light directly into human eyes. This may cause temporary blindness or permanent damage to the eyes.
- The battery can only be charged while installed in the flashlight. When charging, please use the provided charger for your light.

WARNING

- Keep out of reach of children.
- If the light is about to be put aside for a long time or be transported, please unscrew the body for half a circle to cut off the circuit.
- DO NOT activate the turbo mode multiple times continuously when the environmental temperature is high in case the flashlight body is too hot to hold.

- Ensure the battery is inserted with the negative (–) end pointing to the head of the light (LED side).
- Store the battery with care; if the battery

- **NOTICE**

Needs to be changed, please take good care of the battery taken out. DO NOT mix it with the light and true metals. bo mode are not the normal brightness levels (low, medium, and high mode). Under moonlight and turbo mode, press and hold the switch to enter the normal brightness level cycle.

- When the light is turned on, the light will return to the last used setting. Only moonlight, low, medium, and high mode can be memorized when the light is turned off. If the light is turned off on turbo mode, it will memorize high mode and will revert to the medium setting after 10 minutes. SOS mode cannot be memorized.
- Active thermal management: On turbo mode, overheating can be avoided by adjusting the

HOW TO OPERATE

ON/OFF: When the light is not locked out, single click the switch to turn on/off.

CHANGE BRIGHTNESS LEVEL: When the light is on, press and hold the switch to cycle through the mode sequence moonlight (or turbo, SOS) – low – medium – high – low. The mode is selected when the switch is released.

MOONLIGHT MODE: When the light is off or in standby mode, press and hold the switch for over one second to access the moonlight mode.


DIRECT ACCESS TO TURBO: Enter and exit Turbo mode: quickly double click the switch to enter Turbo mode, and quickly double-click the switch again to exit Turbo mode. When the memorized mode is on high, quickly double-click the switch to exit Turbo mode and switch to medium mode. When the memorized mode is Medium, Low, or Moonlight, quickly double click the switch to exit turbo mode and switch to the previously memorized mode.

SOS: Quickly triple click the switch to access the SOS mode.

TIMER: The Perun Mini has a long (9 minutes) and short (3 minutes) timer when the light needs to be automatically turned off. When the flashlight is on, double click and hold the switch under the current brightness level to access the timer settings. A single blink accesses the short timer while two blinks accesses the long timer. The flashlight will automatically turn off when the timer is up. After the timer is set, double click and hold the switch to shift the timer settings. When the timer is up and the user is about to enter the timer again, the light will return to the last timer setting.

LOCKOUT: When the light is off, press and hold the switch for two seconds to access the button lockout mode. Under the lockout mode, press and hold the switch for less than two seconds without releasing it.

Documents / Resources

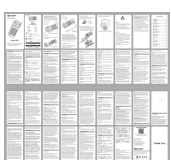

[OLIGHT Perun Mini Multi-Use LED Flashlight Kit \[pdf\] User Manual](#)

Perun Mini, Multi-Use LED Flashlight Kit, Perun Mini Multi-Use LED Flashlight Kit, LED Flashlight Kit, Flashlight Kit

References

-  [Olightworld.com](https://www.Olightworld.com). [Olight Flashlights](#), [Tactical Light](#), [Outdoor Light](#), [Weapon Light](#)

Manuals+.