


# **OLIGHT SR95 UT Intimidator Variable-Output Side-Switch LED Flashlight User Manual**

Home » OLIGHT » OLIGHT SR95 UT Intimidator Variable-Output Side-Switch LED Flashlight User Manual



## SR9SS UT INTIMIDATOR VARIABLE-OUTPUT SIDE-SWITCH LED FLASHLIGHT USER MANUAL

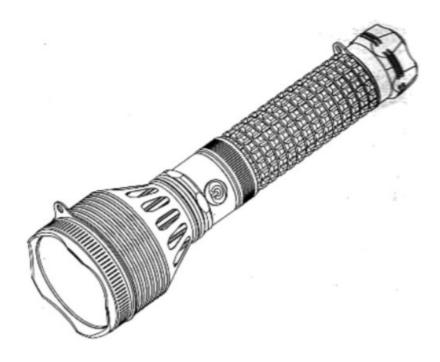

Thank you for purchasing the Olight SR95S UT Intimidator flashlight! Please read this manual carefully before using this product.


#### Contents

- 1 INSIDE THE BOX
- **2 OUTPUT VS RUNTIME**
- **3 HOW TO OPERATE**
- 4 INCLUDEL
- **ACESSORIES**
- **5 SPECIFICATIONS**
- **6 WARRANTY**
- 7 Documents / Resources
- **8 Related Posts**

#### **INSIDE THE BOX**

SR95S UT Intimidator, (2) o-rings, shoulder strap, AC charger and power cord, user manual

## **OUTPUT VS RUNTIME**

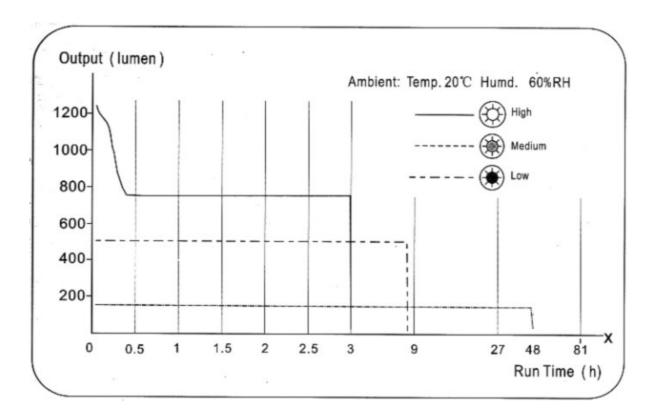


## **HOW TO OPERATE**

**ON/OFF:** Click the side switch to turn flashlight on.


## **CHANGE BRIGHTNESS LEVEL (FIG A)**

Press and hold the side switch when the light is on. The brightness levels will cycle up then repeat low — medium — high until level is selected.

Release the switch when on the desired brightness level to select it.

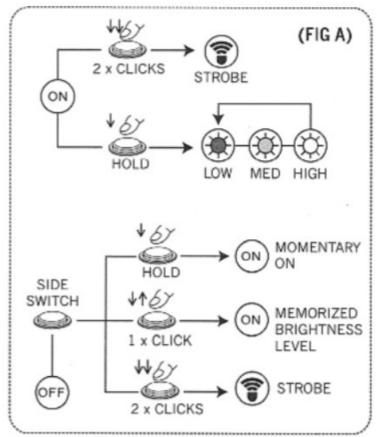


**STROBE:** Double click the side switch when the light is on or off. Strobe mode is not memorized. **LOCK OUT:** (**FIG B**) When the light is on, press and hold the side switch through three low — medium — high cycles, or approximately 10 seconds. After the third cycle, the light will turn off and be locked. The lock out mode prevents accidental activation.

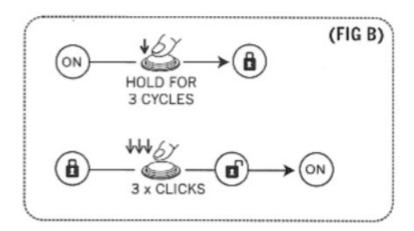

**UNLOCK:** (FIG B) Quickly click the side switch three time when the light is locked.

CHARGING THE FLASHLIGHT: (FIG C) Connect the AC charger to the power cord and plug into a wall socket. Insert the barrel plug of the AC charger into the charging port located on the tail of the flashlight battery pack. A LED indicator on the AC charger will be red when charging and turn green when charging is complete. The LED will remain green until unplugged from the wall. After charging is complete, remove the barrel plug from the charging port and cover the port with the rubber plug.

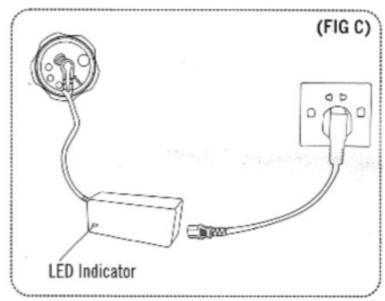


**NOTE:** If the power indicator button is pressed while charging, all four LEDs will glow. This does not mean the battery pack is fully charged. The battery pack may also be charged without being connected to the flashlight head.


**BATTERY POWER INDICATOR:** To check the battery level, press the power indicator button on the tail of the flashlight. Green LEDs will glow to represent the amount of power remaining. Four glowing LEDs means the battery is between 75% and 100% power. Three glowing LEDs means the battery is between 50% and 75% power. Two glowing LEDs means the battery is between 25% and 50% power. One glowing LED means the battery is 25% power or lower. If no LEDs glow when the power indicator button is pressed, the battery pack needs to the charged.

#### **WARNING**

When charging is complete, disconnect the power cord from the wall socket then disconnect the barrel port from the battery back. Do not leave plugged in.

#### **INCLUDEL ACESSORIES**

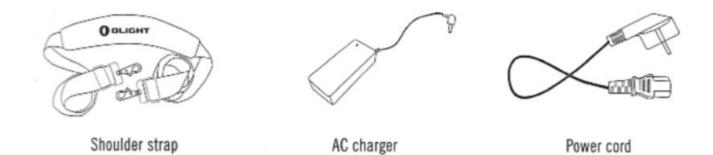

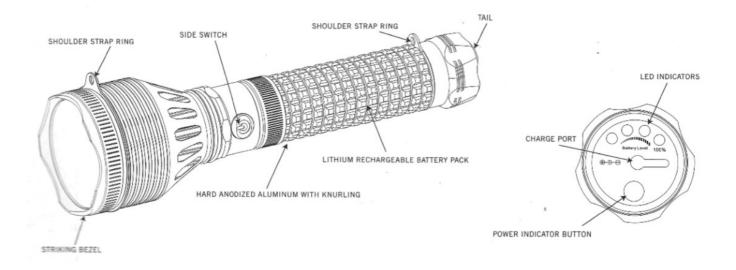

## **SPECIFICATIONS**

1250 LUMENS / 3 HRS
500 LUMENS / 8 HRS
150 LUMENS / 48 HRS
1250 LUMENS (10HZ) / 6 HRS
Ix LUMIONUS SBT-70
6 OV TO 8.4V
INPUT ACI00-228V 60-60HZ, CC 3A/8.4V
250,000 CD
1000 METERS/ 3280 FEET
7800mAh 7 4V LITHIUM ION
TYPE-III HARD ANODIZED ALUMINUM
IPX6
1.5 METER
L 325mm x D 90mm/ 12.7 in x 3.54 in
1230g / 43 4 oz

Note: Tests performed with 7800 mAh 7.4V battery pack

All performance claims to ANSI/NEMA FL1-2009 Standard.



• Do not use unsupported batteries with this flashlight.

- Do not attempt to charge with other AC chargers.
- Do not store or charge battery pack without the protective cap.
- Flashlight is built with over-charge protection.
- Use caution on high outputs or long runtimes as flashlight may get hot.

#### WARRANTY

Within 30 days of purchase: Return to retailer from which you purchased for repair or replacement.

Within 5 years of purchase: Return to Olight for repair or replacement.

This warranty does not cover normal wear and tear, modifications, misuse, disintegrations, negligence, accidents, improper maintenance, or repair by anyone other than an Authorized retailer or Olight itself.

## Customer Service: <a href="mailto:service@olightworld.com">service@olightworld.com</a>

Visit <u>www.olightworld.cam</u> to see our complete product line of portable illumination tools.



Olight Technology Co., Limited 2/F East, Building A, B3 Block, Fuhai Industrial Park, Fuyong, Bao'an District, Shenzhen, Chifa 518103 V2. JUNE 12, 2014 MADE IN CHINA

#### **Documents / Resources**



OLIGHT SR95 UT Intimidator Variable-Output Side-Switch LED Flashlight [pdf] User Manu al

SR95 UT Intimidator, Variable-Output Side-Switch LED Flashlight

Manuals+,