

OLIGHT
Version B
Portable Long
Range EDC
Flashlight



OLIGHT Version B Portable Long Range EDC Flashlight User Manual

[Home](#) » [OLIGHT](#) » OLIGHT Version B Portable Long Range EDC Flashlight User Manual 

Contents

- 1 [OLIGHT Version B Portable Long Range EDC Flashlight](#)
- 2 [Product Information](#)
- 3 [Product Usage Instructions](#)
- 4 [FAQ](#)
- 5 [IN THE BOX](#)
- 6 [Multi-language dictionary](#)
- 7 [Product specifications](#)
- 8 [Operating Instructions](#)
- 9 [Indicators Instructions](#)
- 10 [Disposal and Recycling Information](#)
- 11 [FCC STATEMENT](#)
- 12 [Declaration of Conformity](#)
- 13 [WARRANTY](#)
- 14 [CONTACTS](#)
- 15 [Documents / Resources](#)
 - 15.1 [References](#)



OLIGHT Version B Portable Long Range EDC Flashlight



Product Information

Specifications

- **Light Source:** MAX 10.8W/LED COOL WHITE CCT: 6,500~7,500K CRI:70
- **Turbo:**
 - 1,000 lumens
 - 2.5min at 100%
 - 92min at 38%
- **High:**
 - 300 lumens at 100%
- **Medium:**
 - 60 lumens at 100%
 - 103min at 20%
 - 18min at 100%
 - 10h
- **Low:**
 - 10 lumens at 100%
 - 60h
- **Moonlight:**
 - 1 lumen at 100%
 - 50 days
- **Dimensions:** (L)81.7*(D)29mm or (L)3.22*(D)1.14in
- **Rechargeable Li-ion Battery:** 1100mAh 3.6V (3.96Wh)
- **Working Temperature:** IPX8

Product Usage Instructions

1. **Remove the Insulating Film:** Before using the flashlight, make sure to remove the insulating film.
2. **Charge the Flashlight:** Use the USB Magnetic charging cable provided. Red light indicates charging, and green light indicates charging completed.
3. **Turn On/Off the Light:** Press the button to turn on/off the light.
4. **Lock/Unlock:** Press and hold for more than 1 second to lock the flashlight; press and hold for more than 2 seconds to unlock.
5. **Moonlight Mode:** Press and hold for 1 to 2 seconds to activate Moonlight mode.

 
6. **Turbo Mode:** Activate Turbo mode by following the instructions in Figure 6.
7. **Change Brightness Level:** Double press quickly for Turbo mode or follow the instructions in Figure 8.
8. **Strobe Mode:** Press and hold to activate Strobe mode.
9. **Auto Shut-Off Function:** Press three times quickly for a specific timing setting or double press and hold for another timing setting.

FAQ

Frequently Asked Questions

- **Q:** How do I know the battery level of the flashlight?
 - **A:** The battery level is indicated by different colors: Green indicates varying levels between 75% and 10%, while red indicates below 10%.
- **Q:** How do I lock and unlock the flashlight?
 - **A:** To lock the flashlight, press and hold the switch for about 2 seconds until Moonlight mode turns on and off. To unlock, press and hold the switch for 1 second or longer.
- **Q:** How do I activate Turbo mode?
 - **A:** Follow the instructions provided in Figure 6 to activate Turbo mode on the flashlight.

IN THE BOX

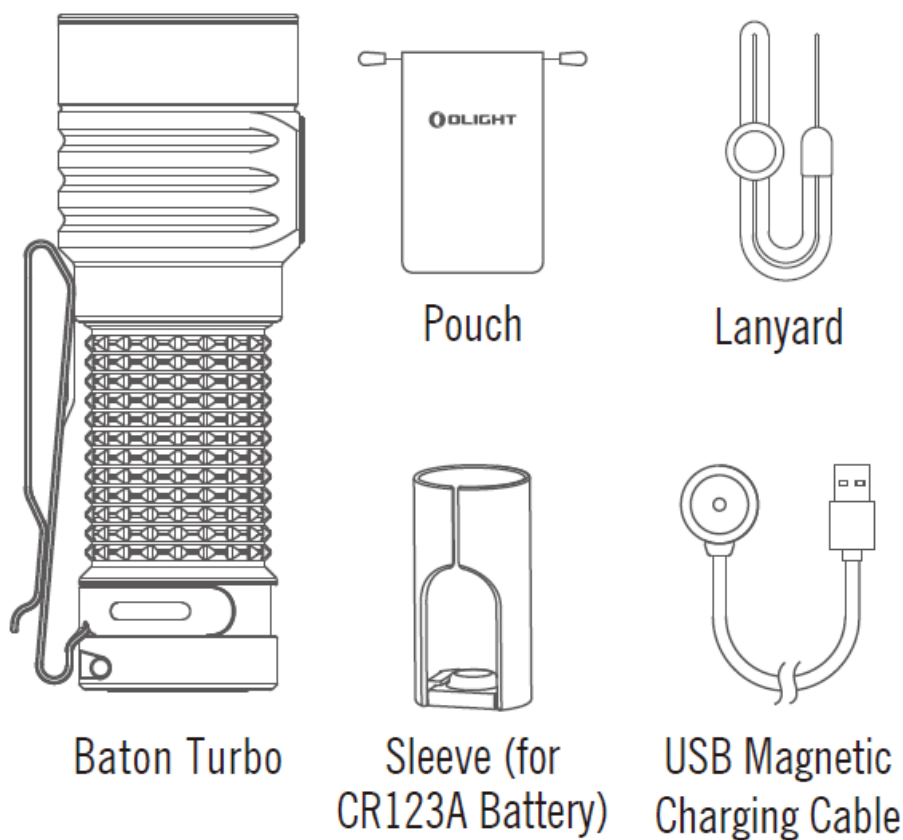

Multi-language dictionary

Multi-language dictionary, see Table 3

Table 3

Multi-language dictionary



EN	Moonlight	Low	Medium	High	Turbo	Strobe	Press	Double press	Press and hold	Press 3 times (or more) quickly	Blink once	Blink twice
CN	月光档	低档	中档	高档	极亮档	爆闪	单击	双击	长按	快按3次或以上	闪烁一次	闪烁二次
FI	Moonlight-tila	Low-tila	Medium-tila	High-tila	Turbo-tila	Strobo	Napauta	Kaksoisnapauta	Paina ja pidä painettuna	Paina 3 kertaa (tai useammin) nopeasti	Vilkuta kerran	Vilkuta kaksi kertaa
NO	Moonlight modus	Lav modus	Medium modus	Høy modus	Turbo modus	Blink modus	Trykk	Trykk to ganger	Hold inne	Trykk raskt 3 ganger (eller mer)	Blink en gang	Blink to ganger
SV	Moonlight läge	Lågläge	Mellanläge	Högt läge	Turboläge	Blixt läge	Tryck	Dubbeltryck	Tryck och håll	Tryck snabbt 3 gånger (eller mer)	Blinka en gång	Blinka två gånger
NL	Maanlicht modus	Lage Modus	Gemiddelde Modus	Hoge Modus	Turbo Modus	Stroboscoop	Druk	Dubbel drukken	Houd ingedrukt	Druk snel 3 keer (of meer)	Knipper één keer	Knipper twee keer
PL	Tryb moonlight	Tryb niski	Tryb średni	Tryb wysoki	Tryb turbo	Strobe	Naciśnij	Naciśnij dwa razy	Naciśnij i przytrzymaj	Naciśnij szybko 3 razy (lub więcej)	Mruga raz	Mruga dwa razy
DE	Mondlichtmodus	Niedriger Modus	Mittlerer Modus	Hoher Modus	Turbo-Modus	Strobe	Drücken	Zweimal drücken	Gedrückt halten	Schnell 3 Mal oder häufiger drücken	Blinkt einmal	Blinkt zweimal
HU	Holdfény mód	Alacsony mód	Közepes mód	Magas mód	Turbó mód	Stroboszkóp	Megnyomás	Dupla megnyomás	Nyomva tartás	Nyomja meg háromszor (vagy többször) gyorsan	Egy pislogás	Két pislogás
RU	Режим мунлайт	Минимальный режим	Средний режим	Максимальный режим	Турбо режим	Режим стробоскоп	Нажмите	Двойное нажатие	Нажмите и удерживайте	Быстро нажмите 3 раза (или больше)	Мигание один раз	Мигание два раза
ES	Modo de luz de luna	Modo de potencia baja	Modo de potencia media	Modo de potencia alta	Modo turbo	Estroboscópico	Presione	Presione dos veces	Mantenga presionado	Presione 3 veces (o más) rápidamente	Parpadee una vez	Parpadee dos veces
RO	Mod de veghe	Mod mic	Mod mediu	Mod mare	Mod turbo	Stroboscop	Apăsare	Apăsare dublă	Apăsați și mențineți apăsat	Apasați rapid de 3 ori (sau mai mult)	Clipește o dată	Clipește de două ori
UA	Режим Moonlight	Режим Low	Режим Medium	Режим High	Турбо-режим	Режим стробоскопа	Прес	Подвійне натискання	Натисніть і утримуйте	Швидко натисніть три рази (або більше)	Один раз моргнути	Двічі моргнути
JP	ムーンライトモード	ローモード	メディアムモード	ハイモード	ターボモード	ストロボモード	プレス	ダブルプレス	押したまま	素早く3回(またはそれ以上)押します	一度点滅	二度点滅
KR	문라이트 모드	로우 모드	미디어 모드	하이 모드	터보 모드	스트로브	누르기	2번 누르기	길게 누르기	빠르게 3번 혹은 그 이상 누르기	1번 깜빡임	2번 깜빡임
TH	โหมดแสงจันทร์	โหมดความสว่างต่ำ	โหมดความสว่างปานกลาง	โหมดความสว่างสูง	โหมดเทอร์โบ	กะพริบ	กด	กดสองครั้ง	กดค้างไว้	กด 3 ครั้ง (หรือมากกว่า) อย่างรวดเร็ว	กะพริบหนึ่งครั้ง	กะพริบสองครั้ง
FR	Mode Luciole	Mode Faible	Mode Moyen	Mode Haut	Mode Turbo	Stroboscope	Appuyer	Double pression	Appuyer et maintenir	Appuyez rapidement trois fois ou plus	Clignote une fois	Clignote deux fois
IT	Modalità chiaro di luna	Modalità bassa	Modalità media	Modalità alta	Modalità Turbo	Strobo	Premere	Premere due volte	Premere e tenere premuto	Premere 3 volte (o più) rapidamente	Lampeggia una volta	Lampeggia due volte
SK	mesačný svit	slabý režim	stredný režim	vysoký režim	turbo režim	stroboskop	Stlačenie	Dvojité stlačenie	Stlačenie a podržanie	Stlačte rýchlo 3-krát (alebo viac)	Jedno žmurknutie	Dve žmurknutia
PT	Modo Luar	Modo baixo	Modo Médio	Modo alto	Modo turbo	Strobo	Pressionar	Pressionar duas vezes	Manter pressionado	Pressione 3 vezes (ou mais)	Piscar uma vez	Piscar duas vezes

Product specifications

Product specifications, see Table 1 and Table 2

Table 1: SPECIFICATIONS

COOL WHITE CCT: 6,500~7,500K CRI:70

TURBO 1,000 lumens  2.5min  92min




HIGH 300 lumens  103min  18min

MEDIUM 60 lumens  10h

LOW 10 lumens  60h

MOONLIGHT <1 lumen  50days

  
65,025cd 510m 1.5m

  
IPX8 Working Temperature 0-40°C 91g/3.21oz (Including Battery)

 
**(L)81.7*(D)29mm Rechargeable Li-ion Battery
(L)3.22*(D)1.14in 1100mAh 3.6V (3.96Wh)**

Above data are tested per ANSI/PLATO FL 1-2019 standard in Olight's labs for reference.

Table 2: USB Magnetic charging cable

Cable length	0.5m
Input	USB Type-A, DC 5V, 1A
Output	CC & CV, 4.2V, 1A
Charging time	About 1.5 hours


Operating Instructions

Operating instructions as below:

1. Remove the insulating film before use, see Figure 1.

Figure 1

 
Remove the insulating film before use

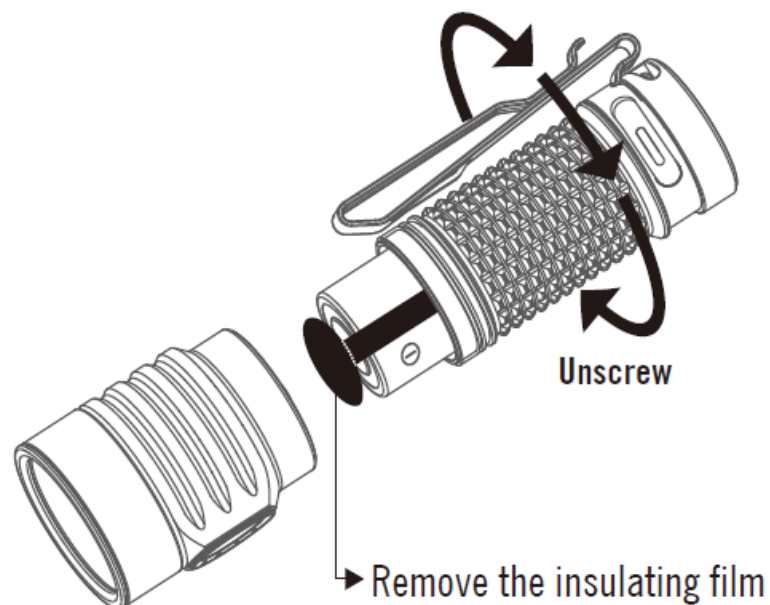

2. Charge the flashlight, see Figure 2.

Figure 2

 Charge the flashlight

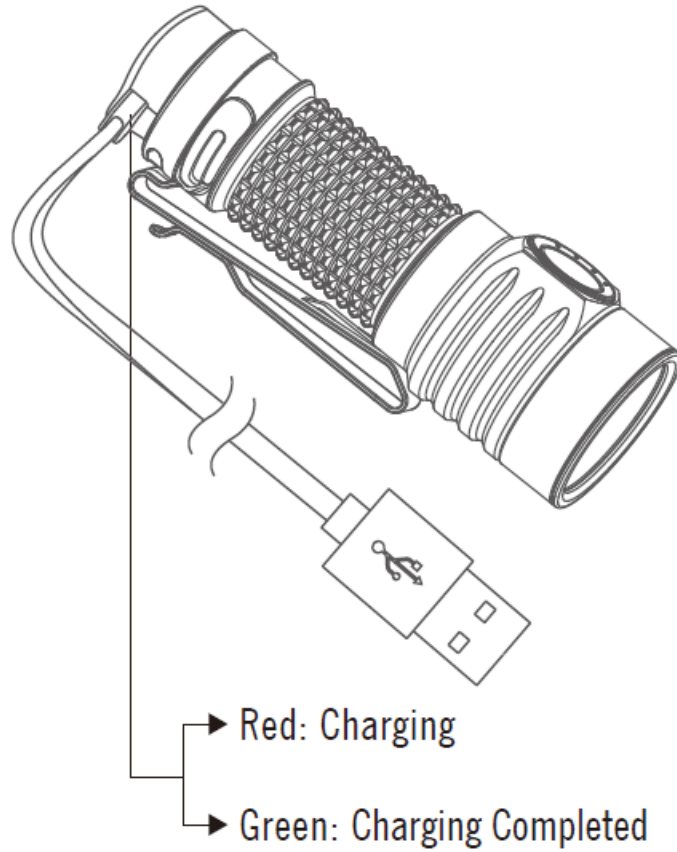


Turn On/Off the flashlight, see Figure 3


Press the button to turn on/off the flashlight. When turned on, the flashlight will light up at the memorized brightness level. (Moonlight, Low, Medium, and High modes will be memorized when turned off. Turbo mode will be memorized as High mode; High mode output will be memorized for 1 minute before switching to Medium mode; Strobe mode will not be memorized.)

Figure 3

 Turn on/off the light

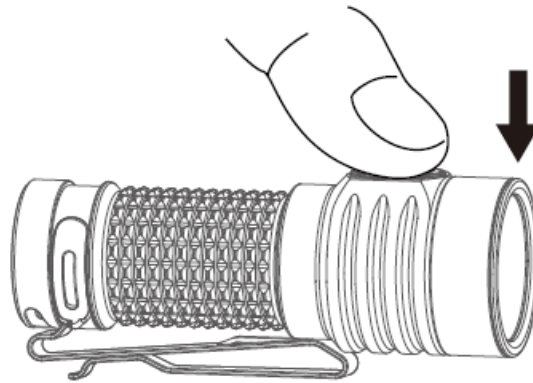

Press

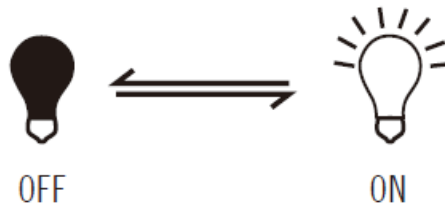 


Lock/Unlock, see Figure 4


To lock the flashlight, when it's off, press and hold the switch (for about 2 seconds) until the Moonlight mode turns on and off. In lockout mode, press the switch once to display the remaining battery level without turning on the flashlight. Press and hold the switch for 1 second or longer to unlock it and activate Moonlight mode.

Figure 4

 Lock/Unlock

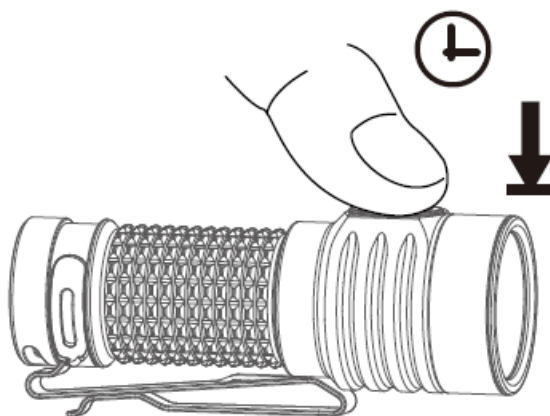

Press and hold

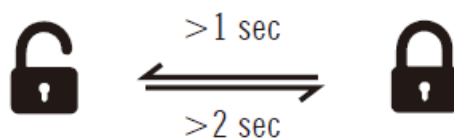 


Moonlight mode, see Figure 5


- To activate Moonlight mode, press and hold the button for 1 second or longer when the flashlight is off.
- If the last used mode was Moonlight mode, simply press the button.

Figure 5

 Moonlight mode

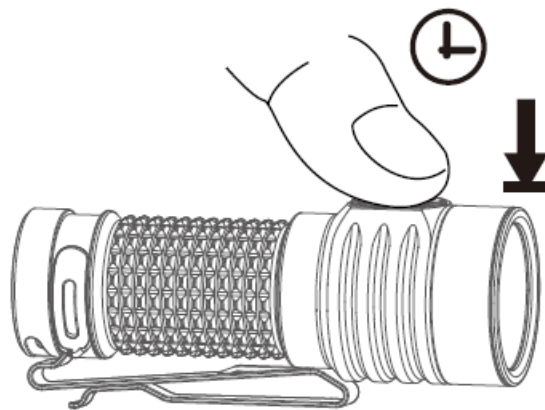

Press and hold

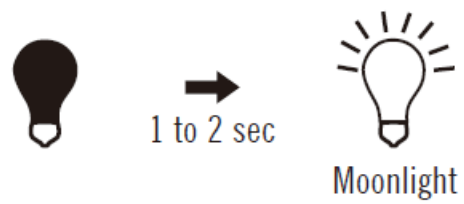 


Turbo mode, see Figure 6

- Quickly double-press the button to enter Turbo mode.

Figure 6

 Turbo mode

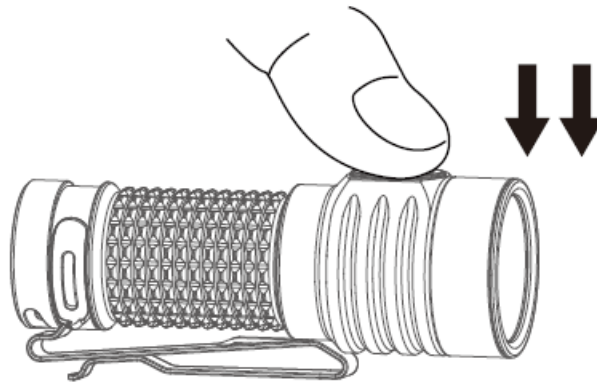

Double press quickly




Strobe mode, see Figure 7


- Quickly press the button three times or more to enter Strobe mode.
- Press the button once or hold it down to exit Strobe mode.

Figure 7

 Strobe mode

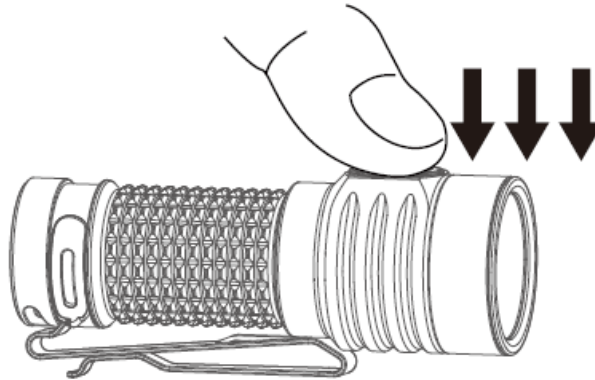

Press 3 times (or more) quickly

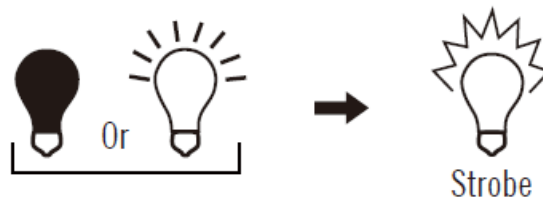 


Change the brightness level, see Figure 8


- When the flashlight is on, press and hold the button.
- The flashlight will cycle through Low, Medium, and High modes, starting from the present brightness level.
- Release the button to select the desired brightness level. (Note: Moonlight mode and Turbo mode are not included in this cycle).

Figure 8

 Change the brightness level

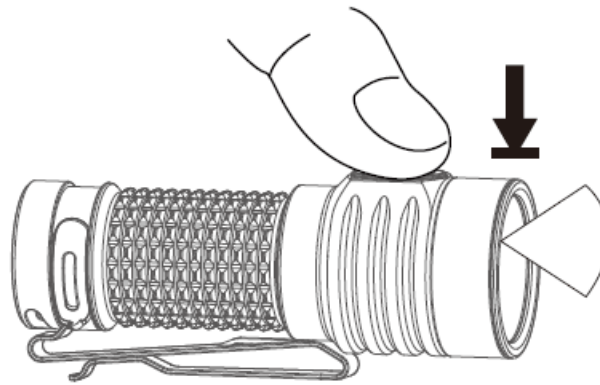

Press and hold

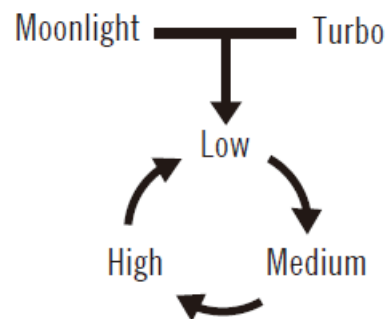 


Auto Shut-Off function, see Figure 9

The flashlight can be set to automatically turn off after two preset periods: a long period (9 minutes) and a short period (3 minutes). To activate the Auto Shut-Off function, double-press and hold the button when the flashlight is on. After the function is turned on, the light will flash once to indicate that the short period is set, and twice for the long period. To switch between timing periods, double-press and hold the button during a timing period. When reactivating the Auto Shut-Off function, the previous timing setting will be used.

Figure 9

 
Auto Shut-Off function

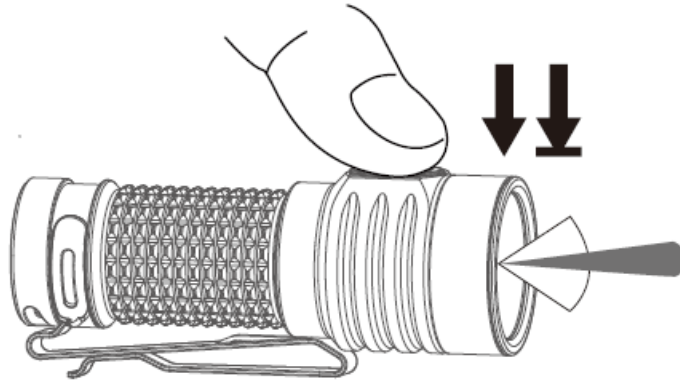

Double press and hold

Flash once : 3 min

 Flash twice : 9 min

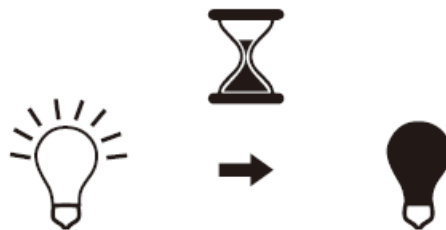


Indicators Instructions

Indicators instructions as below

1. Brightness level indicator, see Figure 10-1.

Figure 10-1

 
Brightness level indicator

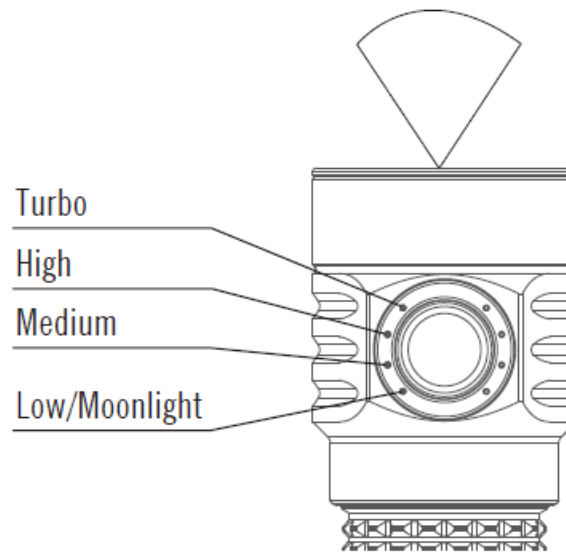

2. Battery level indicator, see Figure 10-2.

Figure 10-2

 Battery level indicator

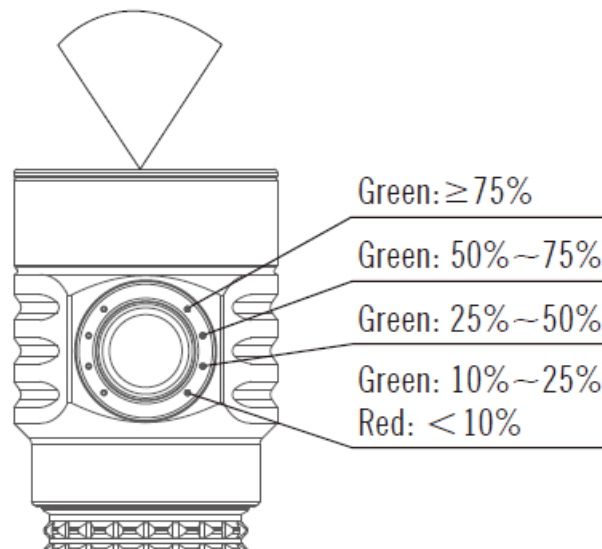


Note: When an Olight 18350 battery with a level below 10% is removed and reinserted, the light will detect it as a single-use battery, and the battery and brightness indicators will not light up when the light is turned on.

Disposal and Recycling Information

WEEE Disposal and Recycling Information

All products bearing this symbol are waste electrical and electronic equipment (WEEE as in directive 2012/19/EU) which should not be mixed with unsorted household waste.

 Instead, to protect human health and the environment, you should dispose of your waste equipment at a designated collection point for the recycling of WEEE, appointed by the government or local authorities. Proper disposal and recycling will help prevent potential negative consequences to the environment and human health. Please contact the installer or local authorities for more information about the location as well as terms and conditions of such collection points.

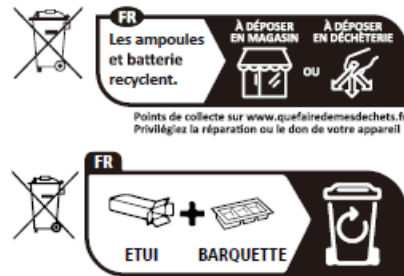

FCC STATEMENT

This device complies with part 15 of the FCC Rules.
Operation is subject to the following two conditions:

1. This device may not cause harmful interference.
2. This device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

ISED Notice

This device complies with Industry Canada's ICES standard(s). Operation is subject to the following two conditions:

1. this device may not cause interference.
2. this device must accept any interference, including interference that may cause undesired operation of the device.

This Class B digital apparatus complies with Canadian ICES-005.

Declaration of Conformity

EU Declaration of Conformity Hereby

Hereby Dongguan Olight E-Commerce Technology Co.,Ltd declares that the equipment [Baton Turbo] is in compliance with Directive 2014/30/EU and RoHS Directive 2011/65/EU & (EU) 2015/863. The full text of the EU declaration of conformity is available at the following internet address: <https://www.olight.com/download>.



Caution: Do not stare at operating light source.

WARRANTY

- We are proud to offer a lifetime warranty in Australia, China, France, Germany, and the USA. We are also working hard to expand coverage to more countries, where we provide a 2 or 5-year warranty.
- The warranty covers defects in material and workmanship under normal use, excluding loss, theft, deliberate damage, or cosmetic damage.
- For complete warranty information, please visit [Olight.com](https://www.olight.com) or your local Olight official website.

CONTACTS

- **Australia Customer Support**
 - contact@olightstore.com.au
- **Austria Customer Support**
 - kontakt@olightstore.at
- **Canada Customer Support**
 - cs@olightstore.ca
- **China Customer Support**
 - **Wechat:** olightcs
 - France Customer Support cs@olightstore.fr
- **Germany Customer Support**
 - kontakt@olightstore.de
- **Italy Customer Support**
 - contatto@olightstore.it
- **Japan Customer Support**
 - cs@olightstore.jp
- **Korea Customer Support**
 - olightkorea@olight.com
- **Spain Customer Support**
 - contacto@olightstore.es
- **Thailand Customer Support**
 - cs@olightstore.co.th
- **UK Customer Support**

- contact@olightstore.uk
- USA Customer Support
 - cs@olightstore.com

For other countries and regions, please contact Global Customer Support contact@olight.com


Dongguan Olight E-Commerce Technology Co., Ltd

- 4th Floor, Building 4, Kegou Industrial Park, No. 6 Zhongnan Road, Chang'an Town, Dongguan City, Guangdong, China.

Made in China



Documents / Resources

	<p>OLIGHT Version B Portable Long Range EDC Flashlight [pdf] User Manual</p> <p>Version B Portable Long Range EDC Flashlight, Version B, Portable Long Range EDC Flashlight, Long Range EDC Flashlight, Range EDC Flashlight, Flashlight</p>
--	---

References

- [Olight | Illuminate Your World.](#)
- [Flashlights, Tactical Light, Outdoor Tools - Olight Official Store- Olight](#)
- [User Manual](#)

Manuals+ Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.