



OLIMPIA SPLENDID RG57A4, RG57A6 Remote Control Owner's Manual

[Home](#) » [OLIMPIA SPLENDID](#) » OLIMPIA SPLENDID RG57A4, RG57A6 Remote Control Owner's Manual 

Contents

- [1 OLIMPIA SPLENDID RG57A4, RG57A6 Remote Control](#)
- [2 Remote Controller Specifications](#)[Operation of buttons](#)
- [3 Indicators on LCD](#)
- [4 How to use the buttons](#)
- [5 Timer operation](#)
- [6 Example of timer setting](#)
- [7 Handling the remote controller](#)
- [8 Documents / Resources](#)
- [9 Related Posts](#)

 


OLIMPIA SPLENDID RG57A4, RG57A6 Remote Control




Remote Controller Specifications

Model	RG57A4/BGEF, RG57A6/BGEF
Rated Voltage	3.0V(Dry batteries R03/LR03×2)
Signal Receiving Range	8m
Environment	-5°C~60°C

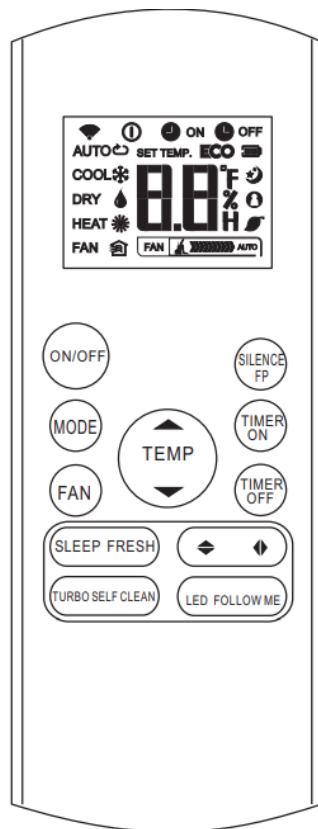


RG57A4/BGEF

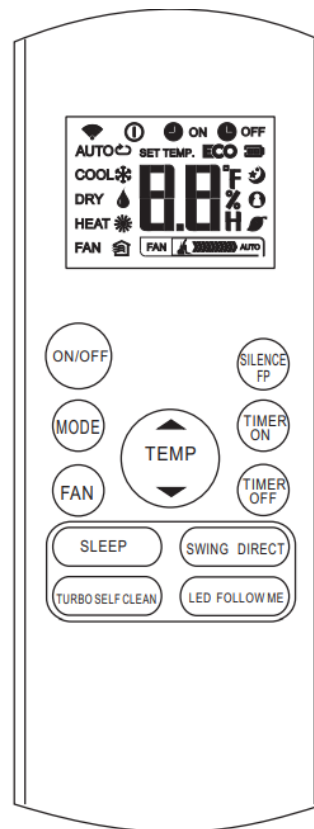 

RG57A6/BGEF

 Operation of buttons

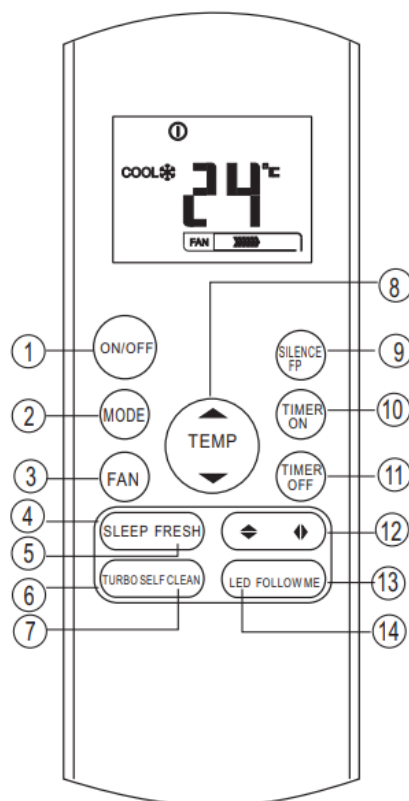


RG57A4/BGEF

1. ON/OFF Button

This button turns the air conditioner ON and OFF.

2. MODE Button

 Press this button to modify the air conditioner mode in a sequence of following



3. AUTO COOL DRY HEAT FAN

NOTE: Please do not select HEAT mode if the

→ AUTO → LOW → MED → HIGH →

Heat mode is not supported by the cooling only appliance. Button set speed or steps

NOTE: You can not switch the fan speed in AUTO Or DRY mode.

4. SLEEP Button

Active/Disable sleep function. It can maintain the most comfortable temperature and save energy. This function is available on Cool, HEAT or AUTO mode only. For the detail, see "sleep operation" in

"USER'S MANUAL"

NOTE: While the unit is running under SLEEP mode, it would be cancelled if MODE, FAN SPEED or ON/OFF button is pressed.

5. FRESH Button (applicable to RG57A4/BGEF)

Active/Disable FRESH Function. When the FRESH function is initiated, the Ionizer/ Plasma Dust Collector (depending on models) is energized and will help to remove pollen and impurities from the air.

 
6. TURBO Button Active/Disable Turbo function. Turbo function enables the unit to reach the preset temperature at cooling or heating operation in the shortest time if the indoor unit does not support this function, there is no corresponding operation happened when pressing this button.)

7. SELF CLEAN Button (applicable to RGS7A4/BGEF)

Active/Disable Self Clean function

8. UP Button (Push this button to increase the indoor temperature setting in 1°C increments to 30°C. DOWN

Button (Push this button to decrease the indoor temperature setting in 1°C increments to 17°C.

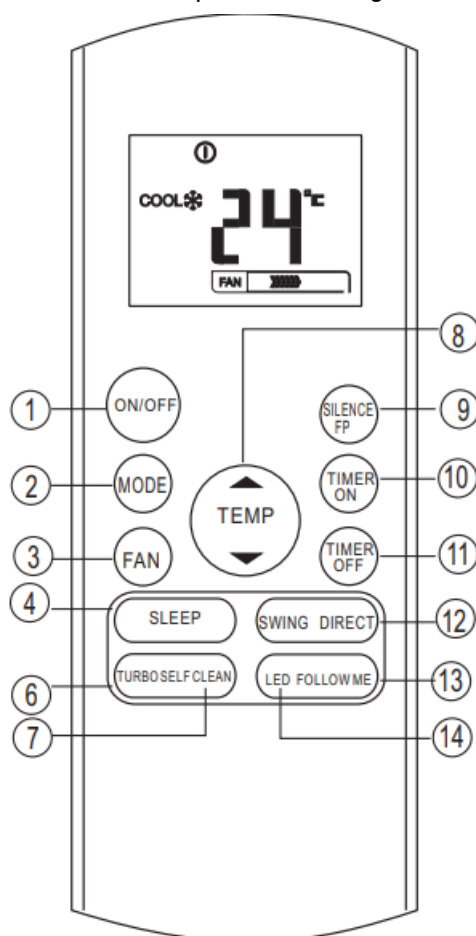

9. SILENCE/FP Button

Active/Disable SILENCE function. If pushing be activated, pushing more than 2 seconds again to disable.

When the Silence function is activated, the compressor will operate at low frequency and the indoor unit will

bring taint breeze, which will reduce the noise to the lowest level and create a quiet and comfortable room Tor you. Due to low requency operaton or compressor, it may result in insufficient cooling and heating capacity. The 'FP function can only be activated during the heating Operation(only when the setting mode is HEA.he unit will operate the buttons of ON/OFF, SLEEP. FP. MODE, FAN SPEED, UP or DOWN while operating will cancel the "FP" function.

10. **TIMER ON Button**

SS Duton to nidate the auto-on ease ill ir the auto-timed setting in 30 minutes increments. When the setting time displays 10.0, each press will increase the auto- timed setting 60 minutes increments. lo cancel the auto-timed program, simply adjust tne auto-on ume to 0.

11. **TIMER OFF Button**

Press this button to initiate the auto-off time sequence. Each press will increase the auto timed setting in 30 minutes inree wen eung e displays 60 minutes increments. To cancel the auto timed program, simply adjust the auto-off time to 0.0 Swing 4 Button(applicable to RG57A4/BGEF) Used to stop or start vertical louver movement and set the desired left/right air flow direction. The vertical louver changes 6 degree in angle TOr each press. For Some unitS, the temperature alsplay area or indoo unt displays Tor one second. T Keep pushing more than 2 seconas, the vertical louver swing Teature is activated. And the display area of indoor unit displays IIII, flashes four times, then the tempera- ture setting reverts back. If the vertical louver swing feature is stopped, it displays LC and remains on tor 3 seconds.

12. **Swingutton(applicable to RG57A4/BGEF)**

Used to stop or start horizontal louver move ment or set the desired up/down air Tiow direction. The louver changes 6 degree in angle tor each press. IT keep pushing more than 2 seconds, the louver will SWing up and down automatically. SWING Button(applicable to RG57A6/BGE) Used to stop or start horizontal louver auto Swng edure DIRECT Button(applicable to RG57A6/BGE) Used to change the louver movement and set the desired up/down air flow direction. The louver changes 6 in angle for each press.

13. **FOLLOW ME Button**

 
Push this button to initiate the Follow Me Teature, the remote display is actual temperature at its location. The remote control will send this signal to the air conditioner everymnues presseO E Ou ganne ai conaitioner will cancel the Folow Me teature automatically it it does not receive the signal during any/ minutes interval.

14. **LED Button**

Disable/Active indoor scree y pushing the button, the indoor screen display is cleared, press it again to light the display.When



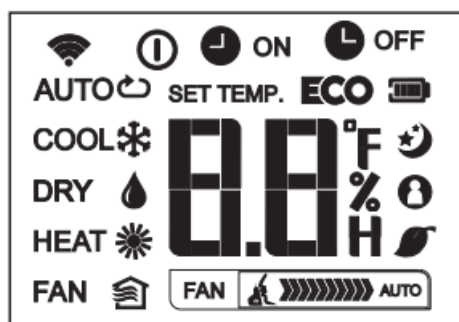

Indicators on LCD



Information are displayed when the remote controller is powered up.








Mode display

AUTO  COOL  DRY 
HEAT  FAN 





-  Displayed when data transmitted.
 -  Displayed when remote controller is ON.
 -  Battery display(low battery detection)
 -  Not available for this unit
-

-  ON Displayed when TIMER ON time is set.
-  OFF Displayed when TIMER OFF time is set.

 Show set temperature or room temperature, or time under TIMER setting.

-  Displayed in Sleep Mode operation.
 -  Indicated that the air conditioner is operating in Follow me mode
 -  Displayed when fresh feature is activated (some units)
 -  Displayed when silence feature is activated
-

 
Fan speed indication

- FAN  Low speed
 - FAN  Medium speed
 - FAN  High speed
 - FAN  AUTO Auto fan speed
-

Note:

All indicators shown in the figure are for the purpose of clear presentation. But during the actual operation only the relative functional signs are shown on the display window

How to use the buttons

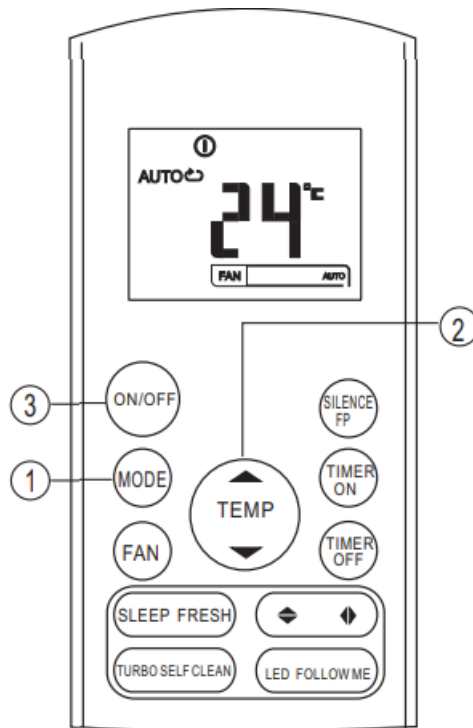

Auto operation

Ensure the unit is plugged in and power is available. The OPERATION indicator on the display panel of the indoor unit starts flashing.

1. Press the MODE button to select Auto.
2. Press the UP/DOWN button to set the desired temperature. The temperature can be set within a range of 17°C-30°C in 1°C increments.

 
Press the ON/OFF button to start the air conditioner

NOTE

In the Auto mode, the air conditioner can logically choose the mode of Cooling, Fan, and Heating by sensing the difference between the actual ambient room temperature and the setting

Cooling /Heating/Fan operation

Ensure the unit is plugged in and power is available.

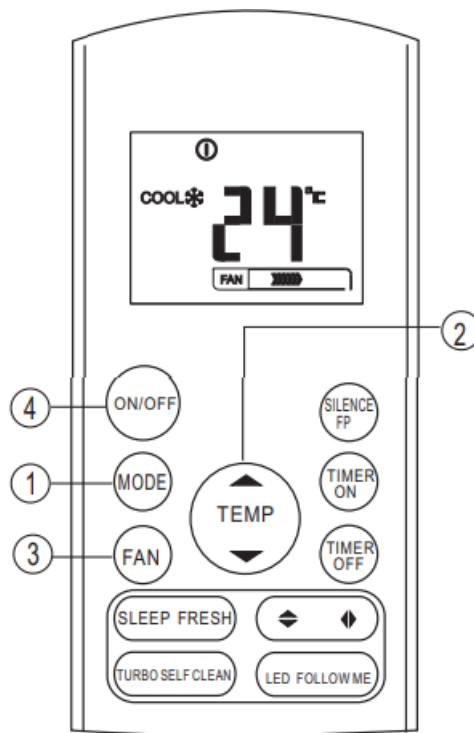


1. Press the MODE button to select COOL, HEAT(cooling & heating models only) or FAN mode.
2. Press the UP/DOWN buttons to set the desired temperature. The temperature can be set within a range of 17 C~ 30 C in 1 C increments.
3. Press the FAN button to select the fan speed in four steps- Auto, Low, Med, or High.
4. Press the ON/OFF button to start the air conditioner.

In the FAN mode, the setting temperature is not displayed in the remote controller and you are not able to control the room temperature either. In this case, only step 1, 3 and 4 may be performed.

Dehumidifying operation

 Ensure the unit is plugged in and power is available. The OPERATION indicator on the display panel of the indoor unit starts flashing.

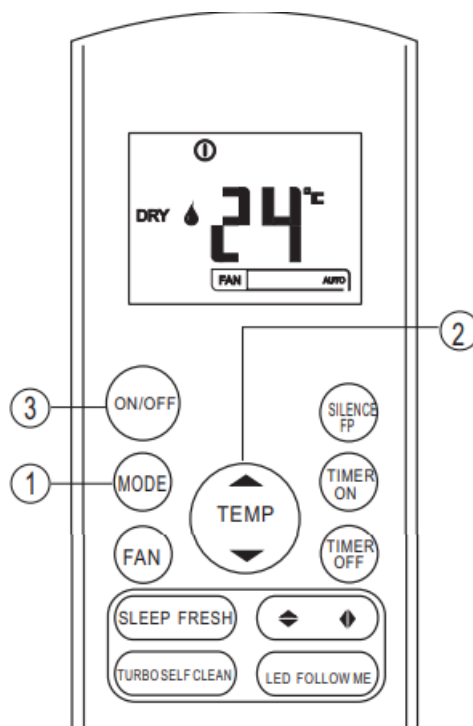

1. Press the MODE button to select DRY mode.
2. Press the UP/DoWN buttons to set the desired temperature. The temperature can be set within a range of 17°C-30°C in 1°C increments.
3. Press the ON/OFF button to start the air conditioner.

 
NOTE

In the Dehumidifying mode, you can not switch the fan speed. It has already been automatically controlled.

Timer operation

Press the TIMER ON button can set the auto-on time of the unit. Press the TIMEROFF button can set the auto-off time of the unit.

To set the Auto-on time.

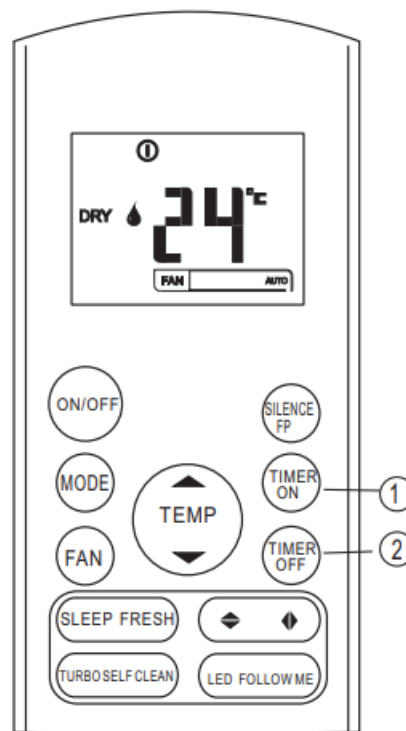

1. Press the TIMER ON button. The remote controller shows IMER ON, the last Auto-on setting time and the signal “H” ill be shown on the LCD display area. Now it is ready to reset the Auto-on time to START the operation.
2. Push the TIMER ON button again to set desired Auto-on tume. Each time you press the button, the time increases by half an hour between 0 and To nours and by one hour between 10 and 24 hours.
3. After setting the TIMER ON ,there will be a one second delay before the remote controller transmits the signal to the air conditioner. Then, arter approximately another 2 seconds, the Signal h” will disappear and the set temperatureill re-appear on the LCD display window.

To set the Auto-off time.

1. Press the TIMER OFF button. The remote controller shows TIMER OFF, the last Auto-off setting time and the signal “H” will be shown on the LCD display ai tho o0eration. the AutoO O OEE button again to SE per
2. Push the IIMER OFF button again to set desired Auto-off time. Each time you press the button, the time

 
increases by half an hour between 0 and 10 hours and by one hour between 10 and 24 hours.

3. After setting the TIMER OFF ,there will be a one second delay before the remote controller transmits the signal to the air conditioner. Then, after approximately another 2 seconds, the signal H"will disappear and the set temperature will re-appear on the LCD display window.

CAUTION

When you select the timer operation, the remote controller automatically transmits the timer signal to the indoor unit for the specified time. Therefore, keep the remote controller in a location where it can transmit the signal to the indoor unit properly. The effective operation time set by the remote controller for the timer function is limited to the following settings: 0.5, 1.0, 1.5, 2.0, 2.5, 3.0, 3.5, 4.0, 4.5, 5.0, 5.5, 6.0, 6.5, 7.0, 7.5, 8.0, 8.5, 9.0, 9.5, 10, 11, 12, 13, 14, 15,16,17, 18, 19, 20,21, 22, 23 and 24.

Example of timer setting

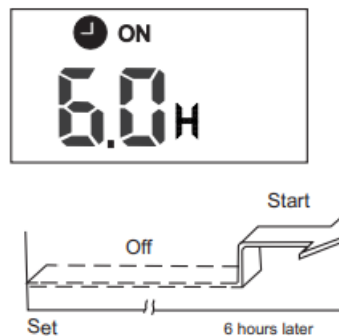

TIMER ON

(Auto-on Operation)

The TIMER ON feature is useful when you want the unit to turn on automatically before you return home. The air conditioner will automatically start operating at the set time.

Example:

 
To start the air conditioner in 6 hours.

1. Press the TIMER ON button, the last setting of starting operation time and the signal "H" will show on the display area.
2. Press the TIMER ON button to display "6.0H" on the TIMER ON display of the remote controller.
3. Wait for 3 seconds and the digital display area will show the temperature again. The "TIMER ON" indicator remains on and this function is activated.

TIMER OFF

(Auto-off operation)

The TIMER OFF feature is useful when you want the unit to turn off automatically after you go to bed. The air conditioner will stop automatically at the set time.

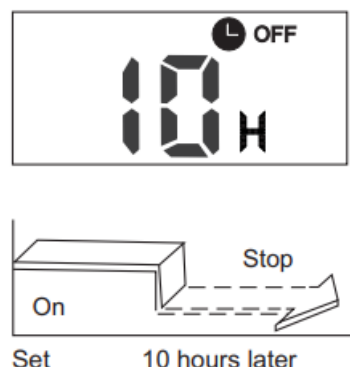

Example:

 
To stop the air conditioner in 10 hours.

1. Press the TIMER OFF button, the last setting of stopping operation time and the signal "H" will show on the display area.
2. Press the TIMER OFF button to display 10H on the TIMER OFF display of the remote controller.
3. Wait for 3 seconds and the digital display area will show the temperature again. The "TIMER OFF" indicator remains on and this function is activated.

TIMER OFF- TIMER ON

(On Stop Start operation)

This feature is useful when you want to stop the air conditioner after you go to bed, and start it again in the morning when you wake up or when you return home.

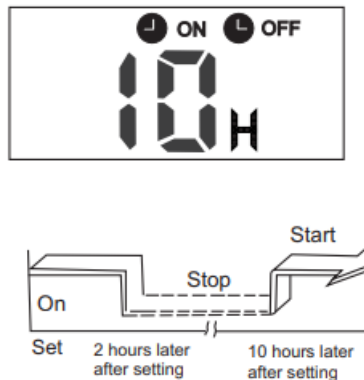


Example:

To stop the air conditioner 2 hours after setting and start it again 10 hours after setting.

1. Press the TIMER OFF button..
2. Press the TIMER OFF button again to display

COMBINED TIMER

 (Setting both ON and OFF timers simultaneously)

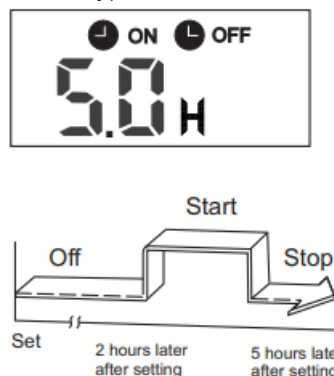


To stop the air conditioner 2 hours after setting and start it again 10 hours after setting.

1. Press the TIMER OFF button.
2. Press the TIMER OFF button again to display
3. 0H on the TIMER OFF display.
4. Press the TIMER ON button.

5. Press the TIMER ON button again to display 10H on the TIMER ON display. Wait for 3 seconds and the digital display area will show the temperature again. The "TIMER ON OFF" indicator remains on and this function is activated.

TIMER OFF

 2.0H on AER ON button. display .ress ne ODuton.

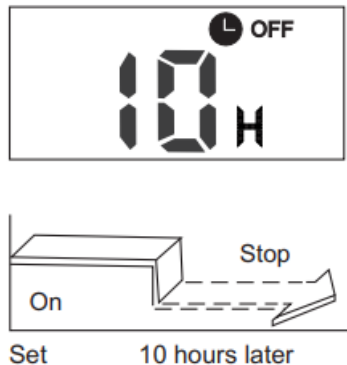

Example:

 
To start the air conditioner 2 hours after setting. and stop it 5 hours after setting.

1. Press the TIMER ON button.
2. Press the TIMER ON button again to display 0H on the TIMER ON display.
3. Press the TIMER OFF button.
4. Press the TIMER OFF button again to display 5.0H on the TIMER OFF display.
5. Wait for 3 seconds and the digital display area will show the temperature again. The "TIMER ON & TIMER OFF indicator remains on and this function is activated.

Handling the remote controller

Location of the remote controller.


Use the remote controller within a distance of 8 meters from the appliance, pointing it towards the receiver. Reception is confirmed by a beep.

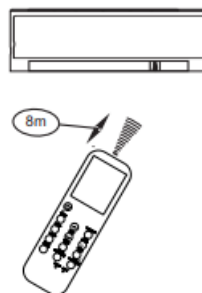

CAUTIONS

The air conditioner will not operate if curtains, doors or other materials block the signals from the remote controller to the indoor unit. Prevent any liquid from falling into the remote controller. Do not expose the remote controller to direct sunlight or heat. If the infrared signal receiver on the indoor unit is exposed to direct sunlight, the air conditioner may not function properly. Use curtains to prevent the sunlight from falling on the receiver. If other electrical appliances react to the remote controller, either move these appliances or consult your local dealer. Do not drop the remote controller. Handle with care. Do not place heavy objects on the remote controller, or step on it. Using the remote controller holder(optional) .The remote controller can be attached to a wall or pillar by using a remote controller holder(not supplied, purchased separately). Before installing the remote controller, check that the air conditioner receives the signals properly. Install the remote controller with two screws. For installing or removing the remote controller, move it up or down in the holder.

 
Using the remote controller holder(optional)

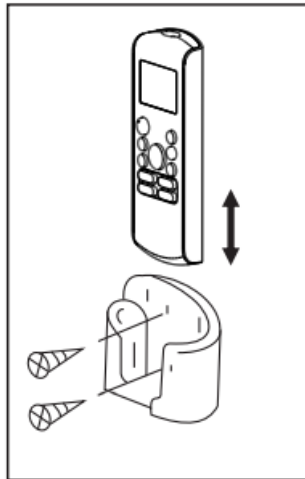

The remote controller can be attached to a wall or pillar by using a remote controller holder(not supplied, purchased separately). Before installing the remote controller, check that the air conditioner receives the signals properly. Install the remote controller with two screws. For installing or removing the remote controller, move it up or down in the holder.

Replacing batteries

 The following cases signify exhausted batteries. Replace old batteries with new ones. Receiving beep is not emitted when a signal is transmitted.

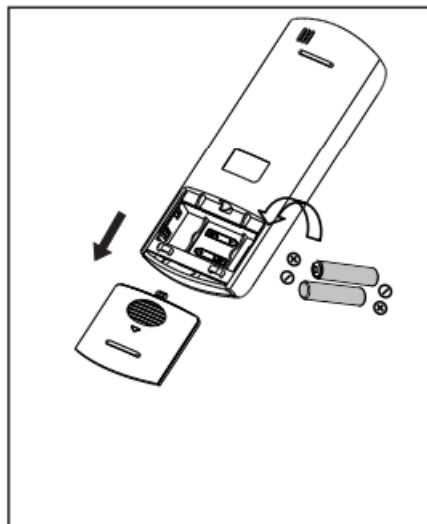

Indicator fades away.

The remote controller is powered by two dry batteries (R03/LR03x2) housed in the back rear part and protected by a cover.

1. Remove the cover in the rear part of the remote controller.
2. Remove the old batteries and insert the new batteries, placing the(+) and (-) ends correctly.
3. Install the cover back on.

NOTE: When the batteries are removed, the remote controller erases all programming. After inserting new batteries, the remote controller must be reprogrammed.

CAUTIONS

- Do not mix old and new batteries or batteries of different types.

- Do not leave the batteries in the remote controller if they are not going to be used for 2 or 3 months.
- Do not dispose batteries as unsorted municipal waste. Collection of such waste separately for special treatment is necessary.

OLIMPIA SPLENDID AUSTRALIA

80-84 BURLINGTON STREET OAKLEIGH VICTORIA


3166 AUSTRALIA

PH:(03) 9563 2778

EMAIL: sales@olimpiasplendid.com.au

Technical data and aesthetic characteristics of the products may change. Olimpia Splendid reserves the right to change them without notice.

Documents / Resources

	<p>OLIMPIA SPLENDID RG57A4, RG57A6 Remote Control [pdf] Owner's Manual Remote Control, RG57A4, BGEF, RG57A6, BGEF, RG57A4 RG57A6 Remote Control, RG57A4 Remote Control, RG57A6 Remote Control, Remote</p>
---	---

Manuals+.