Manuals+ — User Manuals Simplified.



omega OCI302PPTCOM 30cm Induction Cooktop User Guide


Home » Omega » omega OCI302PPTCOM 30cm Induction Cooktop User Guide 🖺

omega OCI302PPTCOM 30cm Induction Cooktop User Guide



Cooktop Overview

- A. Ø 200mm Zone X 1
- B. Ø 165mm Zone X 1
- C. 180X386mm FlexZone
- D. Cooktop Controls

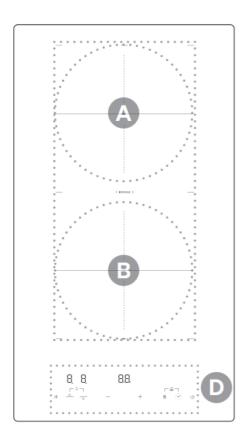


Contents

- 1 Cut-Out Diagram
- **2 Cooktop Controls**
- 3 Documents /
- Resources
 - 3.1 References

Cut-Out Diagram

For minimum distance requirements and safety advice, please refer to your supplied User Manual, pages 04–08.

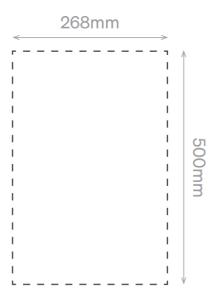

Cooktop Controls

8 -	Zone Selection Used to select and monitor which zones you would like to cook with.
-+	Temperature Controls Used to increase or decrease the temperature settings for zones.
В	Boost Function This function increases a zone's temperature to the maximum level for up to 5 minutes.
.:	Timer Function A kitchen timer and a way to automatically shut off zones after a set period of time.
	Child Safety Lock Prevent use, such as accidental activation by children. If used, all cooktop controls will be disabled except the Power button.
	Power Button Used to easily power the cooktop both on and off.

Details

Product Dimensions (W, D, H): 288 X 520 X 56 mm Cut-Out (W, D): 268 X 500mm | Warranty: 3 Years

Support

Telephone: 1300 11 HELP (4357)

Email: support@residentiagroup.com.au

Documents / Resources





omega OCI302PPTCOM 30cm Induction Cooktop [pdf] User Guide
OCI302PPTCOM 30cm Induction Cooktop, OCI302PPTCOM, 30cm Induction Cooktop, Induction Cooktop, Cooktop

References

User Manual

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.