



Omnirax E4 Stackable Rack Module Instructions

[Home](#) » [Omnirax](#) » Omnirax E4 Stackable Rack Module Instructions 


Omnirax E4 Stackable Rack Module Instructions




Contents

- [1 E4 / E6 / E10 – Schematic](#)
- [2 Documents / Resources](#)
- [3 Related Posts](#)


E4 / E6 / E10 – Schematic

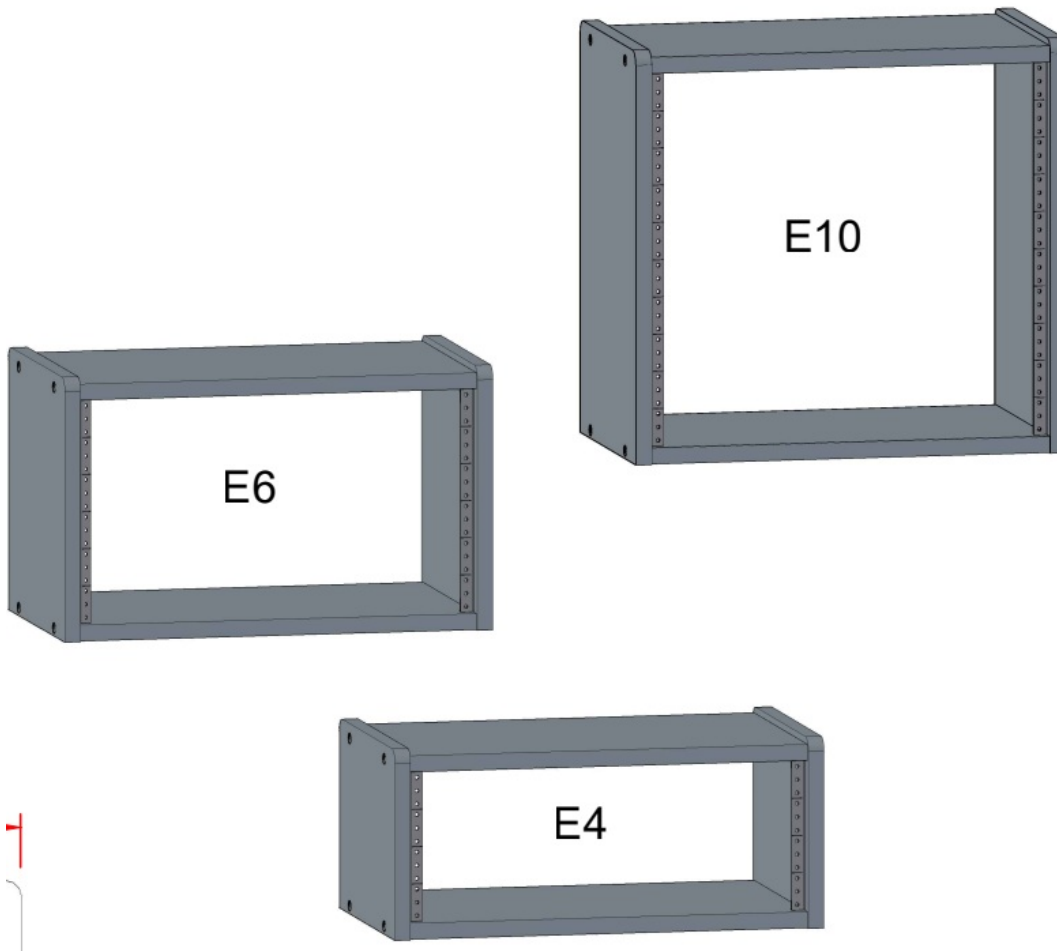


- CUTAWAY VIEW(E10 – Typ.)

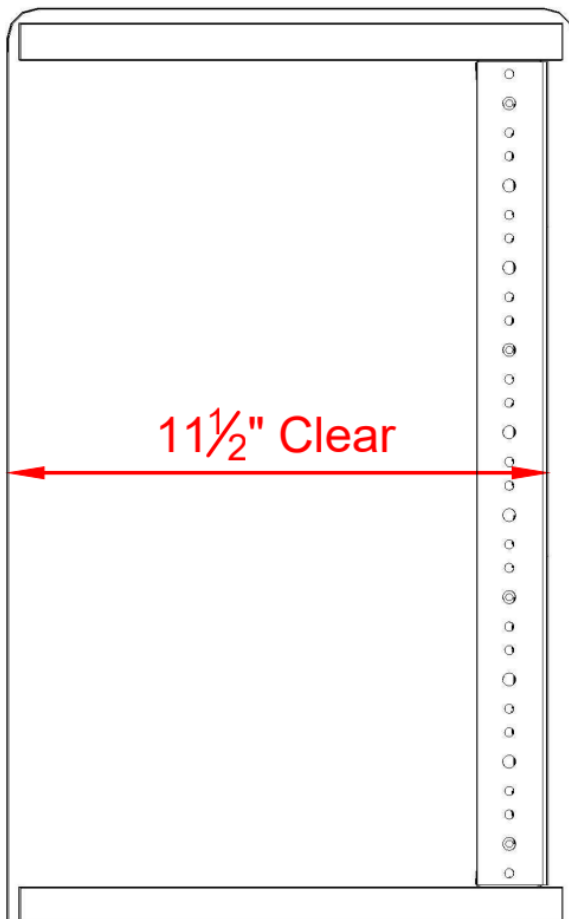


- SIDE VIEWS

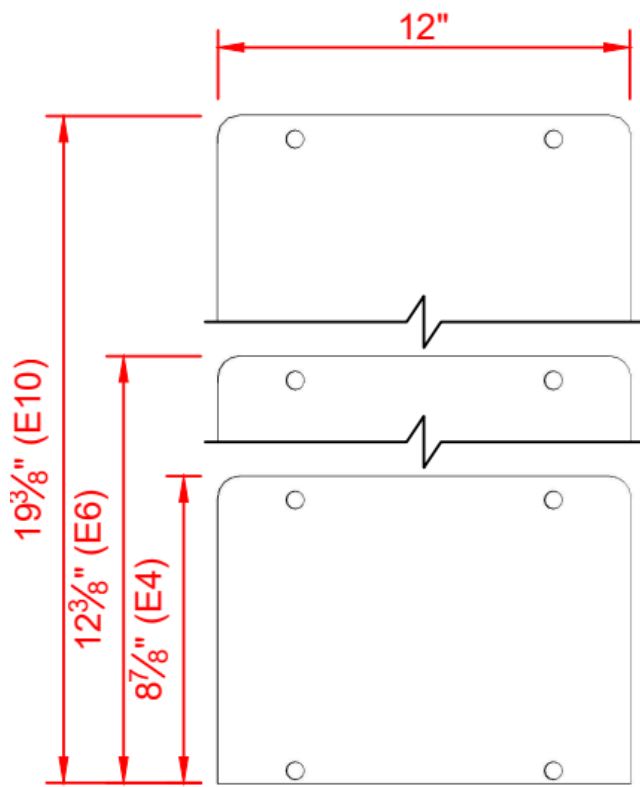


- FRONT VIEW – E4

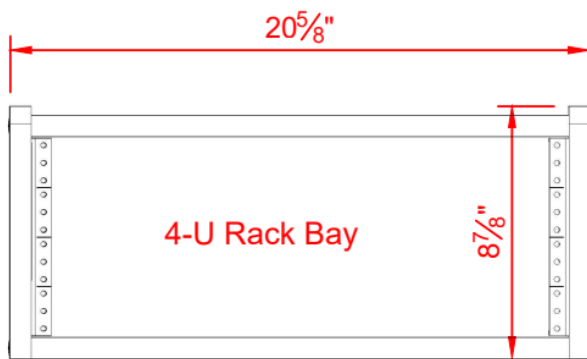


- FRONT VIEW – E6

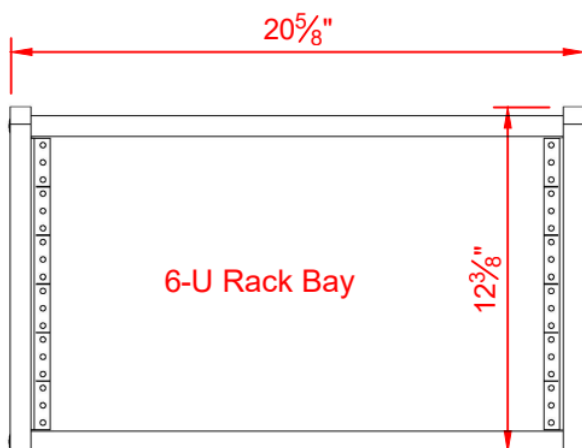

- FRONT VIEW – E10

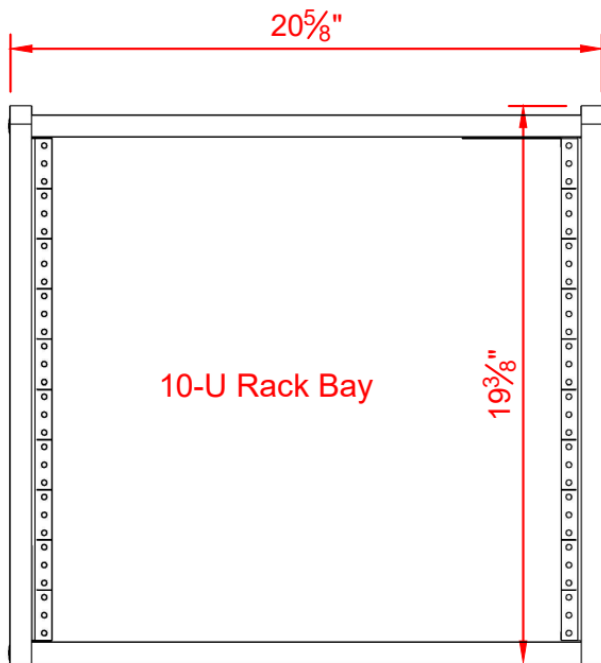


- TOP VIEW – E4 / E6 / E10

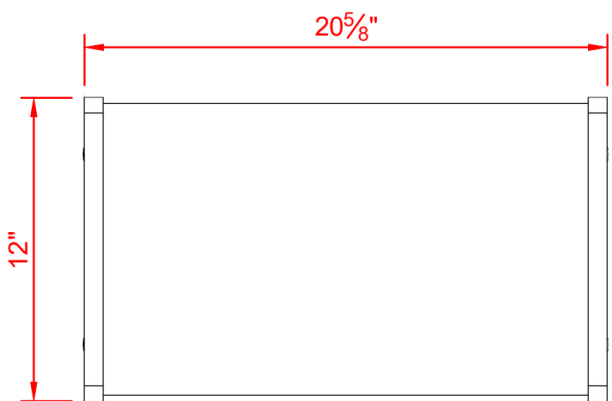

P.O. Box 1792, Sausalito, California 94966 USA
 415.332.3392 • 800.332.3393
www.omnirax.com • info@omnirax.com

Omnirax

Documents / Resources

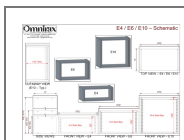

[Omnirax E4 Stackable Rack Module](#) [pdf] Instructions
 E4 Stackable Rack Module, E4, Stackable Rack Module, Rack Module, Module