



# ONE CONCEPT V355 Flat Micro System with CD Player User Manual

[Home](#) » [One Concept](#) » ONE CONCEPT V355 Flat Micro System with CD Player User Manual 



V355  
V-15  
Stereo System  
US-10029363  
US-10029364

ICH BIN EIN BERLINER\*

\* John F. Kennedy on June 26, 1963, in his speech in Berlin, on the occasion of the 15th anniversary of the Berlin Airlift.

Dear customer,

Congratulations on your purchase. Please read the following instructions carefully for the connection and use of this product. It is important to carefully follow these instructions to prevent serious personal injury or damage to the product. We assume no liability for damage caused by disregarding the instructions in this manual or otherwise for improper use of this product. In this case, you assume all risk and responsibility.



<https://use.berlin/US-10029363>

## Contents

- 1 TECHNICAL DATA
- 2 WARNING
- 3 WARRANTY
- 4 SAFETY INSTRUCTIONS
- 5 Special Instructions
- 6 CONTROLS
- 7 PREPARATION AND WALL MOUNTING
- 8 BASIC FUNCTIONS
- 9 RADIO
- 10 CD / USB
- 11 AUX IN
- 12 CLOCK/TIMER/SLEEP TIMER
- 13 Documents / Resources
- 14 Related Posts

## TECHNICAL DATA

Item number	US-10029363 US-10029364
Power supply	120 V/60 Hz
FM-Radio	87.5–108 MHz
BT frequency	2402-2480 MHz
BT radio-frequency power	max. 4.793 dBm

Made in China  
Berlin Brands Group Inc.  
101 Montgomery Street,  
Suite 2050 in San Francisco, CA 94104  
[www.berlin-brands-group.com](http://www.berlin-brands-group.com)

## WARNING





### CAUTION

RISK OF ELECTRIC SHOCK DO NOT OPEN

CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK AND SERIOUS PERSONAL INJURY, DO NOT REMOVE ANY COVER. NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL ONLY.

WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRICAL SHOCK, DO NOT EXPOSE THIS PRODUCT TO WATER, RAIN OR MOISTURE.


	<p>Triangle with a lightning plus explanation as follows:  <b>DANGEROUS VOLTAGE:</b> The lightning flash with the arrowhead symbol within the equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.</p>
	<p>Triangle with exclamation point plus an explanation as follows:  <b>ATTENTION:</b> The exclamation point within the equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying this product.</p>



**CAUTION**  
 To reduce the risk of electric shock do not use this plug with an extension cord or receptacle.

Ventilation Warning: Do not block any ventilation openings by situating the product on a bed, sofa, or similar surface that may block the ventilation openings; or place in built-in installation. The product should be situated so that its location or position does not interfere with its proper ventilation.

FCC Warning: This equipment may generate or use radiofrequency energy. Changes or modifications to this equipment may cause harmful interference unless the modifications are expressly approved in the instruction manual. The user could lose the authority to operate this equipment if an unauthorized change or modification is made.

	<p>This device has been tested and found to comply with Part 15 of FCC rules. Operation is subject to the following two conditions: (1) the device may not cause harmful interference and (2) the device must accept any interference received, including interference that may cause undesired operation. These FCC rules are designed to provide reasonable protection against harmful interference in a residential installation.</p>
---	--



**DANGER**  
 Invisible laser radiation can cause serious personal injury when open and if the interlock fails or is defeated! Avoid direct exposure to the beam. Use of controls or adjustments other than those specified herein may result in hazardous radiation exposure and serious personal injury.

**FCC RF exposure statement:**  
 The equipment complies with the FCC Radiation exposure limit set forth for uncontrolled environments. This equipment should be installed and operated with a minimum distance of 20cm between the radiator and your body.

**WARRANTY**

Berlin Brands Group (the “Company”) warrants to the original retail purchaser of this Product that should this Product or any part thereof, under normal use and conditions, be proven defective in material or workmanship within twelve (12) months from the date of original purchase, such defect(s) will be repaired or replaced with

reconditioned Product (at the sole discretion of the Company) without charge for parts and repair labor. To obtain repair or replacement within the terms of this Warranty, the Product is to be delivered with proof of warranty coverage (e.g. dated bill of sale), specification of defect(s), transportation prepaid, to the Company at the address provided herein

This warranty, as set forth above, may be extended for an additional six (6) months for a total warranty period of up to eighteen (18) months by registering the Product with the Company. In order to register the Product, the original retail purchaser must complete and return the registration documents provided along with the Product to the Company or register online at [www.auna-multimedia.com/warranty](http://www.auna-multimedia.com/warranty) within ninety (90) days of the original purchase.

This Warranty does not apply to any product or part thereof which, in the opinion of the Company, has suffered or been damaged through alteration, improper installation, mishandling, misuse, neglect, accident, or by removal or defacement of the factory serial number/bar code label(s).

THE EXTENT OF THE COMPANY'S LIABILITY UNDER THIS WARRANTY IS LIMITED TO THE REPAIR OR REPLACEMENT PROVIDED ABOVE AND, IN NO EVENT, SHALL THE COMPANY'S LIABILITY EXCEED THE PURCHASE PRICE PAID BY THE PURCHASER FOR THE PRODUCT. THIS WARRANTY IS IN LIEU OF ALL OTHER EXPRESS WARRANTIES OR LIABILITIES. ANY IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY, SHALL BE LIMITED TO THE DURATION OF THIS WRITTEN WARRANTY. ANY ACTION FOR BREACH OF ANY WARRANTY HEREUNDER INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY MUST BE BROUGHT WITHIN A PERIOD OF 18 MONTHS FROM THE DATE OF ORIGINAL PURCHASE. IN NO CASE SHALL THE COMPANY BE LIABLE FOR ANY CONSEQUENTIAL OR INCIDENTAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY. No person or representative is authorized to assume for the Company any liability other than expressed herein in connection with the sale of this product.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damage so the above limitations or exclusions may not apply to you. This Warranty gives you specific legal rights and you may also have other rights which vary from state to state.

## **SAFETY INSTRUCTIONS**

FAILURE TO CAREFULLY FOLLOW THESE INSTRUCTIONS MAY LEAD TO SERIOUS PERSONAL INJURY AND DAMAGE TO YOUR PRODUCT.

### **General Instructions**

- DANGER. NOT FOR USE BY CHILDREN UNDER THE AGE OF 18.
- For home and personal use only. Any other usage shall be construed as a misuse as set forth herein.
- For indoor use only. Outdoor usage shall be construed as a misuse as set forth herein.
- Read, keep, and follow the instructions carefully.
- Heed all warnings.
- Electrical equipment should never be kept or stored in rain or damp environments. Storage of the product under the aforementioned conditions shall be construed as neglect as set forth herein.
- Unplug the product during lightning storms or when not being used for long periods. Any actions to the contrary shall be construed as neglect as set forth herein.
- When servicing only use identical replacement parts, as specified by the manufacturer. Usage of any other parts shall be construed as an alteration as set forth herein.
- Do not expose to direct sunlight and do not install near any heat sources such as radiators, heat registers, stoves, or any other apparatus that produces heat. Conducting any of the foregoing shall be construed as a misuse as set forth herein.

- Before first use, clean the product. Failure to clean the product prior to its initial usage shall be construed as neglect as set forth herein.
- DO NOT PLUG IN THE PRODUCT UNLESS IT IS TURNED OFF COMPLETELY.
- DO NOT STORE FOOD OR LIQUIDS IN THE PRODUCT.
- DO NOT expose to dripping or splashing water. DO NOT place objects on top of the product. Conducting any of the foregoing shall be construed as a misuse as set forth herein.

## **Special Instructions**

- This manual is intended to familiarize you with the operation of this product. Keep this manual in a safe place for future reference.
- ONLY USE THE PRODUCT FOR ITS INTENDED PURPOSE. Any other usage shall be construed as a misuse as set forth herein.
- DO NOT MODIFY OR ALTER THE PRODUCT IN ANY WAY. Any attempt of the aforementioned shall be construed as an alteration as set forth herein.
- Always handle the product carefully. It can be damaged by bumps, impacts or falls from low height.
- Always keep the product away from moisture and extreme heat. Failure to protect the product from the aforementioned shall be construed as neglect as set forth herein.
- Do not drop metal objects into this device.
- Do not place heavy objects on this device.
- Do not block the ventilation openings. Blocking the ventilation openings shall be construed as neglect as set forth herein.
- Only use accessories recommended by the manufacturer or a specialist dealer. Usage of any unauthorized accessories shall be construed as an alteration as set forth herein.
- NEVER OPERATE THIS PRODUCT IF IT HAS BEEN DAMAGED OR IS NOT WORKING PROPERLY.

Small objects/packaging parts (plastic bags, cardboard, etc.)

- Keep small objects (for example, screws and other assembly materials, memory cards) and packaging parts out of reach of children so that they cannot be swallowed. Do not let small children play with plastic bags. Risk of suffocation.


## **Transporting the device**

- Please keep the original packaging. To ensure adequate protection when transporting the device, pack the device in its original packaging.


## **Cleaning the outer surfaces**

- Do not use volatile fluids, such as insect sprays. The surface can be damaged by excessive pressure during wiping. Rubber or plastic parts should not be left in contact with the device for an extended period of time. Use a dry cloth.


## **CONTROLS**

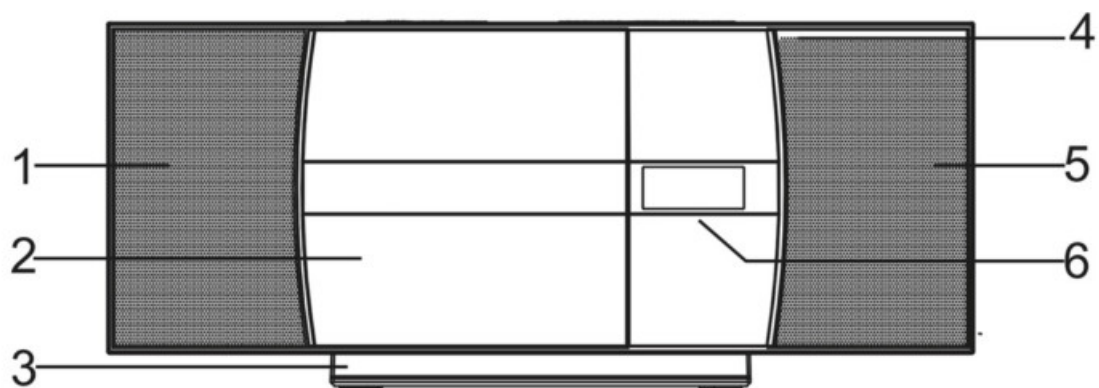


1	Left speaker	4	IR sensor
2	CD tray	5	Right speaker
3	Stand	6	Display

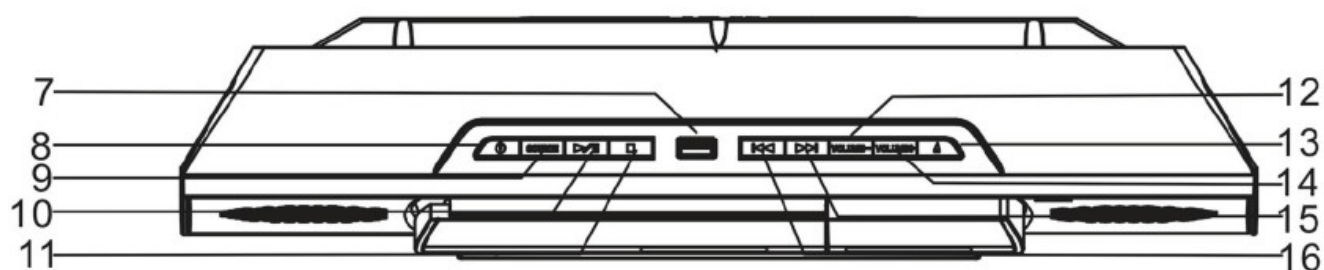

7	USB slot	12	VOL-
8	On / Standby	13	OPEN/CLOSE
9	MODE	14	VOL+
10	Play / Pause	15	▶▶
11	Stop	16	◀◀

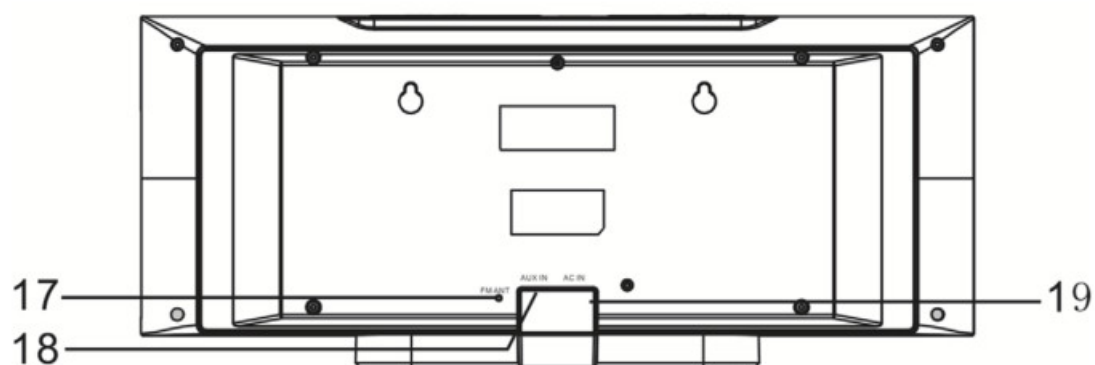 

17	FM antenna	19	AC IN
18	AUX-IN (3.5mm)		

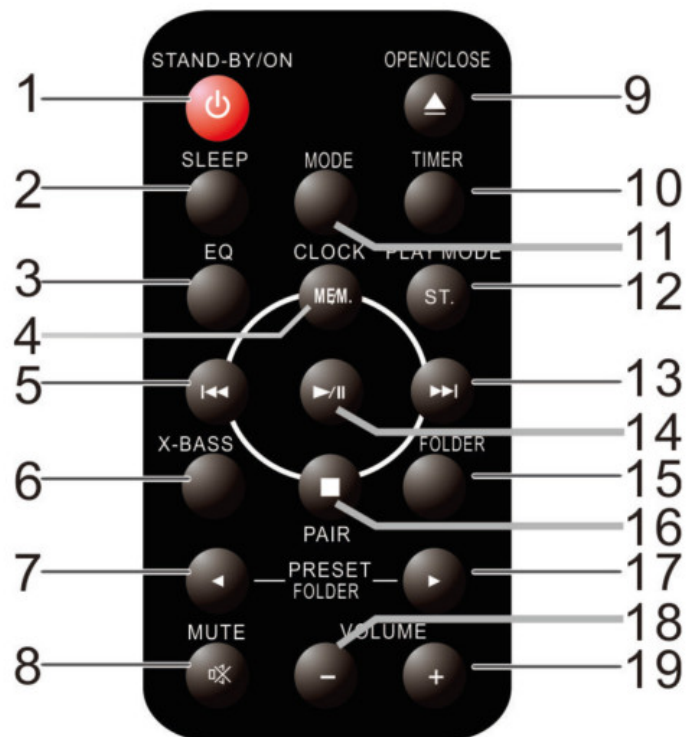 


1	On / Standby	11	MODE
2	SLEEP	12	PLAY MODE/ST/FM MONO
3	EQ	13	II>>
4	MEM / CLK	14	Play / Pause
5	I<<	15	FOLDER ON/OFF
6	X-BASS	16	Stop / (Pair)
7	Previous Preset / Folder	17	Next Preset / Folder
8	MUTE	18	VOL -
9	OPEN/CLOSE	19	VOL +
10	TIME		

## PREPARATION AND WALL MOUNTING
 
### Preparing the Remote Control

- first push to inside as the direction indicated by the arrow (See 1) and then remove the battery holder as the direction indicated by the arrow (See 2).
- Replace the battery Set a new battery property with (+) side up as illustrated (See 3).
- Insert the battery holder. Push in the holder to the original position (See 4).

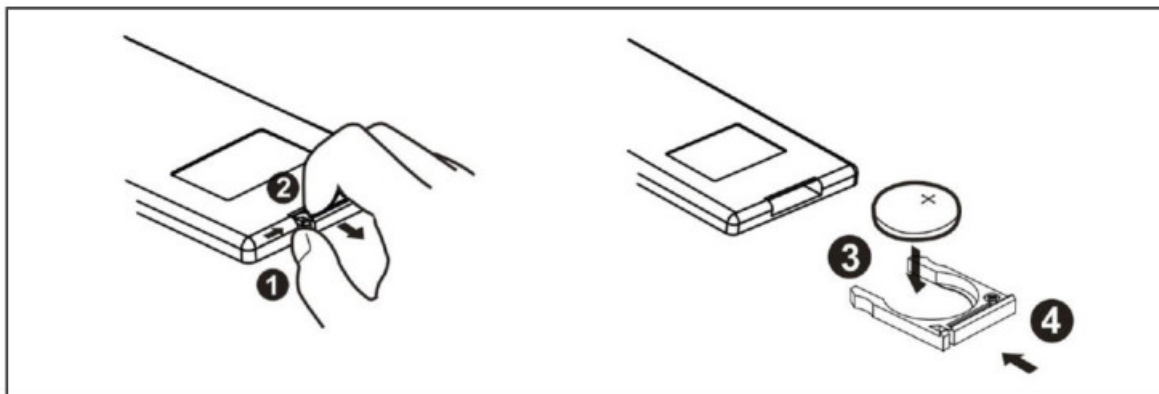


### Using the remote control

Hold the remote control towards the unit. Operating angle: Approx.  $\pm 30^\circ$  in any direction. Caution: The lithium battery has a foil to protect it during transport. Remove it before first use.

### Attaching the foot

Turn the unit over and attach the foot to the bottom: First insert the connectors into the openings provided and then push the foot towards the front of the unit until it clicks into place (see A). To remove the foot, reverse the procedure (see B).

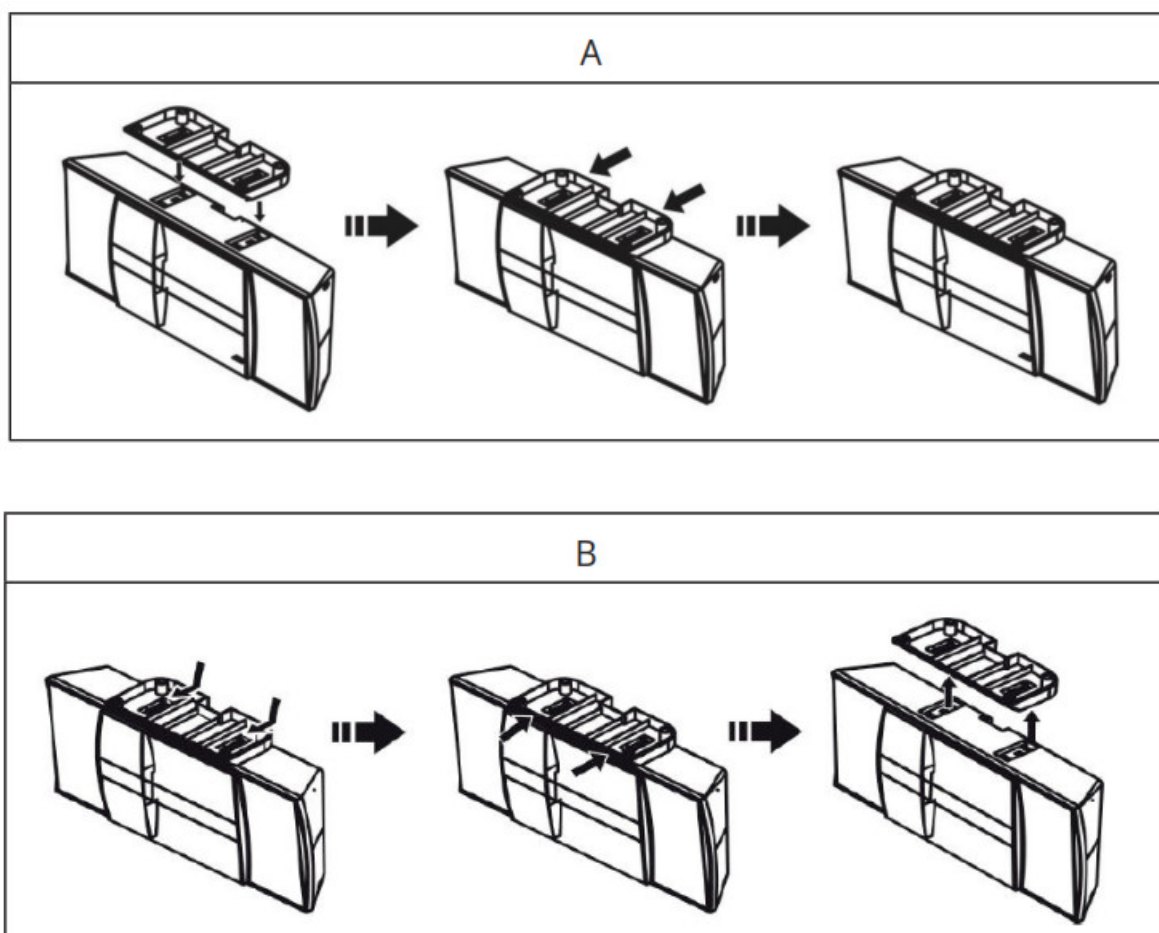

### Wandmontage

- You can remove the stand of the stereo system and mount the unit directly on a load-bearing wall. Ask a skilled / trained person for help if you are unsure.
- Use screws (2 screws are required) that match the wall material and use wall plugs.
- Make a drilling template or draw directly on the wall: The holes must be drilled on a horizontal line at a distance of 160 mm from each other.

Make sure that you choose the appropriate tools, suitable/suitable dowels etc.



- Remove the stand and hang the stereo system with the eyelets on the rear side of the stand on the heads of the screws that are not fully inserted in the plugs.

## BASIC FUNCTIONS

### MODE

Press MODE repeatedly for mode selection (Radio / CD / USB / AUX / BT).

VOL+/Press

**VOL+/-**

to adjust the output level.

### MUTE

Press MUTE to mute the sound output. Press again to un-mute.



### X-BASS

Press to toggle X-BASS on/off.




### EQ

Press repeatedly to toggle pre-set equalizing (Classic – Pop – Jazz – Rock – EQ off).

## RADIO

- Press the On / Standby button to switch on, then use MODE to select radio mode.
- Use the TUNE- button and TUNE+ button to search the frequency band for stations manually (press and hold for an automatic search in the respective direction).
- Save the current station to presets with MEM (hold for 2 seconds).
- Press MEM to go to presets. Select previously saved presets with the  /  buttons on the remote control.




## CD / USB

- Press On / Standby to switch the device on, then press MODE for the CD mode or USB mode.
- Press OPEN/CLOSE to open the CD tray and insert a CD with the printed side facing towards you. CDs will be read in automatically. Insert USB drives with music files into the USB slot on the top of the device.
- Control playback with  /  / .
- For MP3 CDs or USB drives with folders: use the RIGHT/LEFT buttons (7 / 17) to toggle folders.

### Play Mode

Press PLAY MODE to select one of the following play modes: REPEAT 1 (current track is repeated), REPEAT ALL (all contained tracks are repeated), RANDOM (all tracks are played in random order). A corresponding icon is shown on the display. Press PLAY MODE again to return to normal playback.


### Program Mode

You can program a playlist with up to 20 entries. Stop playback with and press MEM. Press  /  to select the desired title and press MEM again. Repeat this procedure up to 20 times and start playback with .

### BT

The BT function can be used to stream music from your smartphone / Tablet but does not allow the use as a hands-free kit.

- Turn on the power and press MODE to select BT mode.
- Activate BT on your BT device and connect to V-15.

- Control media playback from your external device or with the buttons  .
- Enter „0000“ if you are prompted to enter a password.

The unit automatically connects to the last connected BT device. To pair, press, and hold PAIR for 3 seconds. The BT LED flashes quickly: the unit is in pairing mode.

## AUX IN

- Press MODE repeatedly to select AUX mode.
- Connect the AUX wire from the out jack of your Personal Player such as a portable MP3 player to the AUX input jack.
- Turn on your player to begin playing, adjust the volume to the desired listening level.
- Adjust the volume by rotating the Vol +/- knob.


## CLOCK/TIMER/SLEEP TIMER

### Set the clock

- Switch to standby, then press and hold CLOCK for 2 seconds.
- Switch between the clock display in 12h or 24h mode, using the LEFT/ RIGHT buttons and confirm pressing CLOCK.
- Use / to set the hour and press CLOCK to confirm. Repeat for setting the minutes.

**Note:** The clock will be reset, when the device is disconnected from the AC outlet.


### Set timer

- Press TIMER to activate the timer function. The time indicator will appear on the display.
- Press and hold TIMER for two seconds, to set the timer. Set the hour with  and press TIMER to confirm. Repeat the procedure to set the minutes.
- Select the desired music source (Radio/CD/USB) with LEFT/RIGHT (7/17) and press TIMER to confirm.
- Set the desired volume with VOL+/- and press TIMER to confirm.

### Set Sleep timer

While the device is playing, press SLEEP repeatedly to switch on and set the sleep timer in steps of 10 minutes (90mins – 80mins – 70mins – ... – 10mins – off).

## Documents / Resources

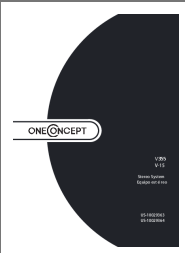	<p><a href="#">ONE CONCEPT V355 Flat Micro System with CD Player</a> [pdf] User Manual V355, 2APXVV355, V355 Flat Micro System with CD Player, Flat Micro System with CD Player, CD Player, Micro System</p>
---	--

