




ONE FOR ALL URC 1921 Sharp TV Replacement Remote User Guide

[Home](#) » [ONE FOR ALL](#) » ONE FOR ALL URC 1921 Sharp TV Replacement Remote User Guide 

ONE FOR ALL URC 1921 Sharp TV Replacement Remote User Guide



Contents

1 IMAGE & FUNCTION

2 STEP 1: SET UP YOUR TELEVISION


3 STEP 2: IF STEP 1 DOES NOT WORK AS EXPECTED

4 Documents / Resources

4.1 References

5 Related Posts

 IMAGE & FUNCTION

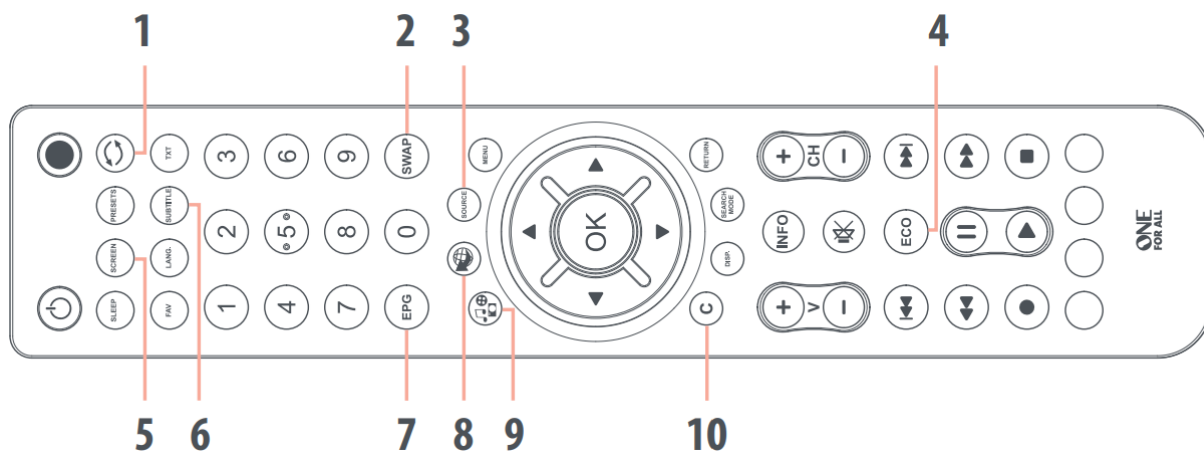

1. LINK

Link, HDMI Contro

2. SWAP

Last Channel, Previous Program

3. SOURCE

Source, Input Select

4. ECO

Eco Mod

5. SCREEN

Screen Size, 16:9

6. SUB

Subtitles

7. EPG

TV Guide

8. NET

 
Internet

9. MEDIA

Media Browse

10. C

Clear

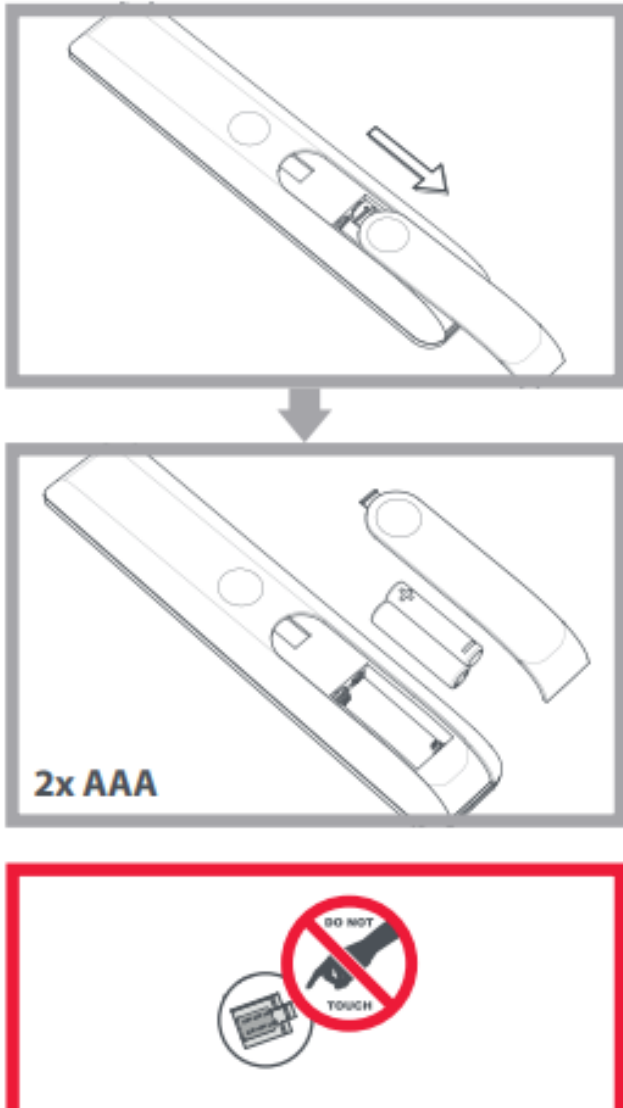


CAUTION:

Risk of explosion if battery is replaced by an incorrect type. Use quality Alkaline batteries.


STEP 1: SET UP YOUR TELEVISION

THE MAJORITY OF NEWER SHARP TVS SHOULD WORK DIRECTLY.

 After putting batteries in, just test some of the keys, and if they work, your remote is ready. If not, follow the next steps:

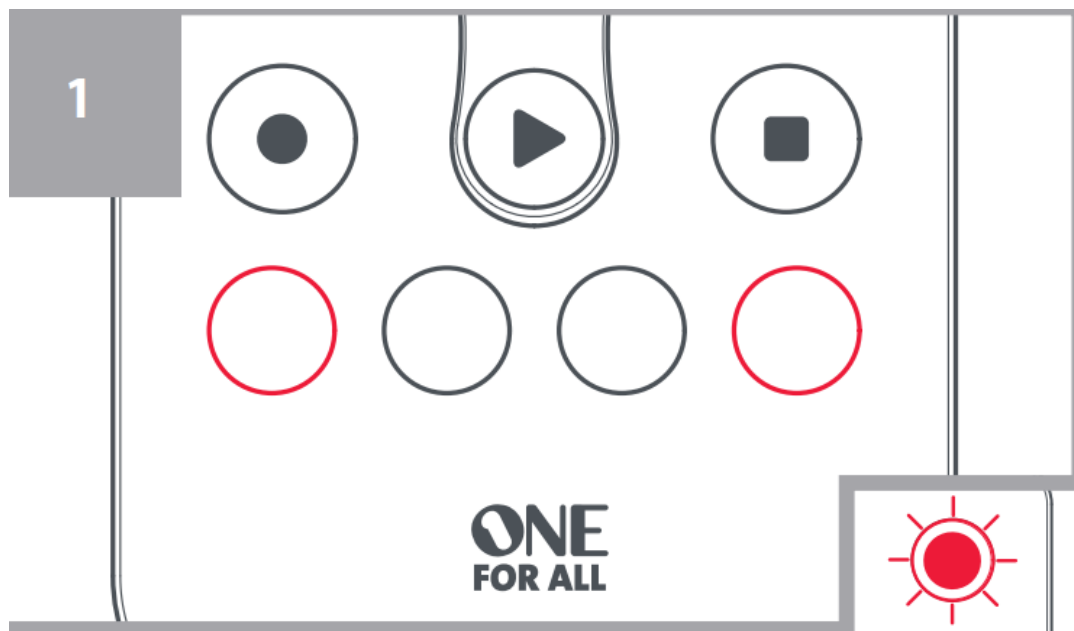

Make sure your TV is on
(not on standby).
Hold down RED + BLUE until the
LED blinks twice.

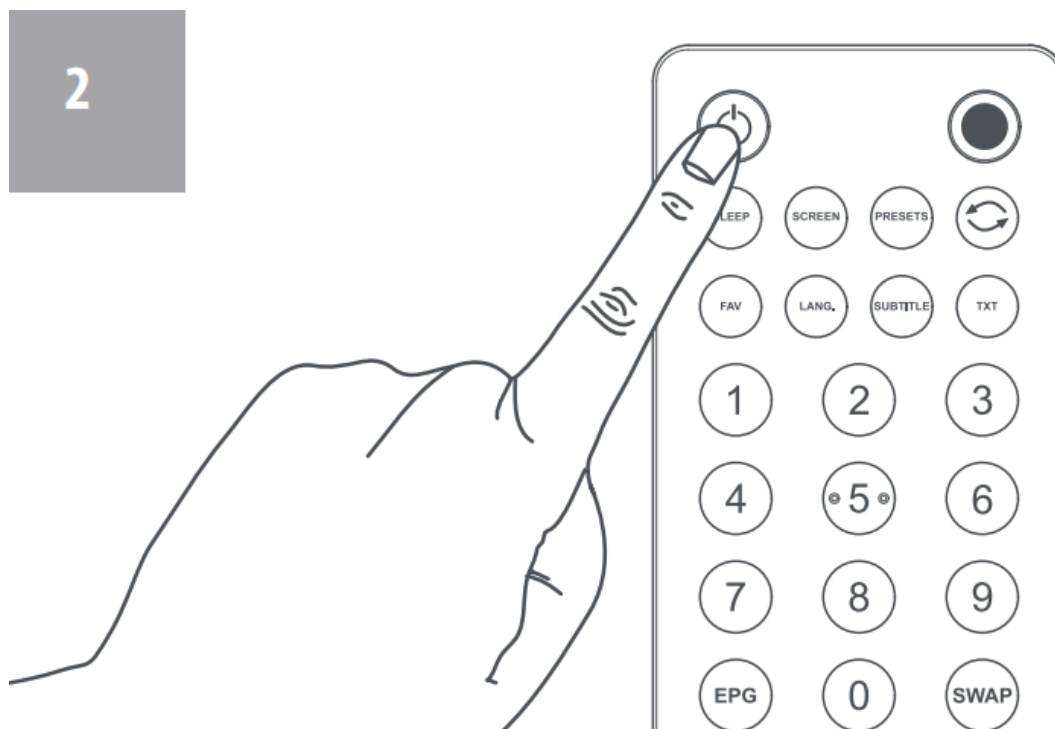

Point towards the TV and hold down the POWER KEY until the TV turns of The remote will send a different Power signal every 3 seconds. As soon as the TV turns off, let go of the POWER KEY. The LED will blink twice. Now test the rest of the keys on the remote. If they work as your original did, your remote is ready to use.


FINISH

If you find some keys still do not work as expected (or not at all), proceed to the next step


STEP 2: IF STEP 1 DOES NOT WORK AS EXPECTED

ARE SOME KEYS NOT WORKING AS EXPECTED?

If you find some keys do not work as expected (or not at all), proceed to the next step.

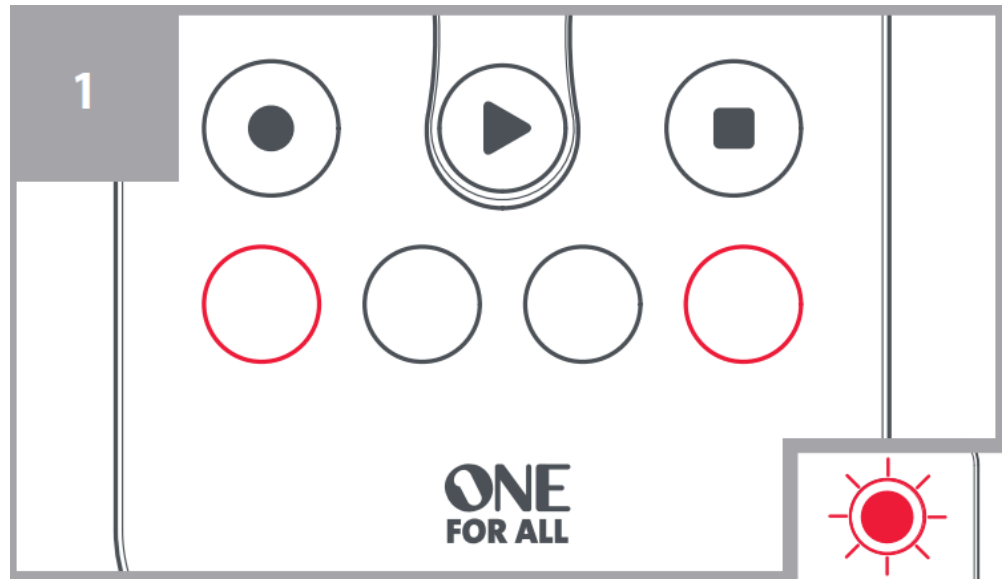

Make sure your TV is on (not on standby).
Hold down RED + BLUE until the LED blinks twice.

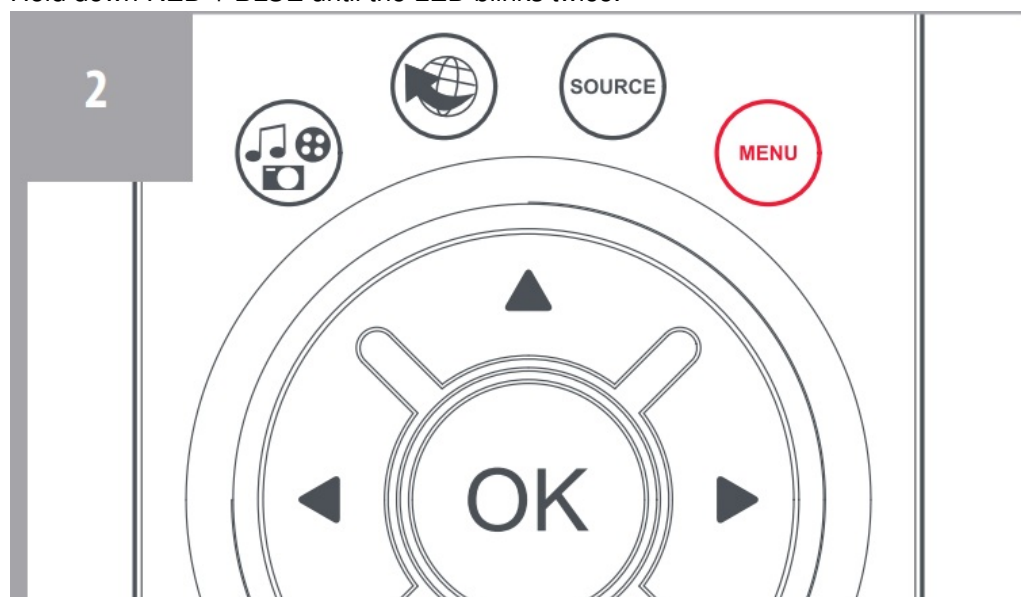

Point towards the TV and hold one of the keys that is not working correctly (for example MENU).
The remote will send a signal every 3 seconds.

When the correct function is shown on the screen (in this case the MENU), let go of the key.

The LED will blink twice – your remote is ready to use

FINISH

Connect with us



facebook.com/oneforallworldwide



@oneforall.worldwid



linkedin.com/company/one-for-all-worldwide



 
 
youtube.com/ user/oneforallprod

Universal Electronics BV – Europe & International P.O. Box 3332, 7500 DH Enschede The Netherlands 711255 RDN 1150323







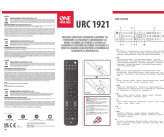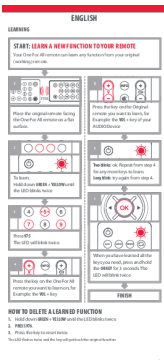



URC 1921 Sharp:

SHARP® is a registered trademark of Sharp Kabushiki Kaisha (Also known as Sharp Corporation)

Documents / Resources

	<p>ONE FOR ALL URC 1921 Sharp TV Replacement Remote [pdf] User Guide URC 1921 Sharp TV Replacement Remote, URC 1921, Sharp TV Replacement Remote, Replacement Remote, Remote</p>
	<p>ONE FOR ALL URC 1921 Sharp TV Replacement Remote [pdf] User Manual URC 1921 Sharp TV Replacement Remote, URC 1921, Sharp TV Replacement Remote, Replacement Remote, Remote</p>

References

-  [Call Center: outsourcing telemarketingu i obsługi klienta | ContactCenter](#)
-  [Web Server's Default Page](#)
-  [EMOS - drobné elektro pro vás | Nakupujte výhodně | EMOS](#)
-  [Világítástechnikai és elektronikai eszközök webáruháza | EMOS.hu](#)
-  [EMOS - drobné elektro pre vás | Nakupujte výhodne | EMOS.sk](#)
-  [Home | One For All](#)
-  [One For All Documents | One For All](#)
-  [Tehnocentar](#)
-  [Smartstyle.bg](#)
-  [EMOS kakovostni električni izdelki | EMOS - Slovenija](#)