



ONE FOR ALL URC6821 Big Button Universal Remote Control Owner's Manual

[Home](#) » [ONE FOR ALL](#) » ONE FOR ALL URC6821 Big Button Universal Remote Control Owner's Manual 

ONE FOR ALL URC6821 Big Button Universal Remote Control Owner's Manual



Contents

[1 KEY DESCRIPTIONS](#)

[2 SETUP](#)

[3 SIMPLESET](#)

[4 SETUP](#)

[5 ONE FOR ALL
DOCUMENTS](#)

[6 Documents / Resources](#)

[6.1 References](#)

[7 Related Posts](#)

KEY DESCRIPTIONS



CAUTION: Risk of explosion if battery is replaced by an incorrect type. Use quality Alkaline batteries.





1. **Power** Switches your devices on and off.
2. **Setup** This key is used to set up the Big Button remote.
3. **Device keys** These keys are used to select which device the Big Button Remote currently controls. After pressing the TV key, the remote will control your TV. To switch to controlling another device, simply press the appropriate key. The devices that can be programmed to each key are as follows:
TV: All televisions such as LED, LCD , Plasma, OLED etc.
STB: Set Top Boxes, including Satellite, Cable and Freeview. + Streaming devices such as an Apple TV, Roku Box, Foxtel Now etc. Also works Xbox 360 and Xbox One.
4. **Guide** TV Guide.
5. **Home** Displays the Home Menu.
6. **Apps** Brings up the Applications menu on Smart Devices such as Smart TVs or Streaming boxes.
7. **Menu** Access the installation menu of the current device.
8. **Back** Back one step in the Menu.
9. **Exit** Exits the menu.

- 10. **Menu Directions and OK** Control the menu of the current device.
- 11. **Volume Up and Down** Control the volume of the current device.
- 12. **Channel Up & Down** Change channels on the current device.
- 13. **Mute** Mutes the volume of the current device. You can also set up this key to always control one device.
For details see the Volume Lock feature.
- 14. **Last Channel** Changes to the last channel viewed.
- 15. **Digits** Select channels on the current device.
- 16. **TV** Return to live TV.
- 17. **Input** Used to select Input on devices.

SETUP

The Big Button Remote remote is pre-programmed to control some of the most popular devices out of the box. If you have one of the following devices try putting the batteries in and pressing the device key, and then press a few keys to see if the remote works your device:

 
| Device Key To Press | Device controlled |
|--|-------------------|
|  TV | Samsung TV |
|  STB | Sky Q Box |

If your device is not one of those listed above, or you have extra devices to set up, there are 2 ways to do this. The easiest is SimpleSet which is used for the common brands and devices.

SIMPLESET

If the brand of your device is shown in the SimpleSet picture pointing to a key, you can use the SimpleSet system described in this section, please locate the brand of your device and note the key associated with it.


TV

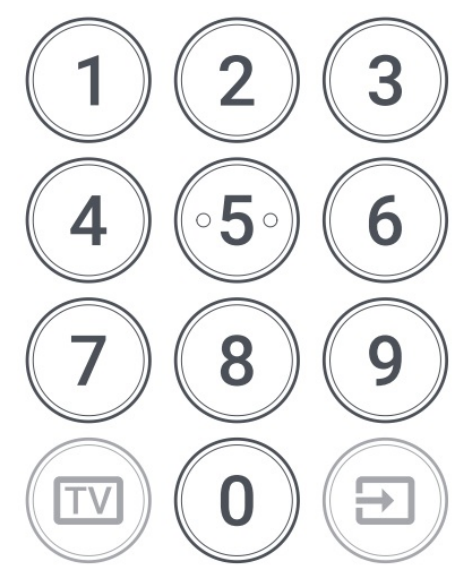

- 1. Bush

2. Grundig
3. JVC
4. LG
5. Panasonic
6. Philips
7. Samsung
8. Sharp
9. Sony
10. Toshiba

 STB

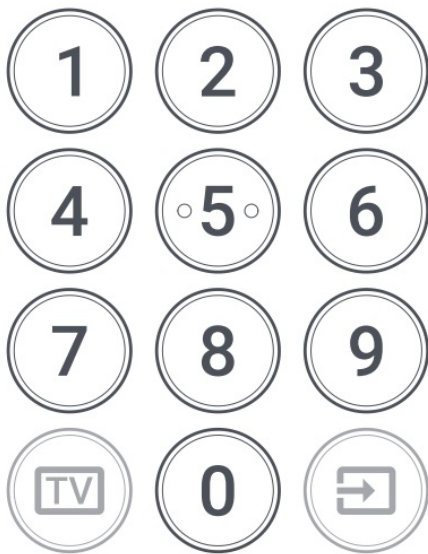




1. BT / Humax / TalkTalk / Tricolor TV / YouView
2. Canal+ / CanalSat / Deutsche Telekom / Movistar / T-Home
3. DStv / Foxtel / Multichoice / Sky New Zealand
4. Freebox / Sky Deutschland / Sky Österreich / TechniSat
5. Kabel Deutschland / Vodafone
6. KPN / Sagemcom / SFR
7. Orange / Samsung
8. Sky Ireland / Sky Italia / Sky UK / Sky Deutschland
9. Strong / Vu+
10. Telenet / UPC / UPC Cablecom / Virgin Media / Ziggo

SETUP

SIMPLESET








To set up your device:

1. Turn on your device (not on standby) and point the Big Button remote towards it.
2.  Press the Device key you wish to set up (for example TV).

3.  Hold down the Setup key until the LED under the Device key blinks twice.
 4.  Hold down the digit for your brand and device as listed in the tables above – e.g. 7 for a Samsung TV.
 5. The remote will send the Power key every 3 seconds.
 6. As soon as your device reacts by turning off release the digit.
 7. The LED will blink twice and the remote should now operate your device.
- If you find one or more keys do not work as you expect, start again at step 2 – the remote will start with the next code in the memory.

SETUP BY CODE

If the brand of your device is not listed in the SimpleSet feature, you can set up by trying codes individually. To do this firstly locate your brand in the Code List. Codes are listed by brand and device, and in order of popularity.

 
1. Turn on your device (not on standby) and point the Big Button remote towards it.
2.  Press the Device key you wish to set up (for example TV).
3.  Hold down the Setup key until the LED under the Device key blinks twice.
4.     Enter the first 4 digit code listed for your brand (e.g. 1840 for LG).
5. The LED will blink twice on the last digit of the code.
6.  Now aim the remote towards your device and press the Power key.
7. If the device turns off your remote is ready to use. If not, repeat steps 2-6 with the next code in the list.






LEARNING

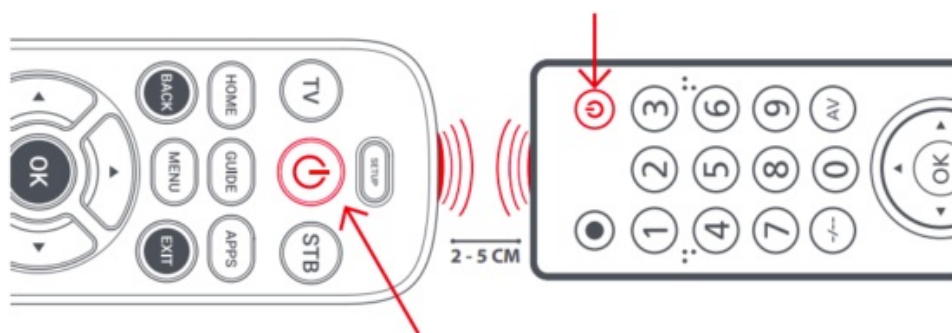


Your Big Button remote control can learn any function from any other working remote control. This is a quick and easy one-time setup that allows to control any infrared controlled device you have in your living room. It also allows you to add a key or keys that may be missing to a spare key on the Big Button.

To do this, firstly make sure you have all your original remote controls to hand, and that they have working batteries in.

To learn functions, the original remote should be approximately 3cm from the Big Button remote, pointing towards it:



1.  Press the Device key for the device you want to learn functions onto.
2.  Hold down the Setup key until the LED under the Device key blinks twice.
3.    Press 975 – the LED should blink twice.

4.  Press and release the key you want to learn a function onto (for example the TV Power key) – the LED will begin to flash rapidly.
5.  Press and release* the corresponding key on the original remote, for example Power.
6. The LED will blink twice to indicate the key has been learned correctly.
7. Repeat steps 4 and 5 for each key you want to learn – remember you can learn from multiple remotes, but only one function per key.
8.  When you have learned all the functions you require, press and hold Setup key until the LED blinks twice.





* Some remotes send commands differently. If you find a function cannot be learned, try holding down the key on the original remote instead of pressing and releasing.

Hints:

- If the LED shows one long blink at step 5, the function was not learned correctly, please try again from step 4.
- If you find one or more keys don't work properly after set up, you can re-enter the learning mode at any time by repeating the procedure from step 1.
- If one or more of your original remotes aren't working, you can still set up the Big Button remote by SimpleSet or Code Set Up.

Deleting a learned function

If you want to delete a learned function and return that keys to its original state, you can use the following procedure:

1. Press the Device key for the device you want to learn functions onto.
2.  Hold down the Setup key until the LED under the Device key blinks twice.
3.    Press 976 – the LED should blink twice
4. Press the key you want to reset twice – the LED should blink twice and the learned function has been deleted.

SOUND BAR / AUDIO RECEIVER VOLUME CONTROL

If you have your TV connected to a Sound Bar or Audio Receiver, it's possible to set up your One For All remote to control the Volume and Mute of this device. There are two ways to do this:




AUDIO SIMPLESET

If you have a Sound Bar or Audio Device from one of the brands listed in the table below, you can use the SimpleSet method to program your remote to control it. If you do not have one of the below brands, please proceed to the next section.

| Digit | Brand |
|-------|-------------------------------|
| 1 | Bose |
| 2 | Denon |
| 3 | Samsung / Harman/Kardin / JBL |
| 4 | LG / JVC |
| 5 | Marantz / Philips |
| 6 | Noko |
| 7 | Panasonic / Technics |
| 8 | Pioneer |
| 9 | Sony |
| 0 | Yamaha |

Note that each of the brands has a digit associated with it, for example 4 for LG (and JVC).



To set up your remote to control your Sound Bar / Audio Device, first make sure your TV and Sound Bar / Audio Device are both powered on, and that there is something playing that you can hear (this procedure will test the Mute function). Next:

- 
 1. Hold down the **SETUP** and **VOLUME UP** buttons together until the LED blinks twice.
- 
 2. Now point the remote towards your Sound Bar / Audio Devices and hold down the digit key for your brand (for example 4 for LG). The remote will send the Mute function to your device every 3 seconds.
3. As soon as your Sound Bar / Audio Device mutes the volume, release the digit key. The LED under the Power key will blink twice.
- 
 4. Next, hold down the **SETUP** and **VOLUME DOWN** keys until the LED blinks twice. The volume up, down and Mute keys should now control your Audio Device.

AUDIO CODE SETUP

If your Sound Bar / Audio Device is not one of the brands listed above, you can also set up the remote to control it by entering a 4 digit code.

The codes are listed in the Audio Codelist section of this manual, and are listed by brand and then popularity. Locate the brand of your Sound Bar / Audio Device in this code list and then the procedure is:

- 
 1. Hold down the **SETUP** and **VOLUME DOWN** keys until the LED blinks twice.
- 
 2. Hold down the **SETUP** and **VOLUME UP** keys until the LED blinks twice.

3. Enter the first 4 digit code for your Sound Bar / Audio Device. The LED should blink twice on the last digit.



4. Now try the **Volume Up, Down** and **Mute** and see if they control your Sound Bar or Audio Device.

5. If they work, your remote is set up. If not try again from step 1 using the next code in the list.

RESET VOLUME CONTROL

To reset the volume control to the original setting:



Hold down SETUP and VOLUME DOWN keys until the LED blinks 4 times. Volume control is now reset.

ONE FOR ALL DOCUMENTS



<https://www.oneforall.com/documents>

For safety precautions , product disposal , recycling and warranty information please see the separate sheet included.



[facebook.com/](https://facebook.com/oneforallworldwide)
oneforallworldwide



[@oneforall.worldwide](https://www.instagram.com/oneforall.worldwide)



[linkedin.com/](https://www.linkedin.com/company/one-for-all-worldwide/)
company/one-for-all-worldwide/




[youtube.com/](https://www.youtube.com/)



Universal Electronics BV – Europe & International P.O. Box 3332, 7500 DH Enschede The Netherlands



Documents / Resources



| Language | Page |
|-------------|------|
| ENGLISH | 2 |
| DEUTSCH | 10 |
| FRANCAIS | 18 |
| ESPAÑOL | 26 |
| ITALIANO | 34 |
| PORTUGUES | 42 |
| HOLLANDS | 50 |
| DANSK | 54 |
| SVENSK | 60 |
| SLOVENSKO | 66 |
| ČESKY | 72 |
| ROMÂNĂ | 78 |
| ΕΛΛΗΝΙΚΑ | 84 |
| ՀԱՅԿԱՅԵՐԱՆԿ | 90 |
| ՀԱՅԿԱՅԵՐԱՆԿ | 96 |
| ՀԱՅԿԱՅԵՐԱՆԿ | 102 |
| ՀԱՅԿԱՅԵՐԱՆԿ | 108 |
| ՀԱՅԿԱՅԵՐԱՆԿ | 114 |
| ՀԱՅԿԱՅԵՐԱՆԿ | 120 |
| ՀԱՅԿԱՅԵՐԱՆԿ | 126 |
| ՀԱՅԿԱՅԵՐԱՆԿ | 132 |
| ՀԱՅԿԱՅԵՐԱՆԿ | 138 |

[ONE FOR ALL URC6821 Big Button Universal Remote Control](#) [pdf] Owner's Manual URC6821 Big Button Universal Remote Control, URC6821, Big Button Universal Remote Control, Universal Remote Control, Remote Control, Control

References

-  [Breitband](#)
-  [Internet, TV en Bellen via Glasvezel of DSL | Fiber NL](#)
-  [Internet, TV en Bellen | Online.nl](#)
- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.