



ONKYO Klipsch Optimized Mode User Guide

[Home](#) » [ONKYO](#) » ONKYO Klipsch Optimized Mode User Guide 

Contents

- 1 [ONKYO Klipsch Optimized Mode User Guide](#)
- 2 [Info](#)
- 3 [Preparation](#)
- 4 [Setup](#)
- 5 [Documents / Resources](#)
 - 5.1 [References](#)
- 6 [Related Posts](#)

ONKYO Klipsch Optimized Mode User Guide



“Speaker Combo” is a function that optimizes the crossover value suitable for Klipsch speakers.

Setting the Klipsch speaker model to be used with “Speaker Combo” updates the content of “Speaker” – “Crossover” on the Setup menu, and the crossover is set to the optimized value suitable for the speakers.

Info

- Speaker brands and models that can be set may be updated with the firmware update. For update details, visit our company's website.

Preparation

The speaker configuration such as the number of speakers and presence/ absence of subwoofer needs to be set before setting the speakers.

When the speaker configuration setting is completed

Proceed to the next "Setup" section.



When the speaker configuration setting is not completed

For automatic setting, select "Miscellaneous" – "Initial Setup" on the Setup menu, and perform the initial setting of this unit.

For manual setting, select "Speaker" – "Configuration" on the Setup menu, and set the speaker configuration.



*For details of the setting, refer to the instruction manual.

Setup

1. Press  on the remote controller, and select "Speaker" - "Speaker Combo" to make the settings.
 - If "Speaker Combo" is not displayed on the "Speaker" menu, press the cursor  on the remote controller repeatedly and check the next page.


Speaker Combo menu

| Setting Item | Default Value | Setting Details |
|---------------|---------------|---|
| Brand | Other | Select a brand of speaker to be used. |
| Front | Other | Select a model of speaker to be used. |
| Center | Other | Select a model of speaker to be used. |
| Height | Other * | Select a model of speaker to be used. |
| Surround | Other | Select a model of speaker to be used. |
| Surround Back | Other | Select a model of speaker to be used. |
| Subwoofer | Other | Select a model of subwoofer to be used. |

- * If Height Speaker is set to items other than Dolby Speaker for "Speaker" - "Configuration" on the Setup menu, this setting is fixed to "Other",
- 2. Press  on the remote controller to return to the previous screen.
- 3. Select "Crossover" - "Crossover Type" to set the speaker brand to "Klipsch".
- 4. Press  on the remote controller to finish the setting.

Read More About This Manual & Download PDF:

Documents / Resources

| | |
|---|---|
|  | ONKYO Klipsch Optimized Mode [pdf] User Guide Klipsch Optimized Mode |
|---|---|

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.