

ONNBT001 BLUETOOTH ITEM LOCATOR



## ONNBT001 Bluetooth Item Locator User Guide

[Home](#) » [Onn](#) » ONNBT001 Bluetooth Item Locator User Guide 

### Contents

- [1 ONNBT001 Bluetooth Item Locator](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 Getting Started](#)
- [5 Add Your Item Locator](#)
- [6 Locate Your Item](#)
- [7 Find Item When Out of Range](#)
- [8 When Your Item Is Lost](#)
- [9 Resetting Your Item Locator](#)
- [10 IMPORTANT TIPS](#)
- [11 Troubleshooting](#)
- [12 Federal Communication Commission](#)
- [13 FAQ](#)
- [14 Documents / Resources](#)
  - [14.1 References](#)
- [15 Related Posts](#)



**ONNBT001 Bluetooth Item Locator**



## Product Information

### Specifications:

- **Model:** Item Locator WIAWHT100139369
- **Manufacturer:** Walmart
- **Product Type:** Item Locator
- **Warnings:** Contains small items that could be a choking hazard if swallowed

## Product Usage Instructions

### Getting Started

1. **Add Your Item Locator:** Follow the instructions provided to add your item to the locator.
2. **Locate Your Item:** Use the device to locate your item within range.
3. **Find Item When Out of Range:** Follow the instructions to find your item when it's out of range.

### When Your Item Is Lost

If your item is lost, follow the steps outlined in the user manual to help you locate it.

### Resetting Your Item Locator

If you need to reset your item locator, refer to the manual for specific instructions on how to do so.

### Contact Information

If you have any questions or need assistance, contact the manufacturer at 1-[888-516-2630](tel:888-516-2630).

**WARNING:** IMPORTANT SAFETY INSTRUCTIONS – Read Before Using!

Read and follow all instructions and warnings before use. Save these instructions for future reference. This product is not a toy. Keep out of reach of children. Use this product only in the manner intended by the

manufacturer. If you have questions, contact the manufacturer. This product is not serviceable. DO NOT attempt to repair or modify this product. This product contains small items that could be a choking hazard if swallowed. Keep away from children.

## **WARNING**

- **INGESTION HAZARD:** This product contains a button cell or coin battery.
- DEATH or serious injury can occur if ingested.
- A swallowed button cell or coin battery can cause Internal Chemical Burns in as little as 2 hours.
- KEEP new and used batteries OUT OF REACH OF CHILDREN
- Seek immediate medical attention if a battery is suspected to be swallowed or inserted inside any part of the body.
- Remove and immediately recycle or dispose of used batteries according to local regulations and keep away from children. Do NOT dispose of batteries in household trash or incinerate.
- Even used batteries may cause severe injury or death.
- Call a local poison control center for treatment information. The product is compatible with 3V CR2032 battery.
- Non-rechargeable batteries are not to be recharged.
- Do not force discharge, recharge, disassemble, heat above 212°F/100°C or incinerate. Doing so may result in injury due to venting, leakage or explosion resulting in chemical burns.
- Ensure the batteries are installed correctly according to polarity (+ and -).
- Do not mix old and new batteries, different brands or types of batteries, such as alkaline, carbon-zinc, or rechargeable batteries.
- Remove and immediately recycle or dispose of batteries from equipment not used for an extended period of time according to local regulations.
- Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the batteries, and keep them away from children.

## **Getting Started**


### **1. Check For Updates**

To use the Apple Find My app to locate your Item Locator, the latest version of iOS, iPad OS, watchOS or macOS is recommended.

### **2. Power On / Off**

- Remove the plastic film from the battery (Pull tab on film to remove) – a sound will play indicating it is on.
- If the product is not paired within 10 minutes, the Locator will turn off.
- To power on, press your Item Locator's function button once – it should beep indicating it is powered on.
- To power off, hold the same button for 3-4 seconds then release. You will hear on. a sound play indicating it is powered off.

**Note:** Locator will not turn off if button is held longer than 5 seconds.

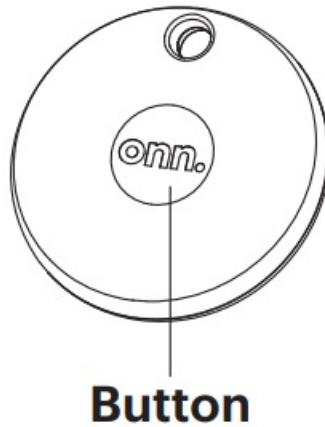

## Add Your Item Locator

### 1. Start the App

- Open Find My App on your supported iPhone or iPad.
- Allow notifications from the app

### 2. Connect your Item Locator

- Power on your Item Locator
- Tap “+” then “Add Other Item”
- Once your Item Locator is located (Should show as “onn.Locator”), tap “Connect”
- Choose a recognizable name and emoji for your Item Locator and tap “Continue”
- Find My will ask for confirmation to add your Item Locator to your Apple ID – tap “Agree”
- Tap “Finish” and your Item Locator will be set up and ready to be connected to any items you wish to locate e.g. your keys

## Locate Your Item

### • Find Item Locator when it is Nearby

- Open Find My app and select the “Items” tab or open the Find Items app on your Apple Watch
- Tap on your Item Locator from the list
- Tap “Play Sound” to make your Item Locator beep when it is nearby.
- Tap “Stop Sound” to stop the beeps once you find your item.

### • Find your Item Locator’s Last Known Location

- Open Find My app and select the “Items” tab or open the Find Items app on your Apple Watch
- Tap on your Item Locator from the list
- Your Item Locator’s last known location will appear on the map as the emoji you choose during set up
- To navigate to that last known location, tap “Directions” to open the Maps app.

## Find Item When Out of Range

### 1. Enabling “Notify When Left Behind”

- Open Find My app and select the “Items” tab or open the
- Find Items app on your Apple Watch
- Tap on your Item Locator from the list

- Under “Notifications”, enable the “Notify When Left Behind” toggle.
- You will receive a notification when you leave your Item Locator behind and it is no longer in range of your device.

## 2. Enabling “Notify When Found”

- Enable “Lost Mode”
- Under “Notifications”, enable the “Notify When Found” toggle.
- When your Item Locator is seen by another Find My enabled device, you will receive a notification of its updated location.
- **Note:** “Notify When Found” can only be activated when your Item Locator is out of range

## When Your Item Is Lost

### Enabling “Lost Mode”

- Open Find My app and select the “Items” tab or open the Find Items app on your Apple Watch
- Tap on your Item Locator from the list
- Under “Lost Mode”, tap “Enable”
- A screen detailing Lost Mode will pop up, tap “Continue”
- Enter your phone number or email address and tap “Next”
- You may enter a message that will be shared with the person that finds your item
- Tap “Activate” to enable “Lost Mode”
- **Note:** When “Lost Mode” is enabled, “Notify When Found” is automatically enabled
- **Note:** When “Lost Mode” is enabled, your Item Locator is locked and cannot be paired to a new device

## Resetting Your Item Locator

### 1. Remove the Item Locator from FindMy™ App

- Open Find My app and select the “Items” tab
- Tap on your Item Locator from the list
- Please ensure “Lost Mode” is disabled
- Scroll to the bottom of the screen and tap “Remove Item”
- A summary will open, tap “Remove” to confirm.
- A sound will play indicating the Item Locator has been removed from items.

### 2. Factory Reset Your Item Locator

- After successfully removing the Item Locator from Find My app, press the Item Locator’s function button four times rapidly, and then hold it a fifth time until you hear a ringing chime.
- You will hear a tone each time you press the button – a sound will play when the locator has been reset.
- The Item Locator is now reset and ready to be paired to a new device

## IMPORTANT TIPS

- **Replace the Battery**
  - Remove key ring from key ring hole
  - Use a coin or flat tool at the small gap on the side of your Item Locator to carefully open the case.

- Replace the battery with a new CR2032 battery – Placing it positive side up (text facing up)
- Carefully align the top hole on both sides to close

#### • **Unwanted Tracking Detection**

- If any Find My network accessory separated from its owner is seen moving with you over time, you'll be notified in one of two ways
  - If you have an iPhone, iPad, or iPod touch, Find My will send a notification to your Apple device. This feature is available on iOS or iPadOS 14.5 or later.
  - If you don't have an iOS device or smartphone, a Find My network accessory that isn't with its owner for a period of time will emit a sound when it's moved.
- These features were created specifically to discourage people from trying to track you without your knowledge.

## **Troubleshooting**

- Pairing may fail because of network problems. The following action is recommended.
  - Change the phone's network, such as switching between WiFi and mobile.
- The first pairing may take a while, please wait patiently.
  - Reset your item.
  - Repair with Find My App.
- When "Lost Mode" is enabled, DO NOT REMOVE ITEM in the App
- Your Item Locator will be locked and cannot be paired to a new device.
  - The battery usage time varies depending on personal usage habits. Frequent use of the call function can accelerate battery consumption.

## **THE FINE PRINT**

**Warning:** The battery must be kept out of the reach of children. Due to chemical burns and potential esophageal perforation, swallowing may cause serious injury or death. If the child accidentally swallows the button battery, please call the rescue phone immediately and seek medical advice in time. This device complies with part 15 of the FCC Rules.

### **Operation is subject to the following two conditions:**

1. This device may not cause harmful interference, and
2. this device must accept any interference received, including interference that may cause undesired operation.

**NOTE:** The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications or changes to this equipment.

**Warning:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

The device has been evaluated to meet general RF exposure requirements. The device can be used in portable exposure conditions without restriction.

## **Federal Communication Commission**

Radiation Exposure Statement Power is so low that no RF exposure calculation is needed. This equipment has

been tested and found to comply with the limits for a class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna. Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help. Use of the Works with Apple badge means that a product has been designed to work specifically with the technology identified in the badge and has been certified by the product manufacturer to meet Apple Find My network product specifications and requirements. Apple is not responsible for the operation of this device or use of this product or its compliance with safety and regulatory standards. © Apple, Apple Watch, iPad, iPadOS, iPod touch, Mac and macOS are trademarks of Apple Inc., registered in the U.S. and other countries. IOS is a trademark or registered trademark of Cisco in the U.S. and other countries and is used under license.

**Need help?**


We're here for you every day from 7 a.m. – 9 p.m. CST Give us a call at 1-[888-516-2630](tel:888-516-2630) ©2023 onn. All Rights Reserved

We'd love to hear from you. Scan with your Walmart app and let us know what you think.

**FAQ**

- **Q: Is the item locator waterproof?**  
A: No, this item locator is not waterproof. Avoid exposing it to water to prevent damage.
- **Q: How far is the range of the item locator?**  
A: The range of the item locator is approximately [range in meters/feet].
- **Q: Can I replace the battery of the item locator?**  
A: Yes, you can replace the battery following the instructions provided in the manual.

**Documents / Resources**

	<a href="#">onn ONNBT001 Bluetooth Item Locator</a> [pdf] User Guide IDHONNBT001, ONNBT001 Bluetooth Item Locator, ONNBT001, Bluetooth Item Locator, Item L ocator, Locator
---	---

**References**

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.