



ONSET CX5000 Gateway User Guide

[Home](#) » [Onset](#) » ONSET CX5000 Gateway User Guide 

Contents

- [1 ONSET CX5000 Gateway User Guide](#)
- [2 Quick Start for the InTemp® CX5000 Gateway](#)
- [3 Read More About This Manual & Download PDF:](#)
- [4 Documents / Resources](#)
- [5 Related Posts](#)


ONSET CX5000 Gateway User Guide



Quick Start for the InTemp® CX5000 Gateway

I am setting up a CX5000 gateway for automatic download of CX loggers to the InTempConnect® cloud.

1. Go to www.intempconnect.com to set up an account or log into your existing account (A).



The image shows the InTempConnect login page. At the top is the InTempConnect logo. Below it are two input fields: 'Username:' and 'Password:'. To the left of the 'Password:' field is a yellow circle with a white letter 'A'. Below the input fields are two buttons: 'Create User/Account' and 'Log In'. Below the 'Log In' button is a link that says 'Forgot Password?'.

2. In InTempConnect, click Settings and then Roles. Click Add Role (A) to create a role for the person who will be setting up the gateway or click an existing role to edit it.



The image shows the InTempConnect Roles page. At the top is the InTempConnect logo and a navigation bar with links: Data, Loggers, Gateways, and Settings. Below the navigation bar is a section titled 'Settings > Roles'. On the left side of this section is a yellow circle with a white letter 'A' next to an 'Add Role' button. Below the 'Add Role' button is a table with one row. The first column is 'Administrator' and the second column is 'Description: Administrator'.

3. Type the name of the role (A) for the Description. Select “Login to InTempConnect” plus the gateway-related privileges (Manage Gateways, Manage Logger/Gateway Profiles, Create Shipments, Edit/Delete Shipments, and Gateway Administrator) from the Available Privileges list on the left and click the right arrow button (B) to move them to the Assigned Privileges list on the right. Select a user from the Available Users list on the left and click the right arrow button (C) to move the user to the Assigned Users list on the right. Click Save (D).



The image shows the InTempConnect Role configuration page. At the top is a 'Description:' field with the text 'Gateway User'. Below this are four sections: 'Available Privileges', 'Assigned Privileges', 'Available Users', and 'Assigned Users'. In the 'Available Privileges' section, there is a list of checkboxes with labels: 'Connect to Loggers in Account', 'Delete Reports', 'Download and Continue', 'Download and Restart', 'Download and Stop', 'Preview and Share Reports', 'Reset Logger Passkey', and 'Update Logger Firmware'. To the right of this list is a yellow circle with a white letter 'B' next to a right arrow button. In the 'Assigned Privileges' section, there is a list of checkboxes with labels: 'Login to InTempConnect', 'Manage Gateways', 'Manage Logger/Gateway Profiles', 'Create Shipments', 'Edit/Delete Shipments', and 'Gateway Administrator'. In the 'Available Users' section, there is a list of checkboxes with labels: 'jsmith@onsetcomp.com'. To the right of this list is a yellow circle with a white letter 'C' next to a right arrow button. At the bottom left is a yellow circle with a white letter 'D' next to a 'Save' button.

Tip: If you need to add a user, click the Users tab and then Add User, fill in the fields, and assign the user a role with gateway privileges.

4. Click Gateways and then Gateway Profiles. Click Add Gateway Profile and type a name (A) for the profile. Select the CX logger type. If the gateway will be used in a storage application (i.e. a clinic or office), enter these settings (B):
 - Select Download and Restart for when to connect.

- Select “Immediately connect to a logger with a new sensor alarm.”
- DO NOT select “Immediately connect to a logger not seen by this gateway.”
- Choose to connect to loggers every week. Click Save (C).


5. Insert the appropriate plug for your region into the AC adapter. Connect the AC adapter to the gateway and plug it in. Wait a couple of minutes for the gateway to completely power up. The LED on the gateway will be yellow-green while it powers up and then change to deep green once it is ready to set up.



6. Set up Wi-Fi network settings. Make sure the device with the In Temp app can connect to the Wi-Fi network. Open the app and log in as an In Temp Connect user (A).

Tip: If the gateway will be using Ethernet with DHCP, plug in the Ethernet cable. Network settings will be configured automatically. To configure network settings for Ethernet with static IP addresses or to set up a gateway for use at another site, refer to the product manual at www.onsetcomp.com/intemp/resources/cx5000-manual.

Tap Devices (B) and tap Gateways (C). The gateway appears in the list. Tap anywhere in the row (D) to connect to the gateway.

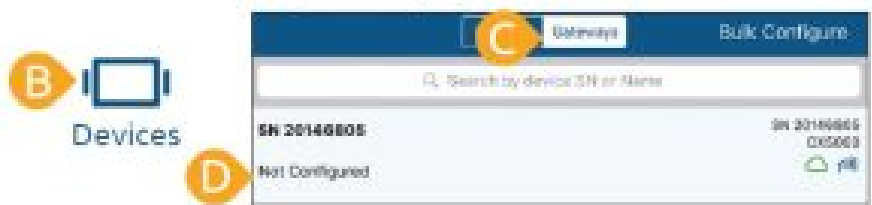


Tap Network Settings (E) and then tap WiFi (F).



Tap Use Current WiFi Network (G) and tap Save (H).




7. Connect to the gateway (see step 6) and tap Configure (A).

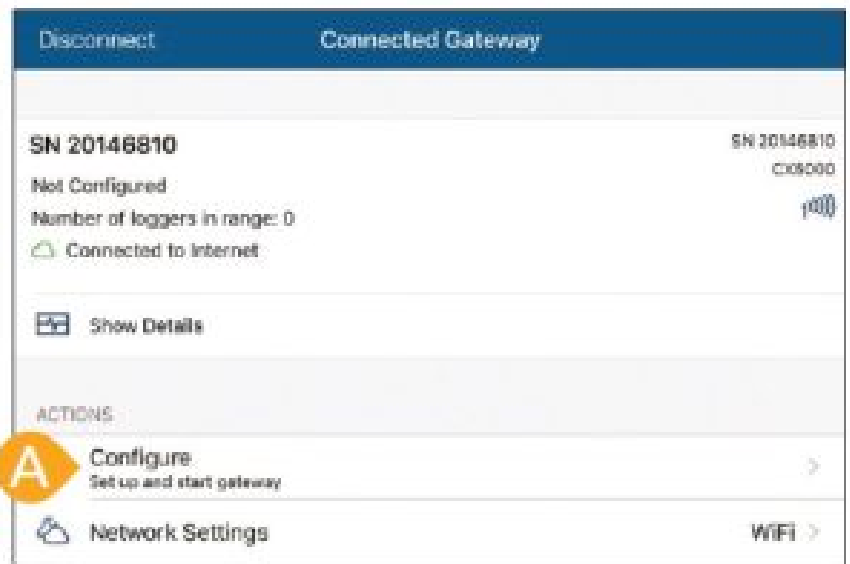

7.(continued)

Select the gateway profile (B) you created in InTempconnect in step 4 (swipe left and right if there are multiple profiles). Type a name for the gateway (C) and tap Start (D).

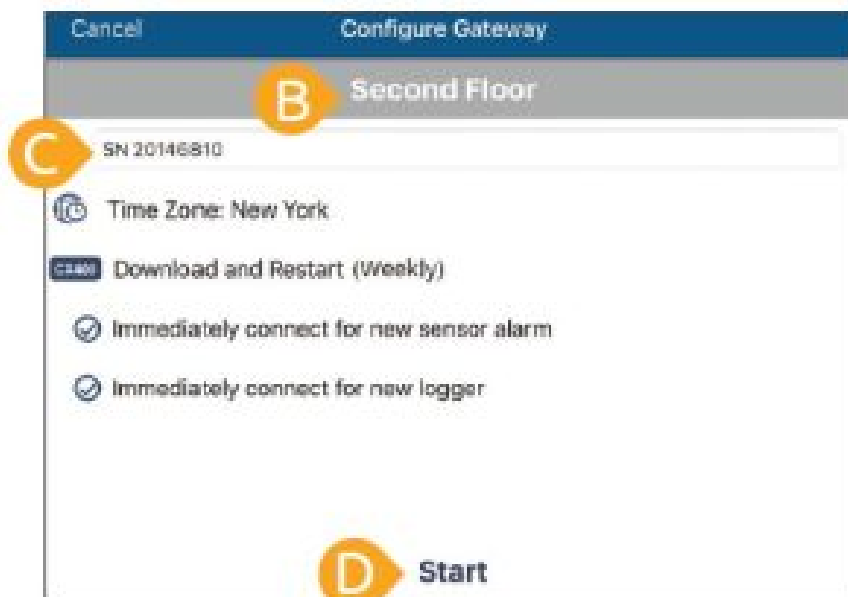

Once a gateway has contacted In Temp Connect for the first time, a user is created for the gateway in your account. Click Settings and then the Users tab to see the gateway user name, which is listed as CX5000- <gateway serial number>.

8. Deploy the gateway. Some guidelines when selecting a location for the gateway:

- The gateway can support up to 50 loggers within transmission range, which optimally is 30.5 m (100 ft) will full line-of-sight.
- Test the range by positioning your mobile device where you want to deploy the gateway. If the mobile device can connect to the logger with the InTemp app from that location, then the gateway should be able to connect to the logger as well.
- If you plan to use the gateway for loggers in different rooms, be sure to test the connection first.

The gateway is ready for use with loggers. See www.intempconnect.com/help for details on configuring and downloading loggers with the gateway, setting up shipments, and more.

Refer to the CX5000 Gateway manual for full product details, including specifications and mounting instructions. Scan the code or go to www.onsetcomp.com/intemp/resources/cx5000-manual.



ONSET

1-800-LOGGERS (564-4377) • 508-759-9500
www.onsetcomp.com/support/contact

Tip: If the gateway will be using Ethernet with DHCP, plug in the Ethernet cable. Network settings will be configured automatically. To configure network settings for Ethernet with static IP addresses or to set up a gateway for use at another site, refer to the product manual at www.onsetcomp.com/intemp/resources/cx5000-manual.

Devices Tap Devices (B) and tap Gateways (C). The gateway appears in the list. Tap anywhere in the row (D) to connect to the gateway.


Tap Network Settings (E) and then tap WiFi (F).

Select the gateway profile (B) you created in InTempconnect in step 4 (swipe left and right if there are multiple profiles). Type a name for the gateway (C) and tap Start (D).

© 2017–2020 Onset Computer Corporation. All rights reserved. Onset, InTemp, and InTempConnect are registered trademarks of Onset Computer Corporation. Bluetooth is a registered trademark of Bluetooth SIG, Inc. All other trademarks are the property of their respective companies.

Read More About This Manual & Download PDF:

Documents / Resources

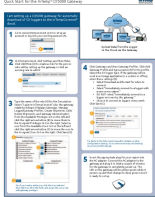	<p>ONSET CX5000 Gateway [pdf] User Guide CX5000, Gateway, CX5000 Gateway</p>
--	---