


OOB SMARTHOME Heavy Load Module

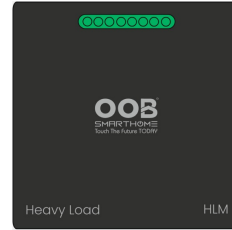

## OOB SMARTHOME Heavy Load Module User Guide


[Home](#) » [OOB](#) » OOB SMARTHOME Heavy Load Module User Guide 

### Contents

- [1 OOB SMARTHOME Heavy Load Module](#)
- [2 HLM Wiring Diagram](#)
- [3 Documents / Resources](#)
  - [3.1 References](#)
- [4 Related Posts](#)




### OOB SMARTHOME Heavy Load Module

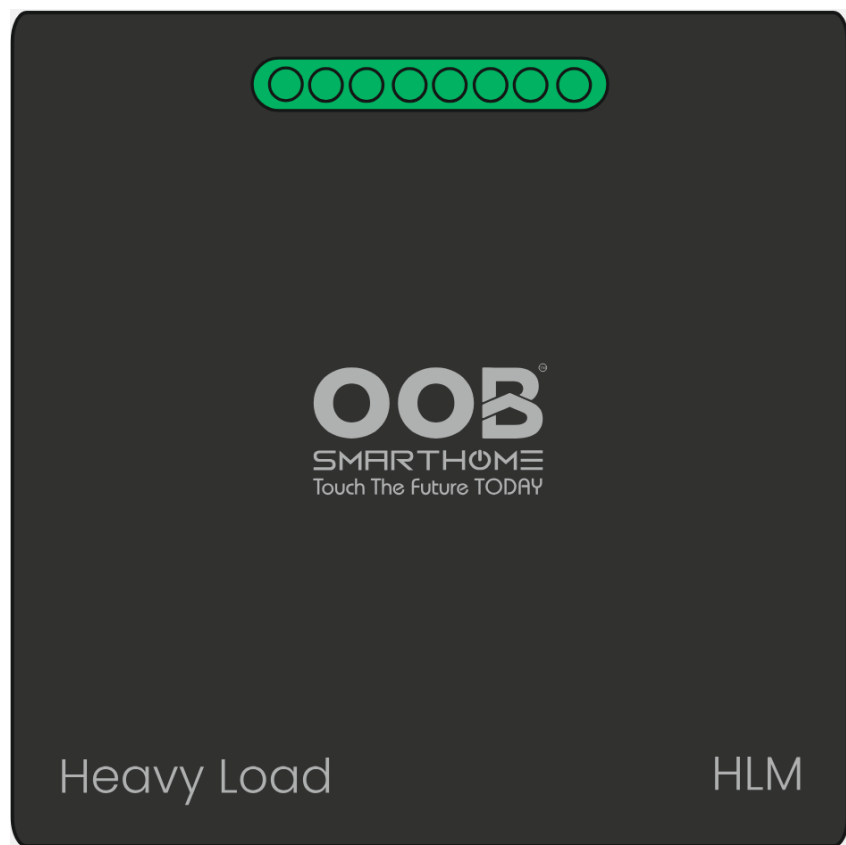

### HLM Wiring Diagram


- Use any switches for heavy-load appliances by connecting the HLM Device in the circuit.
- **Example:-** To operate AC from switch no.3 of 6M, place High Load Device Beside 6M
- Connect as Shown Below.

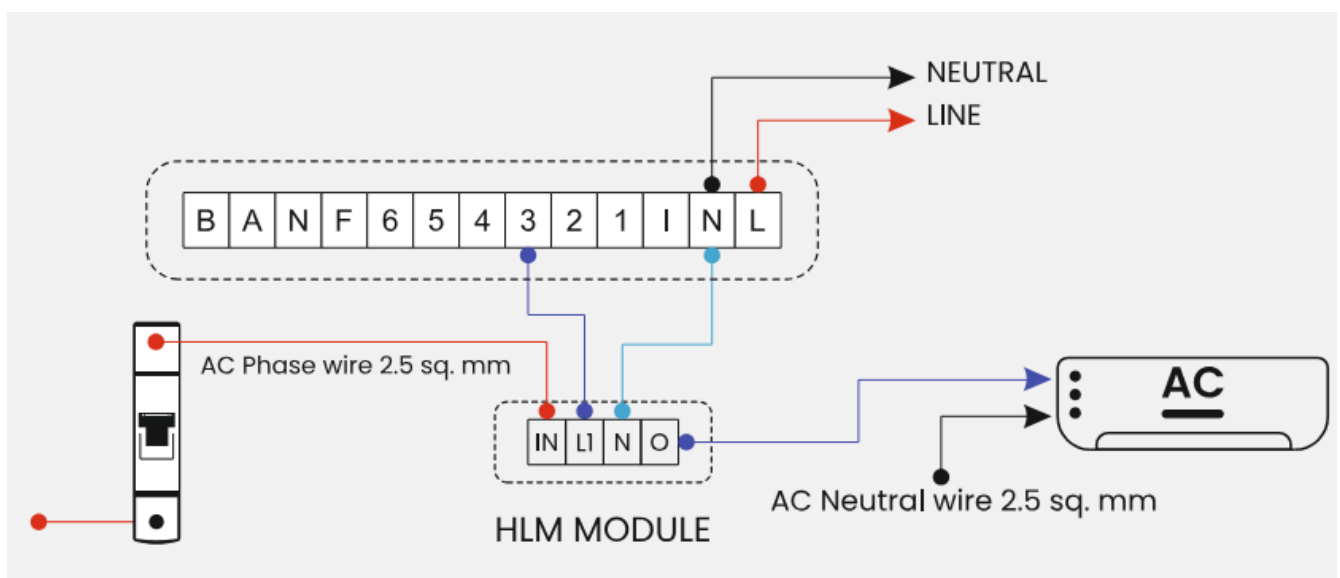

### Technical support

- 98 79 90 98 66
- 76 20 02 66 04
- E-[reach@oobsmarhome.com](mailto:reach@oobsmarhome.com)

### Documents / Resources

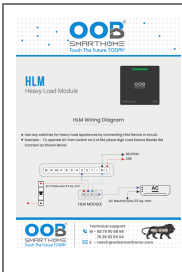

[OOB SMARTHOME Heavy Load Module \[pdf\] User Guide](#)  
SMARTHOME Heavy Load Module, SMARTHOME, Heavy Load Module, Load Module, Module

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.