



## **510 THREAD Digit Smart Tech Battery**



# **Ooze 510 THREAD Digit Smart Tech Battery User Manual**

[Home](#) » [ooze](#) » Ooze 510 THREAD Digit Smart Tech Battery User Manual 

### **Contents**

- [1 Ooze 510 THREAD Digit Smart Tech Battery](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 FEATURE](#)
- [5 HOW TO USE THE DIGIT](#)
- [6 HOW TO CHARGE](#)
- [7 Documents / Resources](#)
  - [7.1 References](#)



**Ooze 510 THREAD Digit Smart Tech Battery**



## Product Information

### Specifications:

- **Thread Type:** 510
- **Charging Port:** Type-C
- **Battery Capacity:** 400 mAh

## Product Usage Instructions

### Powering On/Off:

To turn on the Digit, press the power button 5 times quickly. The device will automatically shut off after 10 minutes of inactivity.

### Charging:

The Digit can be charged using an Ooze Smart USB Charger or a Type-C charging cable. Ensure to charge the device indoors using a wall outlet.

### Temperature Adjustment:

Adjust the temperature by using the twist dial on the bottom of the device. The digital screen will display your selected temperature level.

### Digital Screen Functions:

Press the button 4 times to view the battery status. Use the twist dial to control the voltage settings.

### FAQ:

 
- **Q: Can I charge the Digit using a computer's USB port?**

A: No, the device is intended for indoor charging only and should be charged using a wall outlet.

- **Q: How do I know when the battery is low?**

A: The digital screen will indicate low battery level. Ensure to recharge the device promptly to avoid running out of power.

## FEATURE

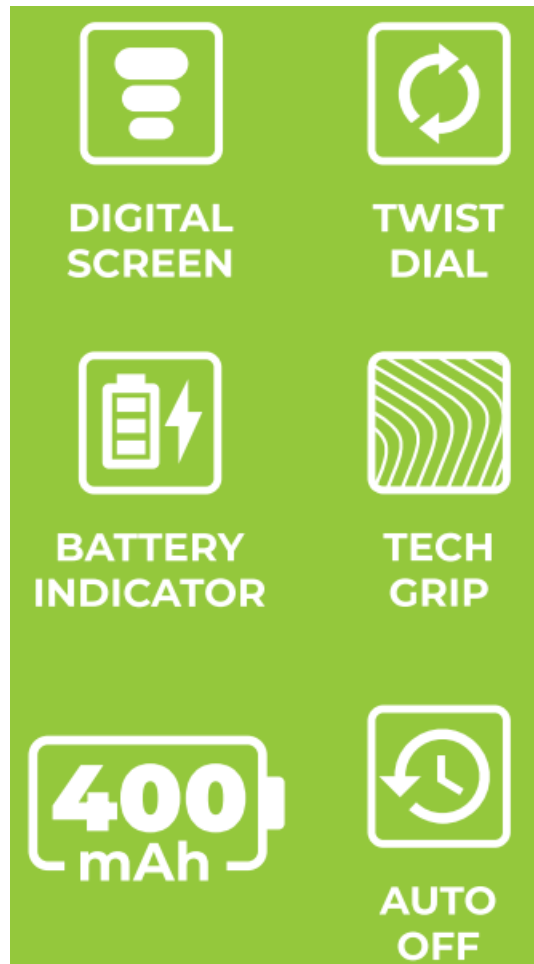

## HOW TO USE THE DIGIT

### POWER BUTTON



- To turn on, press the power button 5x fast.

- The Digit will automatically shut off after 10 minutes.

## PREP MODE



 
- To start press the power button twice. Indicator light will gradually change color.
- To end press power button once.

## FLEX TEMP



- Use the twist dial on the bottom to select your preferred temperature level. The screen will reflect your changes.

## DIGITAL SCREEN

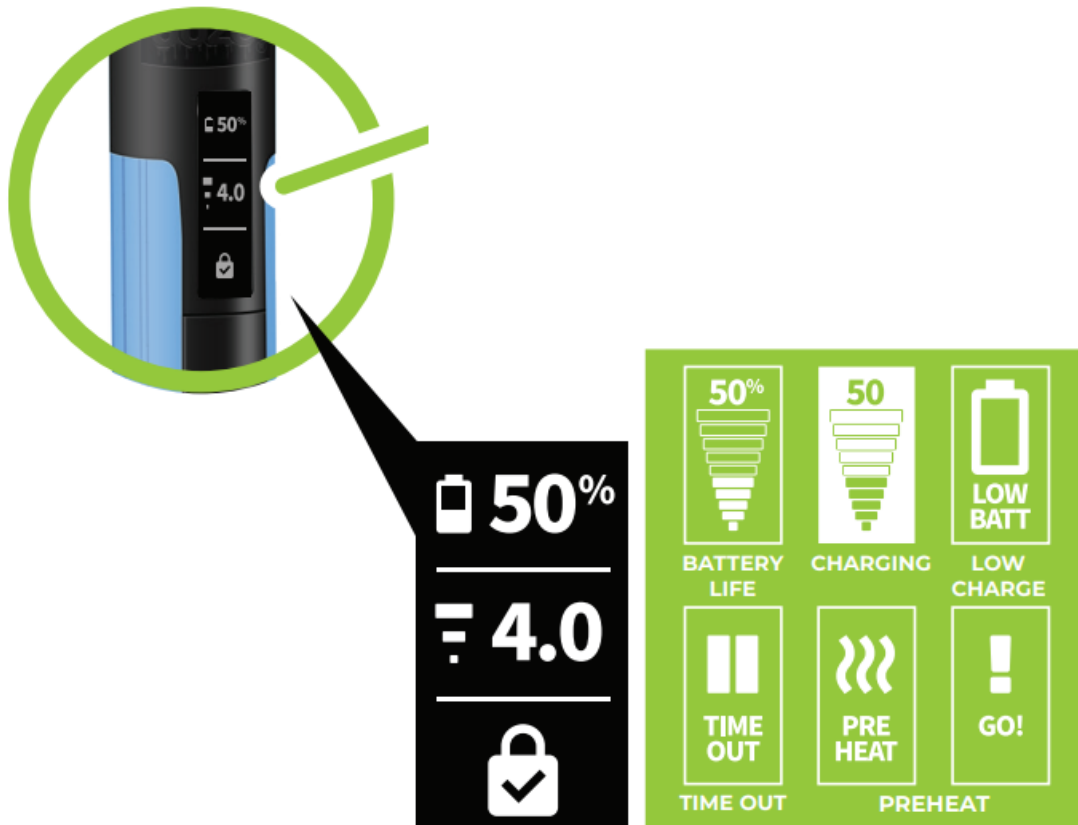


- Press button 4x for an expanded battery view. Control voltage with the twist dial.

## HOW TO CHARGE

 The Digit does not include a charger, this is only the device. However, it can be charged with an Ooze Smart USB Charger or a type-c charging cable.

- **Type-C:**

Plug a Type-C charging cord into the port located on the bottom of the device.

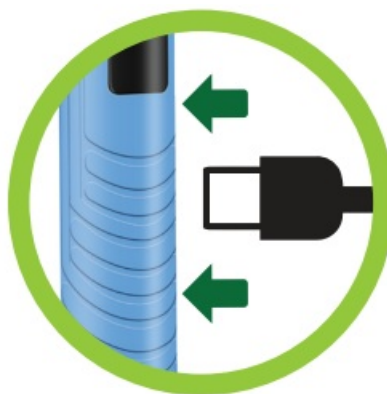

- **USB Smart Charger:**

Screw the 510 charger into the universal port. Plug the charger in using a wall adapter.

- **Important Safeguards:**

Device is intended for indoor charging only. Only charge using a wall outlet.



## WARRANTY INFORMATION

Enter the 6-digit authentication code printed on your battery at, [oozeline.com/apps/product-registration](https://oozeline.com/apps/product-registration) to register your product.

## Documents / Resources



[Ooze 510 THREAD Digit Smart Tech Battery](#) [pdf] User Manual  
510 THREAD Digit Smart Tech Battery, 510 THREAD, Digit Smart Tech Battery, Smart Tech Battery, Tech Battery, Battery

## References

- [User Manual](#)

### Manuals+. [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.