




opentext Tableau Forensic T35u/T35u-RW SATA/IDE Bridge User Guide

[Home](#) » [opentext](#) » opentext Tableau Forensic T35u/T35u-RW SATA/IDE Bridge User Guide 



QUICK REFERENCE GUIDE Tableau Forensic T35u/T35u-RW SATA/IDE Bridge

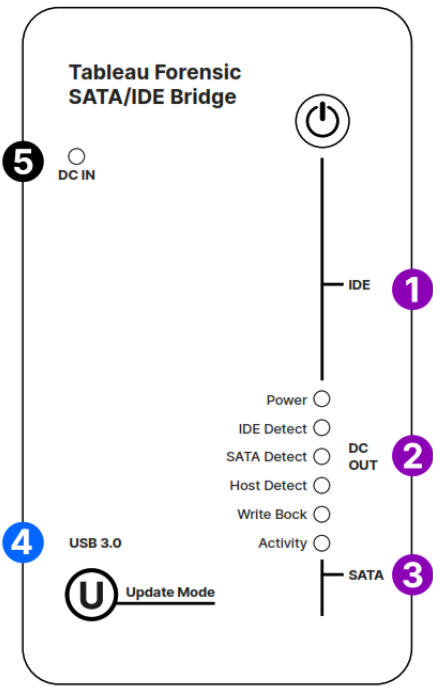

Contents

- [1 GETTING STARTED](#)
- [2 CONNECTION RECOMMENDATIONS](#)
- [3 DIP SWITCH SETTINGS](#)
- [4 DEDICATED READ/WRITE OPERATION](#)
- [5 FIRMWARE UPDATES](#)
- [6 SUPPORT](#)
- [7 ABOUT OPENTEXT](#)
- [8 CONNECT WITH US:](#)
- [9 Documents / Resources](#)
- [10 Related Posts](#)

GETTING STARTED

Confirm that the bridge is off before the beginning.

1. Connect either an IDE source drive¹ or a SATA source drive^{2,3} to the right side of the T35u/T35u-RW
2. Connect the bridge to the host computer using the host USB port ⁴
3. Connect the power supply to the bridge's DC In⁵
4. Press the power button and begin operation


Before you remove the connected SATA/IDE drive or power down the T35u/T35u-RW, safely eject or unmount the drive on your host computer.

CONNECTION RECOMMENDATIONS


| | |
|-------------------------|---|
| For SATA Drive | Use a Tableau SATA Drive Power cable (TC5-8-R2) & SATA Data cable (TC3-8) |
| For IDE Drive | Use a Tableau IDE Drive cable (TC2-8-R2) & IDE Data cable (TC6-8) |
| For the Host Connection | Use a Tableau USB 3.0 cable (TC-USB3) |
| For Power (DC-In) | Use a Tableau power supply (TP5 or TP2) |


DIP SWITCH SETTINGS

- 1** Locate breakaway plastic & remove

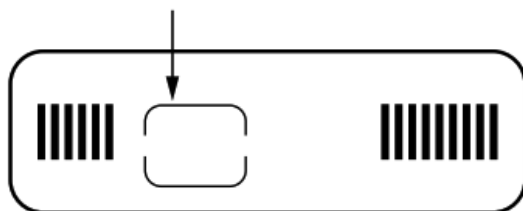

- 2** Adjust DIP switches for intended use

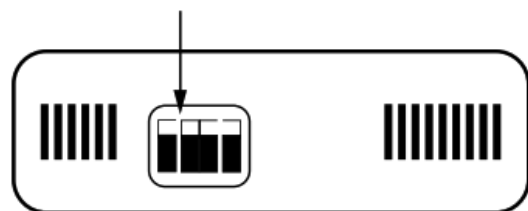

| | |
|---|---|
| SWITCH 1 | ON = Read/Write  OFF = Read-Only |
| SWITCH 2 | ON = Hide Write Protect OFF = Report Write Protect |
| SWITCH 3 | ON = Hide Write Errors OFF = Report Write Errors |
| SWITCH 4 | No Function |
| * Default setting is OFF for all switches | |

DEDICATED READ/WRITE OPERATION

T35u-RW is identical to T35u, except that T35u-RW is pre-configured for reading/writing operations. The yellow case highlights the fact that it is a read/write device to help eliminate the potential for misuse during forensic investigations.

FIRMWARE UPDATES

Update Mode Button – To place T35u/T35u-RW into firmware update mode, hold the update button down when powering on the device.

Free firmware updates are provided for Tableau Forensic products on a regular basis through the Tableau Firmware Update (TFU) utility. Reference the Tableau Download Center webpage for more information: security.opentext.com/tableau/download-center

SUPPORT

For Tableau Forensic product support: opentext.com/support/contact/guidance

ABOUT OPENTEXT

OpenText, The Information Company, enables organizations to gain insight through market-leading information management solutions, on-premises or in the cloud. For more information about OpenText (NASDAQ: OTEX, TSX: OTEX) visit: opentext.com.

CONNECT WITH US:


- OpenText CEO Mark Barrenechea's blog
- Twitter | LinkedIn

opentext.com/contact

Copyright © 2021 Open Text. All Rights Reserved. Trademarks owned by Open Text.

For more information, visit <https://www.opentext.com/about/copyright-information> • 09.21 | 18895.

Documents / Resources

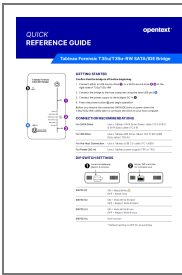

[opentext Tableau Forensic T35u/T35u-RW SATA/IDE Bridge](#) [pdf] User Guide
Tableau Forensic, T35u, T35u-RW, SATA, IDE Bridge, Tableau Forensic T35u T35u-RW SATA I
DE Bridge