

opis technology CLK-1 LED Clock OPIS



opis technology CLK-1 LED Clock OPIS User Manual

[Home](#) » [opis technology](#) » opis technology CLK-1 LED Clock OPIS User Manual 

Contents

- [1 opis technology CLK-1 LED Clock OPIS](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 FAQ](#)
- [5 OVERVIEW](#)
- [6 Functions](#)
- [7 Documents / Resources](#)
 - [7.1 References](#)
- [8 Related Posts](#)



opis technology CLK-1 LED Clock OPIS



Product Information

Specifications

- **Model:** OPIS CLK-1
- **Functions:** Time / Alarm / Timer / Countdown
- **Display:** LED
- **Power Source:** Backup battery (1-week lifespan without power supply) and connection cable

Product Usage Instructions

Getting Started

1. Insert the backup battery into the compartment located on the back of the clock.
2. Connect the connection cable to the clock and the power supply.
3. Plug the power supply into a socket.

Setting the Time

- Select 12-hour or 24-hour mode.
- Set the hour using the respective buttons.
- Set the minute using the corresponding controls.
- Adjust the year, month, and day as needed.

Adjusting Display Brightness

- You can set the brightness to automatic mode or choose a specific level from 1 to 10.

Setting the Alarm Clock

- Set Alarm 1 by specifying the hour and minute.
- Configure Alarm 2 with the desired time.
- You can toggle alarms on/off as needed.

Using the Timer

- To switch to Timer mode, follow the instructions provided on the device.

Using the Countdown


To switch to Countdown mode, follow the instructions on the clock.

- You can turn the display on or off based on your preference.
- Use the numeric keys for input or follow remote control instructions for specific functions.
- To save settings or initiate specific actions, refer to the corresponding buttons on the device or remote control.
- The flashing colons can be disabled by setting brightness to level L-01.

FAQ

- **Q:** How long does the backup battery last?
- **A:** The backup battery lasts approximately 1 week if no power supply is connected.
- **Q:** How can I disable the flashing colons on the display?
- **A:** You can turn off the flashing colons by setting the brightness level to L-01.

OVERVIEW

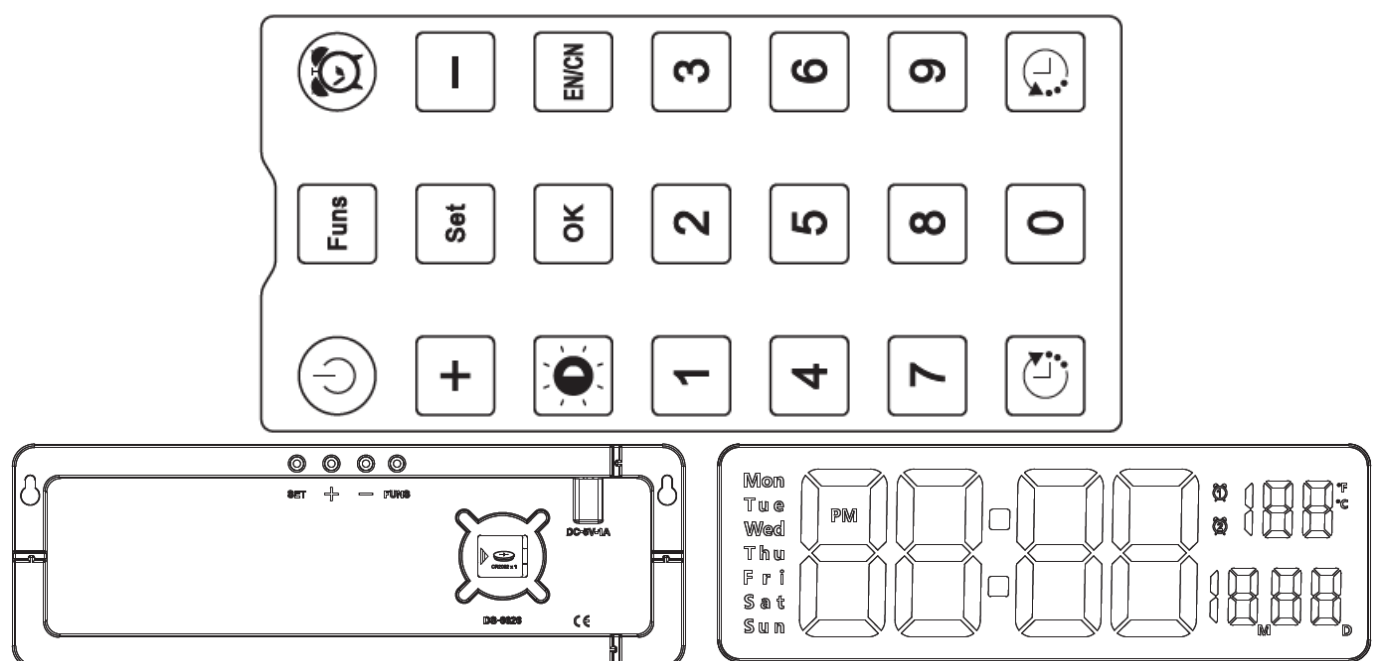

Functions

push for countdown:



Enter the time
with numeric keys: "0..9" exit:

5 Sek.





start:


stop:

continue:

Additional settings

1.  Display on/off
2. Instead of entering numbers, you can also use $+$ / $-$ press to save or wait for 3s
3. The "FUNS" button on the back of the device corresponds to  the remote control
4. The "Funs" and EN/CN buttons on the remote control have no function
5. The backup battery lasts approx. 1 week if no power supply is connected
6. The flashing of the colons can be switched off with the brightness set to level L-01.

Documents / Resources

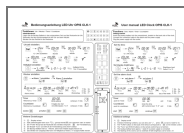

[opis technology CLK-1 LED Clock OPIS](#) [pdf] User Manual
CLK-1 LED Clock OPIS, CLK-1, LED Clock OPIS, Clock OPIS, OPIS

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.