 


ople appliances S1 Series Fscreen Projector Screen Instruction Manual

 
[Home](#) » [ople appliances](#) » ople appliances S1 Series Fscreen Projector Screen Instruction Manual 

Contents

- [1 ople appliances S1 Series Fscreen Projector Screen](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 Installation Instruction](#)
 - [4.1 Prepare Work](#)
- [5 Documents / Resources](#)
 - [5.1 References](#)



ople appliances S1 Series Fscreen Projector Screen

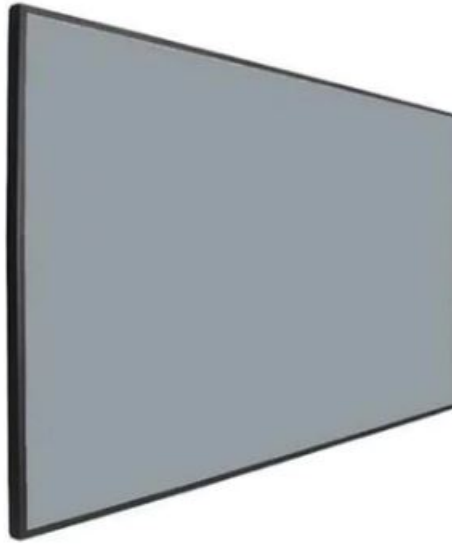

Product Information

The Fscreen Projector Screen-S1 Series Picture Scroll is a high-quality projector screen that allows you to enjoy an immersive viewing experience. It comes in three different sizes: 80, 88, and 100. The dimensions for each size are as follows:

- 80 Display: Width – 1786mm, Height – 1010mm
- 88 Display: Width – 1948mm, Height – 1096mm
- 100 Display: Width – 2214mm, Height – 1245mm

Product Usage Instructions

1. Before installation, adjust the projection screen so that the vertices of the screen coincide with the points labeled A1, A2, A3, and A4. This will help you identify the correct viewing area.
2. Once you have identified the correct viewing area, proceed to the next step.
3. For the Fscreen Projector Screen-S1 Series Picture Scroll, you will need to fix the specialized position drawing or picture onto the screen. Please follow the provided bitmap instructions for your specific screen size (80, 88, or 100).
4. When pasting the drawing or picture, be careful not to block it with your body. You can mark the position in advance to ensure accuracy.
5. Refer to the installation bitmap provided for your specific screen size to guide you through the installation process.

Installation Instruction

Fscreen S1 Picture Scroll Screen Dimension

- 80" Display width is 1786mm, Height is 1010mm;
- 88" Display width is 1948mm, height is 1096mm;
- 100" Display width is 2214mm, height is 1245mm


Prepare Work

1. Please save the end part of bitmap in this passage, then will throw related screen dimension position fixed picture, and install the magnetic adhesion.
2. Please assemble pendants, cotton thread and stickers from the screen accessory bag for later use
3. The screen installation height shall be subject to actual requirements, which will not affect the viewing effect. Based on ergonomic research, Fscreen Technology recommends the installation height as below for your reference:


Best mounting height: 80 "screen bottom 735mm from the floor, 88" screen bottom 695mm from the floor, 100 "screen bottom 631mm from the floor

Begin to install;


1. Measure a line segment in the horizontal direction whose length corresponds to the displayed width 80" is 1786mm, 88" is 1948mm, 100" is 2214mm), Paste the pendant directly above the two ends of the line segment. This determines the width of the projected picture.
2. Turn on the projector and determine the position of the bottom edge of the projection picture. You can reference the height data we given, or adjust it yourself. You can sit down and see if the height is right. Mark the intersection of the bottom edge of the picture and the pendant as points A1 and A2; Measure the distance vertically up to the displayed height 80" is 1010mm 88" is 1096mm 100" is 1245mm get A3, A4 point. Those 4 points are projection 4 peaks.
3. Adjust the projection screen so that the vertices of the screen coincide with A1, A2, A3 and A4 respectively. At this point, you have identified the correct viewing area.
4. Fscreen Projector Screen-S1 Series Picture Scroll screen specialized position fixed drawing/picture, please adhesive the magnetic parts according to bitmap shows.
When pasting, the bitmap may be blocked by the body, so it can mark in advance.
5. Magnetic Adhesion Pasting Method
 1. Tear off the upper part of the red protective film on the back, align it with the position shown in the bitmap, and paste it carefully; Paste, should be from the middle to both sides of the magnetic paste slowly compaction, do not be impatient;
 2. After the upper part is pasted, the protective film is torn off and the lower part of the magnetic tape is repeated.
 3. If bubbles or lumps are found after pasting, cut them with a utility knife.
6. Put S1 picture scroll screen adhesive on the magnetic parts;
7. Remove the pendant to complete the installation.

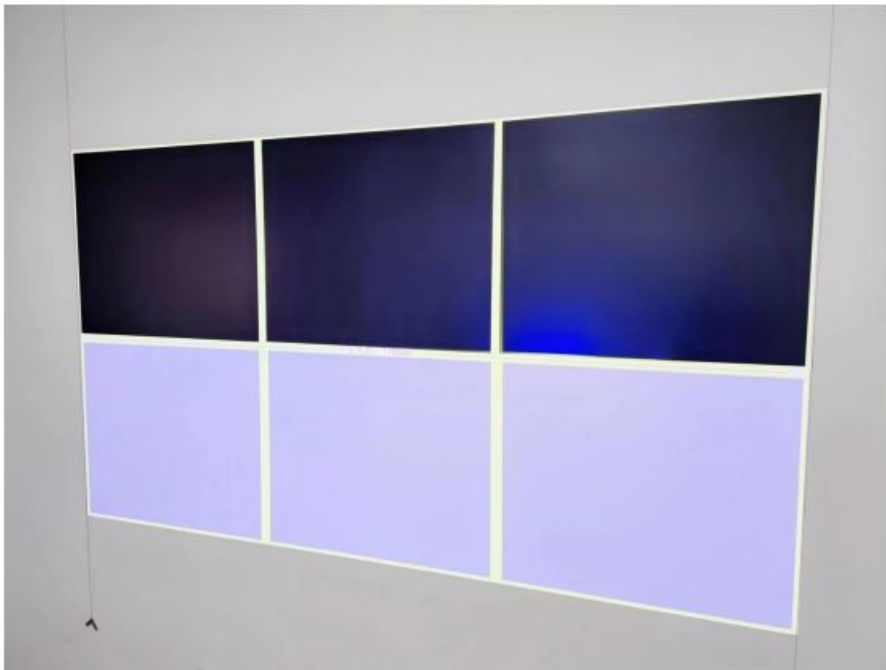


S1 Series Picture Scroll Screen 80"/88"/100" Installation Bitmap

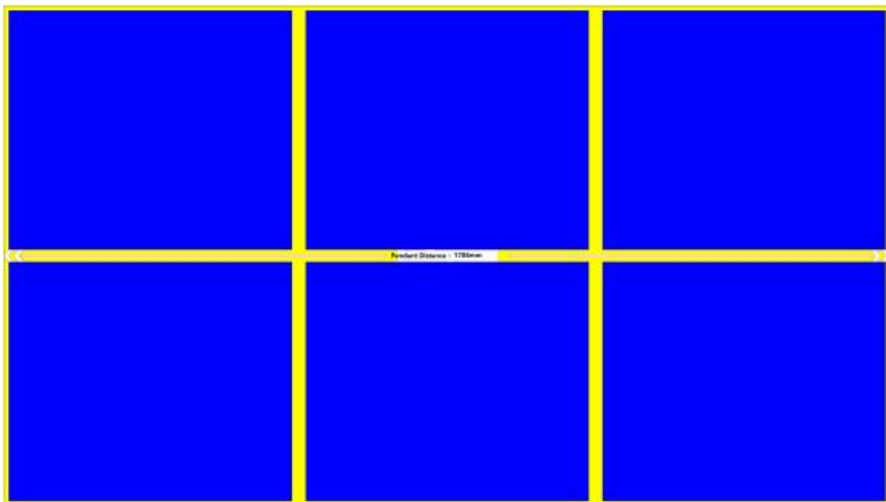

80" Installation Bitmap

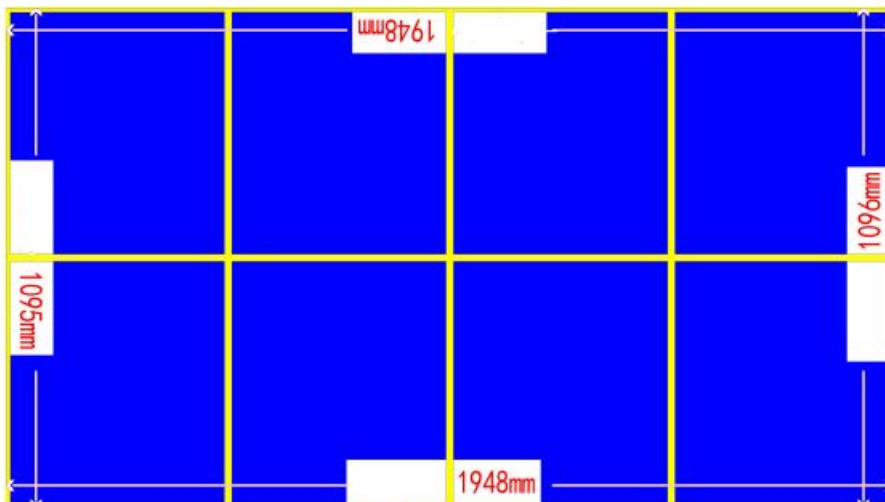

88" Installation Bitmap

 

References

- [User Manual](#)