




Optoma Pull-Down Screen Instructions

[Home](#) » [Optoma](#) » Optoma Pull-Down Screen Instructions 



Instruction Guide for Manual Pull-Down Screen

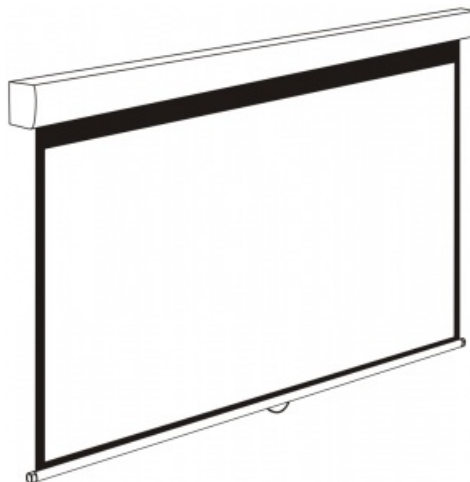


Thank you for purchasing a optoma projection screen.
Before use, please read instructions carefully. After installation, store instructions for future reference.

Contents


- [1 Description](#)
- [2 Accessories](#)
- [3 Installation](#)
- [4 Operation](#)
- [5 Warnings](#)
- [6 Documents / Resources](#)
- [7 Related Posts](#)

Description

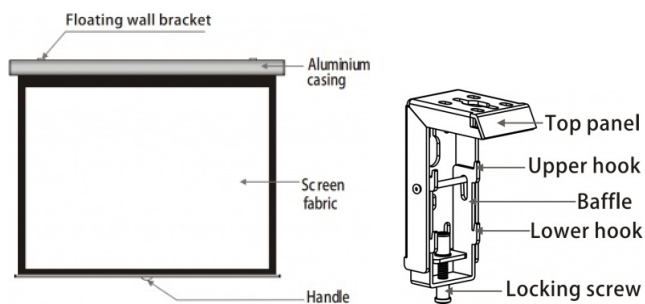

Accessories


- Floating wall bracket(2pcs)

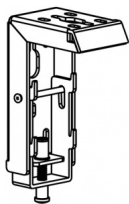


- $\varnothing 5 \times 40$ mm Tapping screw & cap (8 sets)



 - M5x10 Screw (6pcs)



- Hanging bracket (2pcs)

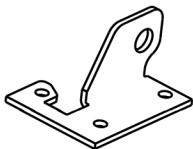

- Instruction manual (1pc)

Installation

Take out all the parts from the packaging to ensure you have all necessary components.

There are three installation measures for this product, namely wall mount, ceiling mount and ceiling hang. The installed distance can be changeable up to your needs via adjusting the slipper block, while the ideal position is the mounting bracket is at its nearest point to the end cap, which can reduce unnecessary vibration or noise.

Wall and ceiling installation:

1. Mount the wall/ceiling brackets using the appropriate screws for your supporting material.
2. Ensure the brackets are horizontal and near the ends of the casing. Fasten to the wall or ceiling, not both. (Figure 1)

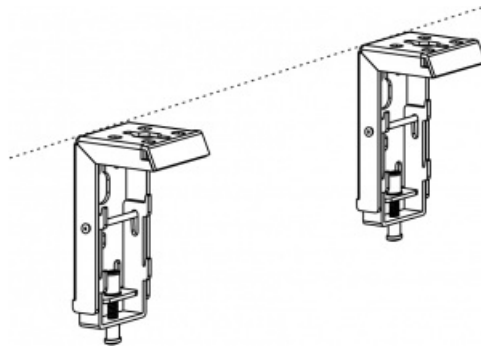


Figure 1

Installation Steps

- a) Wood supporting materials: Drill in the $\varnothing 5 \times 40$ screws through the appropriate holes in the bracket (Figure 2-3).
- b) Concrete supporting materials: Install the anchors and drill in the $\varnothing 5 \times 40$. (Figure 4-5).

Wood wall installation

Wood ceiling installation

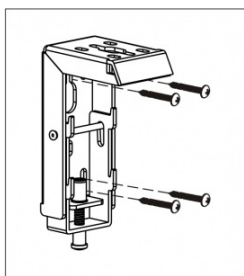


Figure 2

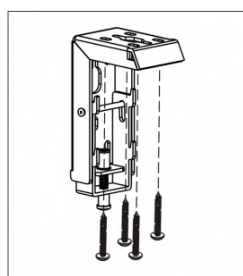


Figure 3

Concrete wall installation

Concrete ceiling installation

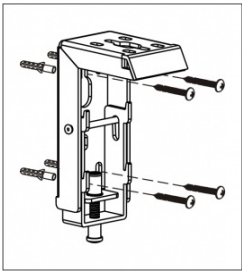


Figure 4

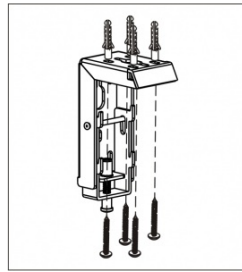


Figure 5

2

3. Loosen the locking screw to lower the bracket clamp all the way down. (Figure 6-7)

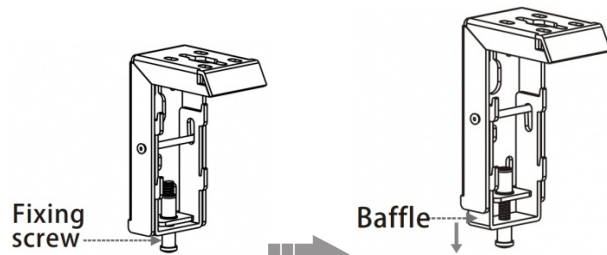


Figure 6

Figure 7

4. Mount the projection screen by sliding the casing grooves over the bracket hooks. (Figure 8-9)

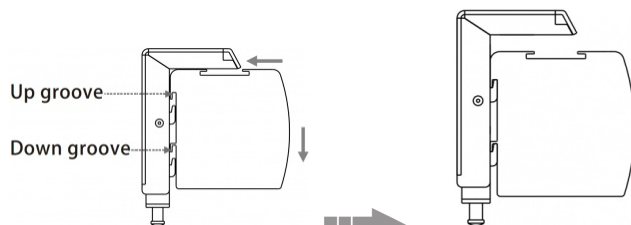


Figure 8

Figure 9

5. Tighten the locking screw to clamp the screen securely in place. (Figure 10-11)

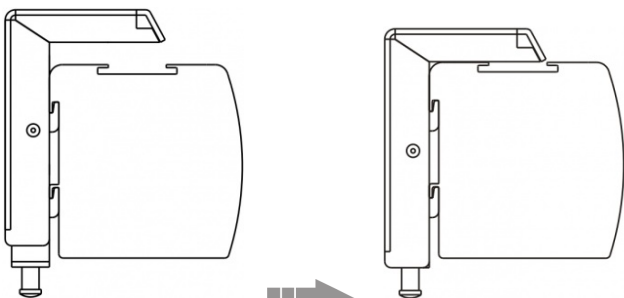


Figure 10

Figure 11

3

Ceiling hang installation

Each end of the screen casing needs to be supported by a hook (not provided). Ensure that the suspension system (cable and/or hook) can support the weight of the screen.

1. To drill two same holes with an electric drill horizontally with wall, then fasten hangers (unprovided) onto the ceiling. (Figure 12)

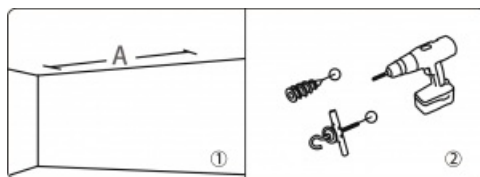


Figure 12

2. Use three M5x10mm screws to fasten the hanging brackets, to the wall and ceiling brackets as shown. (Figure 13-14)

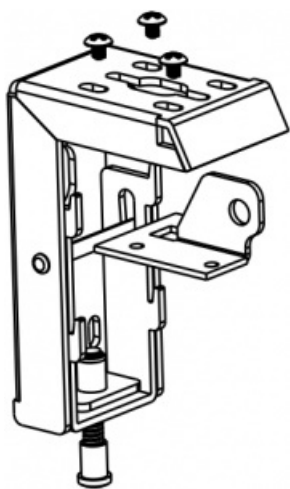


Figure 13

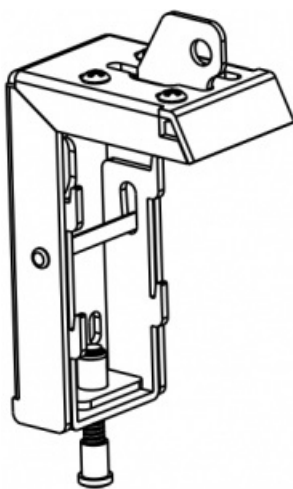


Figure 14

3. Attach the wall and ceiling brackets to the casing as shown in figures 15 and 16.

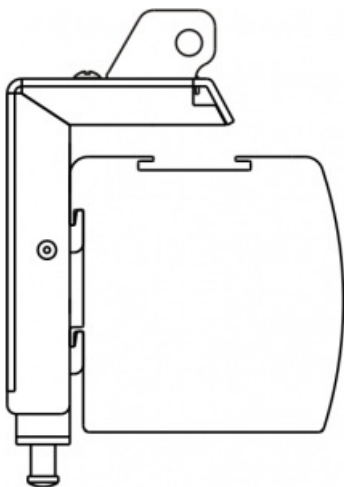


Figure 15

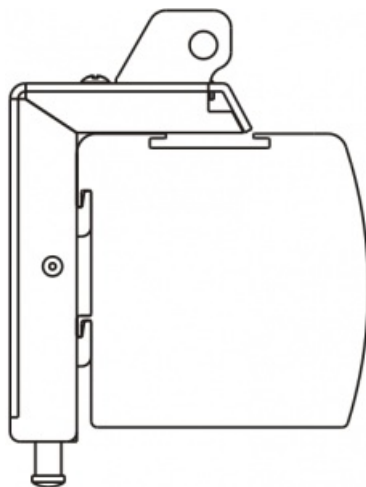


Figure 16

4. Place hooks through the hanging brackets to suspend the projection screen as shown. See figure 17.

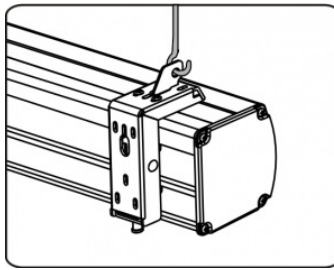


Figure 17

4

Operation

1. Lowering the screen:

Using the pull down handle, lower the screen with a gentle even action until desired height is reached. The screen will stop when it reaches its maximum.

DO NOT ATTEMPT TO FORCE THE SCREEN LOWER THAN THIS POINT.

The screen will retract slightly before locking in place.

2. Raising the screen:

Using the handle, pull down the screen a small way, then allow the screen to raise quickly.

Caution: Do not let go off the handle until the screen is fully retracted. Damage from retracting too rapidly can occur. Do not allow the dropper bar to hit the screen case when retracting.



Picture 1



Picture 2

5

Warnings

- The warranty will only be valid if you follow the instructions below carefully! Improper use and care may cause serious injury and/or damage!
- Make sure the Fixing screw be fastened when using the wall bracket, to avoid any damage.
- Make sure the surface you have chosen for installing the screen is flat and secure.
- Please read the following as any damage to the screen surface will impact the image's quality:

1. Do not touch the screen surface by hand.
2. Do not write or draw on the screen surface.
3. Do not poke the screen surface by finger or edge tools, as it may cause scratches or tears.
4. Do not use any detergent or cleaning products to clean the screen surface, please clean it with a soft

cloth and lukewarm water.

- Retract the screen after every use.
- Ensure the screen is level when it is wall-mounted installation, when the screen is spread, it should be balanceable with the wall.
- Do not pull two sides of the screen fabric by hands, do not fold the screen fabric.
- To prevent unnecessary damage, the operation and maintenance of the screen should be done by adult.



Ignoring the safety warnings may lead to injuries or damaging the product.



Retract the screen after every use. Leave it hanging for a long period may cause screen fabric loose



Avoid hanging anything on the screen as it may cause the screen to fall down.



The screen should be installed at secure place to avoid any accidents or the screen falling down.



Please contact your local dealer for repair or maintenance, and contact us if you have any further questions. Avoid taking apart the fixtures by yourself. Loose parts may cause the screen fall down.

Do not take apart and replace with unknown parts. If there are any problems, please contact your local dealer. Product specifications are subject to change.

6



Optoma Europe Ltd.

42 Caxton Way

The Watford Business Park

Watford Hertfordshire WD18 8QZ UK

Tel: +44 (0) 1923 691 800

Fax: +44 (0) 1923 691 888


www.optoma.co.uk



ISO9001:2000

International Certification

Documents / Resources

	<p>Optoma Pull-Down Screen [pdf] Instructions Pull-Down Screen</p>
---	--

[Manuals+](#).