



OPTONICA 6341 10-Key RF Remote Controller User Guide

[Home](#) » [OPTONICA](#) » OPTONICA 6341 10-Key RF Remote Controller User Guide 

OPTONICA 6341 10-Key RF Remote Controller User Guide



Contents

- [1 Safety information](#)
- [2 Features](#)
- [3 Technical Parameters](#)
- [4 Mechanical Structures and Installations](#)
- [5 Match Remote Control \(two match ways\)](#)
- [6 Key function](#)
- [7 Warranty](#)
- [8 Documents / Resources](#)
- [9 Related Posts](#)

Safety information

1. Read all instructions carefully before you begin this installation.
2. When installing battery, pay attention to the battery positive and negative polarity. A long time without the remote control, remove the battery. When remote distance becomes smaller and insensitive, replace the battery.
3. If no response from the receiver, please re-match the remote.
4. Gently handle remote, beware of falling.
5. For indoor and dry location use only.

Features

- Apply to single color or dual color LED controller.
- Each remote can match one or more receiver.
- R bC 2032 attery powered.
- Operate with LED indicator light.
- Magnet on the back which can be easily stuck on back holder or any metal surfaces.


Technical Parameters

Input and Output	
Output signal	RF(2.4GHz)
Working voltage	3VDC(CR2032)
Working current	5mA
Standby current	2 μ A
Standby time	2 years
Remote distance	30m

Safety and EMC	
EMC standard (EMC)	EN301 489,EN 62479
Safety standard(LVD)	EN60950
Radio Equipment(RED)	EN300 328
Certification	CE,EMC,LVD,RED

Environment	
Operation temperature	Ta: -30 OC ~ +55 OC
Case temperature (Max.)	T c: +85OC
IP rating	IP20

Mechanical Structures and Installations

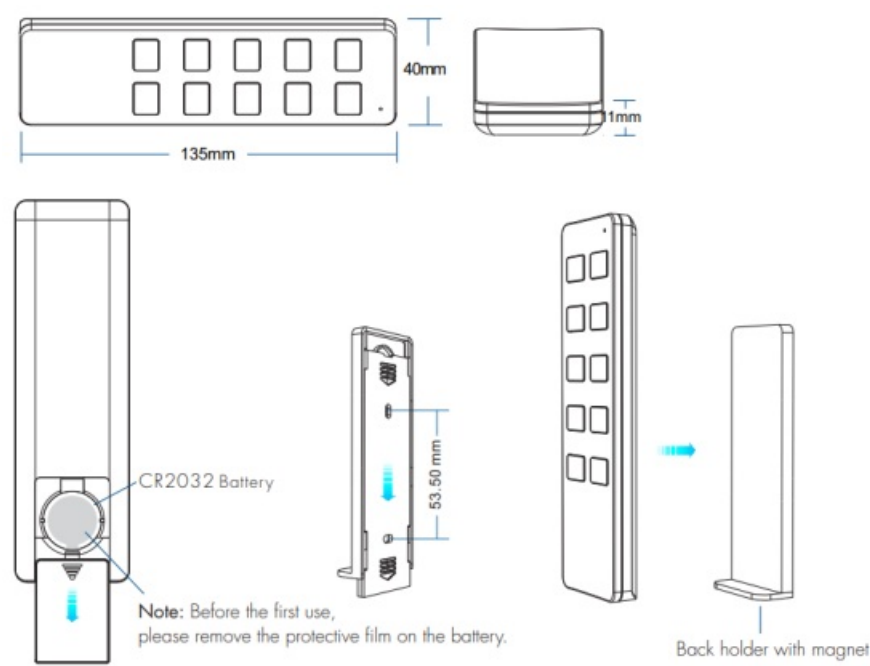

To fix the remote, three options are offered for selection:

- Option 1: stuck the remote on any metal surfaces directly.
- Option 2: fix the remote' back holder on the wall with two screws.
- Option 3: adhere the remote' back holder to the wall with paster.

Match Remote Control (two match ways)

End user can choose the suitable match/delete ways. Two options are offered for selection:

Use the controller’s Match key

Match:

Short press match key, immediately press on/off key (single zone remote) or zone key (multiple zone remote) of the remote.

Delete:

Press and hold match key for 5s to delete all match, The light blinks 5 times means all matched remotes were deleted.

Use Power Restart

Match:


Switch off the power, then switch on power again, immediately short press on/off key (single zone remote) or zone key (multiple zone remote) 3 times on the remote. The light blinks 3 times means match is successful.

Delete:

Switch off the power, then switch on power again, immediately short press on/off key (single zone remote) or zone key (multiple zone remote) 5 times on the remote. The light blinks 5 times means all matched remotes were deleted.

Key function

4 zone dimming remote

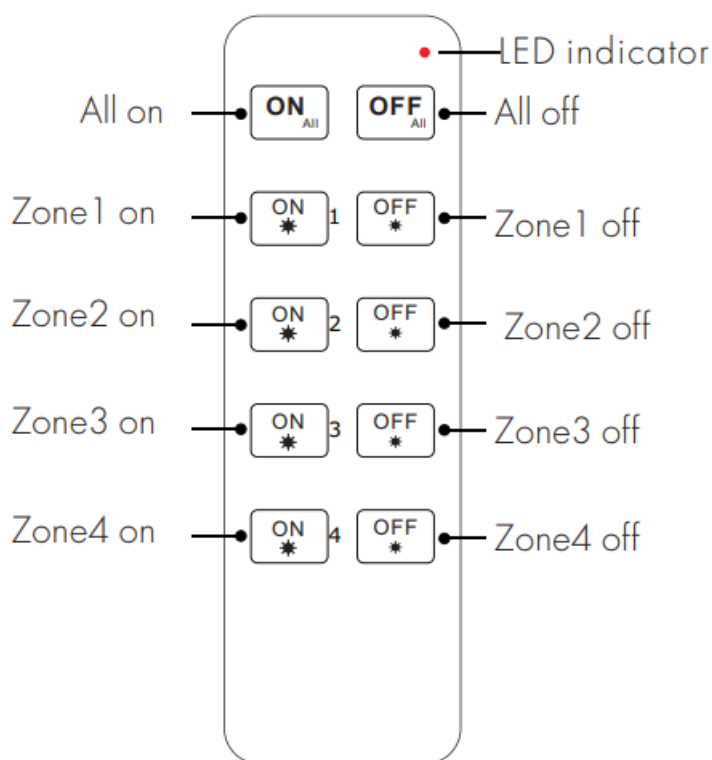

All on: Turn on all 4 zone light.

All off: Turn off all 4 zone light.

Zone 1 4 on – :

Short press turn on zone light, long press 1-6s increase brightness continuously.


Zone 1 4 off – :

Short press turn off zone light, long press 1-6s decrease brightness continuously.

Warranty

Warranty 3 years

Documents / Resources

	<p>OPTONICA 6341 10-Key RF Remote Controller [pdf] User Guide 6341 10-Key RF Remote Controller, 6341, 10-Key RF Remote Controller</p>
---	---