


# OPTONICA 6383 WiFi and RF 5 In 1 LED Controller User **Manual**

Home » OPTONICA » OPTONICA 6383 WiFi and RF 5 In 1 LED Controller User Manual



## OPTONICA 6383 WiFi and RF 5 In 1 LED Controller

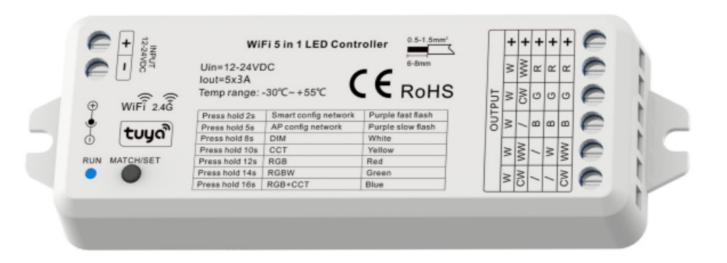

FC C CE ROHS EMC LVD RED

Tuya APP cloud control/Voice control/5 Channels/1-5 color/DC power socket input/Wireless remote control

#### **Contents**

- 1 Features
- **2 Technical Parameters**
- 3 Mechanical Structures and Installations
- 4 System wiring
- **5 Wiring Diagram**
- 6 Tuya APP network connection
- 7 Tuya APP interface
- 8 6383 match remote control (Optional)
- 9 6383 work as WiFi-RF converter to match RF LED controller or dimming driver
- 10 Dynamic mode list
- 11 Documents / Resources
- 12 Related Posts

### **Features**

- 5 in 1 function, used for control RGB, RGBW, RGB+CCT, color temperature or single color LED strip.
- DC power socket input and 5 channel constant voltage output.
- Tuya APP cloud control, support on/off, RGB color, color temperature and brightness adjust, delay turn on/off light, timer run, scene edit and music play function.
- Voice control, support amazon ECHO and TmallGenie smart speaker.
- Match with RF 2.4G remote control optional.
- User need set light type by press key before Tuya APP network connection and match RF remote of the same light type.
- This controller can also work as WiFi-RF converter, then use Tuya APP to control one or more RF LED controller orRF LED dimming driver synchronously.
- Light on/off fade time 3s selectable.

### **Technical Parameters**

Input and Output	
Input voltage	12-24VDC
Input current	15.5A
Output voltage	5 x (12-24)VDC
Output current	5CH,3A/CH
Output power	5 x (36-72)W
Output type	Constant voltage


Dimming data	
Input signal	Tuya APP + RF 2.4GHz
Control distance	30m(Barrier-free space)
Dimming gray scale	4096 (2^12) levels
Dimming range	0 -100%
Dimming curve	Logarithmic
PWM Frequency	1000Hz (default)

Safety and EMC	
EMC standard (EMC)	ETSI EN 301 489-1 V2.2.3 ETSI EN 301 489-17 V3.2.4
Safety standard(LVD)	EN 62368-1:2020+A11:2020
Radio Equipment(RED)	ETSI EN 300 328 V2.2.2
Certification	CE,EMC,LVD,RED

Environment	
Operation temperature	Ta: -30 OC ~ +55 OC
Case temperature (Max.)	T c: +85OC
IP rating	IP20

Warranty and Protection	
Warranty	3 years
Protection	Reverse polarity Over-heat Short circuit

# **Mechanical Structures and Installations**

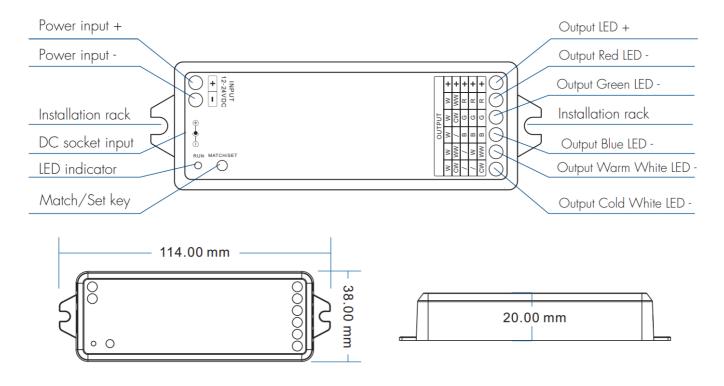


# **System wiring**

#### Note:

- 1. The above distance is measured in spacious (no obstacle) environment, Please refer to the actual test distance before installation.
- 2. Please check if the WiFi router net in 2.4G band, the 5G band is not available, and do not hide your router network.
- 3. Please . keep the distance between devices and router close, and check the WiFi signals.

## **Wiring Diagram**

 
### For RGB+CCT



#### **RGB+CCT** remote

Press and hold match/set key for 16s, until the RUN LED indicator turn blue, then release, the controller will become RGB+CCT type, then do smart config by tuya APP, or short press match key to match with RGB+CCT RF remote.

 
## For RGBW



## **RGBW** remote

Press and hold match/set key for 14s, until the RUN LED indicator turn green, then release, the controller will become RGBW type, then do smart config by tuya APP, or short press match key to match with RGBW RF remote.

 
#### For RGB



#### **RGB** remote

Press and hold match/set key for 12s, until the RUN LED indicator turn red, then release, the controller will become RGB type, then do smart config by tuya APP, or short press match key to match with RGB RF remote.

 
## For dual color CCT



#### **CCT** remote

Press and hold match/set key for 10s, until the RUN LED indicator turn yellow, then release, the controller will become CCT type, then do smart config by tuya APP, or short press match key to match with CCT RF remote.
 
## For single color



### **Dimming remote**

Press and hold match/set key for 8s, until the RUN LED indicator turn white, then release, the controller will become DIM type, then do smart config by tuya APP, or short press match key to match with dimming RF remote.

#### Note:

- 1. User can connect constant voltage power supply or power adapter as power input.
- 2. For RGB+CCT or CCT light type, continuous power on and off will change 3 levels color temperature ( **WW, NW** and **WH**) in sequence.
- 3. Switch off the power, then switch on power, repeat again. Immediately short press match key 3 times, the light on/off time will change between 3s and 0.5s.

## Tuya APP network connection

Press and hold Match/Set key for 2s, or push twice Match/Set key fastly, or when press and hold Match/Set key for 8-16s to set 5 kinds light type:

Clear previous network connection, enter Smart config mode, the purple LED indicator flash fastly, the output LED will flash 10 times.


Press and hold Match/Set key for 5s:

Clear previous network connection, enter AP config mode, the purple LED indicator flash slowly. If smart config failed, please try AP config.

Repeat power on and off for 5 consecutive times, also clear previous network connection, enter Smart config mode, the output LED will flash 10 times.

If Tuya APP network connection succeed, the RUN LED indicator will stop flash purple, and turn corresponding light type color (White: DIM, Yellow: CCT, Red: RGB, Green: RGBW, Blue: RGB+CCT). and in Tuya APP, you can find RGB+CCT device (or other DIM, CCT, RGB or RGBW).

## Tuya APP interface

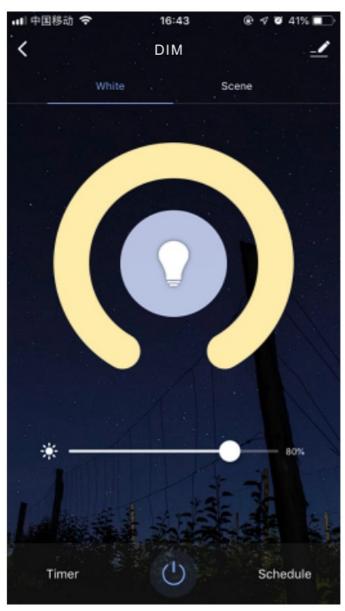

## White interface

For DIM type:


Touch brightness slide to adjust brightness.

For RGB type:

Touch brightness slide, get RGB mixed white firstly, then to adjust white brightness.

For RGBW type:

Touch brightness slide, adjust white channel brightness.

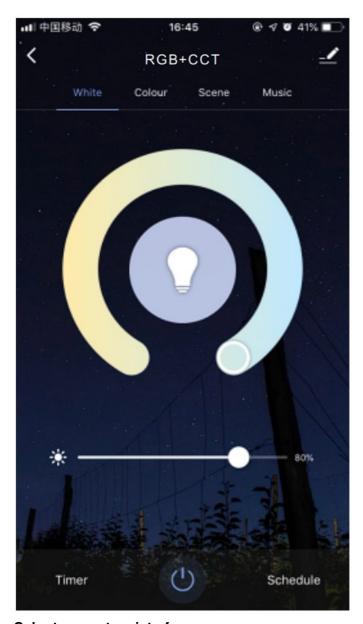

# Color temperature interface

For CCT type:

Touch color wheel to adjust color temperature.

Touch brightness slide to adjust brightness.

For RGB+CCT type:

Touch color wheel to adjust color temperature, RGB will turn off automatically. Touch brightness slide to adjust white brightness.



### **Colour interface**

For RGB or RGBW type:

Touch color wheel to adjust static RGB color.

Touch brightness slide to adjust color brightness.

Touch saturation slide to adjust color saturation, namely gradient from the current color to white(RGB mixed). For RGB+CCT type:

Touch color wheel to adjust static RGB color, WW/CW will turn off automatically.

Touch brightness slide to adjust color brightness.


Touch saturation slide to adjust color saturation, namely gradient from the current color to white (RGB mixed).



## Scene interface

The 1-4 scene is static color for all light type. the inner color of these scene can be editable.

The 5-8 scene is dynamic mode for RGB, RGBW, RGB+CCT type, such as green fade in and fade out, RGB jump, 6 color jump, 6 color smooth.

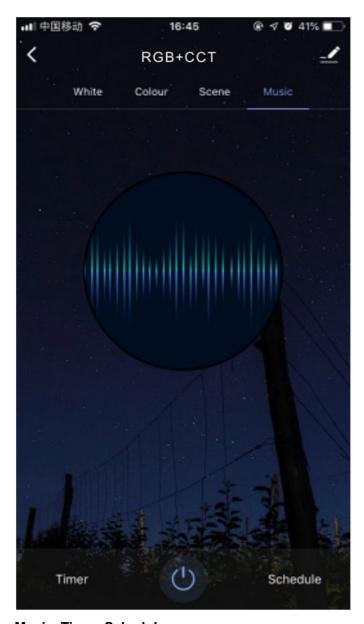

## Music, Timer, Schedule

The music play can use smart phone music player or micro-phone as music signal input.

The Timer key can turn on or turn off light in the next 24 hours.

The Schedule key can add multiple timers to turn on or turn off light according to different time periods.

IMPORTER: Prima Group 2004 LTD, Bulgaria, 1784 Sofia, Mladost 1, bl. 144, Ground Floor; Phone: +359 2 988 45 72;

# 6383 match remote control (Optional)

End user can choose the suitable match/delete ways. Two options are offered for selection:

Use the 6383 Match key	Use Power Restart
Match: Short press match key of 6383, immediately press o n/off key (single zone remote) or zone key (multiple zone remote) on the remote. The LED indicator fast flash a few times means match is successful.	Match: Switch off the power of 6383, then switch on power, repe at again. Immediately short press on/off key (single zone remote) or zone key (multiple zone remote) 3 times on the remote. The light blinks 3 times means match is successful.
Delete: Press and hold match key of 6383 for 20s, The LED indicator fast flash a few times means all matched r emotes were deleted.	Delete: Switch off the power of 6383, then switch on power, repe at again. Immediately short press on/off key (single zone remote) or zone key (multiple zone remote) 5 times on the remote. The light blinks 5 times means all matched remotes were deleted.

# 6383 work as WiFi-RF converter to match RF LED controller or dimming driver

End user can choose the suitable match/delete ways. Two options are offered for selection:

Use the controller's Match key	Use Power Restart
Match: Short press match key of the controller, immediately press on/off key on the Tuya APP. The LED indicator fast flash a few times means match is succ essful.	Match: Switch off the power of the controller, then switch on pow er, repeat again. Immediately short press on/off key 3 tim es on the Tuya APP. The light blinks 3 times means match is successful.
Delete: Press and hold match key of the controller for 5s, T he LED indicator fast flash a few times means matc h was deleted.	Delete: Switch off the power of the controller, then switch on pow er, repeat again. Immediately short press on/off key 5 times on the Tuya A PP. The light blinks 5 times means match was deleted.

# Dynamic mode list

For RGB/RGBW:

No.	Name
1	RGB jump
2	RGB smooth
3	6 color jump
4	6 color smooth
5	Yellow cyan purple smooth
6	RGB fade in and out
7	Red fade in and out
8	Green fade in and out
9	Blue fade in and out
10	White fade in and out

For RGB+CCT:

No.	Name
1	RGB jump
2	RGB smooth
3	6 color jump
4	6 color smooth
5	Color temperature smooth
6	RGB fade in and out
7	Red fade in and out
8	Green fade in and out
9	Blue fade in and out
10	White fade in and out



## **Documents / Resources**



OPTONICA 6383 WiFi and RF 5 In 1 LED Controller [pdf] User Manual 6383, WiFi and RF 5 In 1 LED Controller, 6383 WiFi and RF 5 In 1 LED Controller

Manuals+, home privacy