



ORACURA OC400 Compact PLUS Water Flosser Owner's Manual

[Home](#) » [ORACURA](#) » ORACURA OC400 Compact PLUS Water Flosser Owner's Manual 

ORACURA OC400 Compact PLUS Water Flosser Owner's Manual



THANK YOU

Thank you for choosing ORACURA's OC400 Compact Plus Water Flosser Please check if the package is intact before using it.

Contents

- 1 Package Content
- 2 Accessories Included
- 3 How to Charge the OC400 Water Flosser
- 4 Installment and Removal of the Jet Tips
- 5 Filling Water in the Tank
- 6 Power Button and Functional Modes
- 7 Operation Instructions
- 8 Cleaning and Maintenance
- 9 Environmental Protection
- 10 To Deal With The Battery
- 11 To Remove The Battery
- 12 Product Information
- 13 ORACURA® Product Range
- 14 Documents / Resources
 - 14.1 References
- 15 Related Posts

Package Content



Accessories Included


- OC400



- Operational Manual



- USB Charging Cable

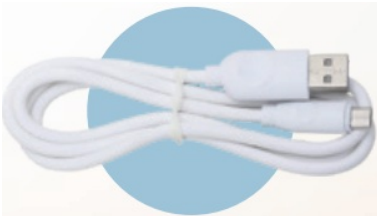

- 5 Nozzle Tips



- Travel Pouch



How to Charge the OC400 Water Flosser



1. Take out the charging point rubber and insert the USB Charging Cable plug securely into the water flosser® charging point socket. Before inserting the plug, ensure that there are no traces of liquid inside the socket.
2. Connect the USB Charging Cable to the USB Charging Source.
3. The “CH” indicator blinks when the water flosser® is charging and it will turn off once it is fully charged.
4. After charging, cover the charging point again with charging point rubber. If the “CH” indicator blinks during or after water flossing, it means that the water flosser® battery needs to be recharged. Full recharging will take about 5 hours.

Installment and Removal of the Jet Tips

1. Take out the Standard Nozzle tip from the tip storage.
2. Insert the Standard Nozzle tip into the hole where it can hold the tip firmly.
3. When you hear the “click” sound it means its successfully installed.
4. Please press the tip button first when you want to remove the tip, then take it out and put it into the tip storage.

Warning: Please don't press the tip button when the device is working



Filling Water in the Tank

1. Open the valve of the water tank, and pull the water tank downwards till the watermark line.
2. Hold the water tank horizontally, and fill the water into the water tank.
3. After it's filled, close the valve of the water tank.

Note: Open the valve of the water tank BEFORE pulling it downward or it may get difficult because of the air pressure.

Clean running water is recommended. If you feel the water is cold, you can use warm water with a temperature below 40°C.

It's the same with salt water with below 50% concentration or mouthwash.



Power Button and Functional Modes

You can select the desired operation mode by pressing the power button on your water flosser® handle.

Soft Mode: The low water pressure allows for gentle cleaning of the mouth. Ideal for first-time users, children (age 8+ years), the elderly, and people with gum problems.

Normal Mode: Higher water pressure ensures advanced cleaning. Ideal for everyday use.

Pulse Mode: The flow of water comes out in short bursts, which is ideal for cleaning & massaging the gums.

- Press the power button and the indicator light will turn on.
- Change the functional modes – Normal, Soft, and Pulse by pressing the power button within 5 seconds.
- The soft mode is recommended for beginning use.
- The product has a smart memory chip inside, which can remember the user's habits.
- It will work automatically based on the mode you used last time.

Note – There's a single button for modes, pressure settings, and power on and off.



Operation Instructions

1. Put the jet tip into the mouth and press the power button to select the desired mode.
2. Aim the jet tip at the teeth, crevices, or gums and tilt your head lightly so that the water flows down vertically to the rinse area.
3. Point the water jet to the areas between teeth and gums.
4. When cleaning the teeth, please open your mouth slightly to avoid the water spray.
5. Keep the device vertically during use to prevent the interruption of water flow while usage.

Scan for Live Demo

You can schedule a live product demonstration by scanning the above QR code.



Cleaning and Maintenance

- **TO CLEAN** – Switch off the power, open the water tank cover and pour out the water.
- Turn on the switch and drain the water in the tank.
- This product is IPX7 Waterproof designed and can be cleaned directly with water.
- Gently wipe the water on the device with a soft cloth and keep it in a dry place
- **FOR MAINTENANCE** – Wash with water and dry with cloth.
- It is recommended to replace the tip that is deformed or it will further affect the use and break down
- **TO CLEAN THE BODY** – Use a soft slightly moistened cloth and wipe the outside of the product with a small amount of mild detergent.
- The water tank is removable for easy cleaning.
- It is recommended to clean the water tank once a week.

Note

- Do not wash the device with hot water above 50°C.
- Do not use diluents, alcohol or other stimulants otherwise the product could be damaged

Attention

- To reduce the risk of burning, electrocution, fire, or injury to people
- Check the device/ charger to see voltage compatibility; do not connect to a different voltage
- Do not touch charger with wet hands.
- Do not use this product if there is any damage on the USB Charging Cable, plug, or the product itself or if the

product is not functioning properly

- Do not direct water under the tongue, into the ear, nose or other delicate areas as the pressure may cause serious damage.
- Use this product only as indicated in these instructions or as recommended by your dentist.
- Fill the water tank with water or other dentist recommended solutions only.
- Do not drop or insert any foreign object into any opening of the product.
- USB Charging cable cannot be replaced; if it is damaged please do not use it.
- Do not use this product outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
- Do not use iodine, bleach or water insoluble concentrated essential oils in this product. Use of these can reduce product performance and will shorten the life of the product.
- Remove any oral jewelry before using this product.
- Do not use it if you have any open wounds on your tongue or in your mouth.
- If your physician advised you to receive antibiotic premedication before dental procedures, you should consult your dentist before using this instrument or any other oral hygiene aid.
- Children should be supervised to ensure that they do not play with the device.
- Storage space should be dry and clean, keep free from direct sunlight and heat.
- If the device needs to be stored for a period of time more than 3 months, it must be fully charged before storing.
- Try not to operate the device when the water tank is empty so as to avoid damaging the device.

Environmental Protection

If you want to discard this product, please do not place it together with domestic waste but send it to the officially designated recycling center and dispose the battery at the officially designated battery recycling center. Doing so can benefit environmental protection.



Please Note: The nozzle tips should be replaced after every 3-4 months.

If you face any problems while using our product or have any complaints regarding the same, we advise you to visit our return policy page.

<https://oracura.in/pages/return-policy>

Register your product by scanning the QR code or visiting the link given below.

<https://oracura.in/pages/register>



2 years of limited warranty is applicable for material, manufacturing, or operational defects existing at the time of delivery or for the occurrence of any operational error during regular use. Any mishandling of the product or alteration/repair done by an unauthorized person will void the warranty. Consumer is required to submit the original purchase invoice as proof of purchase date and if requested submit the entire product to support, to claim warranty.



To Deal With The Battery

The built-in rechargeable battery contains substances that may pollute the environment. Please make sure to remove the built-in battery when you want to throw the device away. Then take the battery or the device to the social recycling center. Do not remove the rechargeable battery of the device unless you don't want it. Make sure the battery power has been run off before you remove it.

To Remove The Battery

- Switch off the device
- Open the top cover of the device
- Remove the battery

Problems	Reasons	Solutions
Not working	The product has just been purchased or it has been idle for more than 3 months.	Charge the product for 5 hours.
Leakage occurs between tip and handle knob	The tip doesn't insert completely	Take off the tip and replace it
Low Water Pressure	Dirt stuck in the tip The top of the tip has pressure got deformed Dirt in the pump	Change the tip Contact customer service
No water shot	There is dirt stuck to the filter The water storage unit is not filled with water when using the product When using the product it tilts too much The water pipe is not installed The water pump is full of dirt	Clean the filter Fill the water storage tank Use the product in vertical state Reload plumbing Contact customer service

Product Information

Working Modes	Normal, Soft, Pulse
Pulse Rated Voltage	5V DC
Rated Power	8W
Rated Water Pressure	30-90 PSI
Pulse Frequency	1600 rmp/min
Charging Time	5 Hours
Water Tank Capacity	120 ml
Battery Specification	1100mAh 3.6V Lithium Battery
Executive Standard	EN 60335-1: 2012; EN 60335-2-52:2003;EN 62233: 2008

ORACURA® Product Range

ORACURA® also offers various products such as:

- Water Flossers
- Sonic Electric Toothbrushes
- Combo Packs
- Spare Parts
- Accessories

For the complete product range, **Visit:** <https://oracura.in/> OR Scan Above QR Code



Keep Your Product Up & Running, Always!
Accessories & Spare Parts To Buy with OC400



- Tongue Scraper



- Pocket tip



- Standard Tip



- Orthodontic Tip



- Travel Pouch



- USB Charging Cable



Service Station:
ORACURA® Solutions Pvt. Ltd.

6th Floor, Unit 1, Plot No. 233/2 Vidhani Kalpavruksha, MIDC Industrial Area, T.T.C. Industrial Area, Mumbai – Pune Hwy, Shiravane, Nerul, Navi Mumbai, Maharashtra, 400706


Visit Us: www.oracura.in
Email: support@oracura.in
Phone: +91 77387 33700

Certificate Manufacturer



ORACURA®

Documents / Resources

	<p>ORACURA OC400 Compact PLUS Water Flosser [pdf] Owner's Manual OC400 Compact PLUS Water Flosser, OC400, Compact PLUS Water Flosser, PLUS Water Flosser, Water Flosser, Flosser</p>
---	--

References

- [Leading Cordless Water Flosser & Electric Toothbrush Providers India](#)
- [Leading Cordless Water Flosser & Electric Toothbrush Providers India](#)
- [Register Your Product With Simple and Easy Steps!](#)
- [Return Policy | Oracura.in](#)
- [User Manual](#)

Manuals+