



Orbegozo ENM 2000 Plug with Remote Control Instruction Manual

[Home](#) » [Orbegozo](#) » Orbegozo ENM 2000 Plug with Remote Control Instruction Manual 

Orbegozo ENM 2000 Plug with Remote Control



ENM 2000

Contents

- [1 BASIC SAFEGUARDS](#)
- [2 IMPORTANT](#)
- [3 Description](#)
- [4 Installation](#)
- [5 Specifications](#)
- [6 Documents / Resources](#)
 - [6.1 References](#)
- [7 Related Posts](#)

BASIC SAFEGUARDS

READ ALL INSTRUCTIONS BEFORE USE.

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children must

never play with the appliance. Cleaning and user maintenance must never be carried out by children without supervision.

2. Children should be supervised to ensure that they do not play with the appliance.
3. Keep the appliance and the cable cord out of the reach of children less than 8 years old.
4. WARNING: In order to ensure your children's safety, please keep all packaging (plastic bags, boxes, polystyrene etc.) out of their reach.
5. If the supply cord is damaged it must be repaired by the Authorized Service Agent.
6. Never pull on the cord when unplugging.
7. Do not use the unit with a damaged cord or plug, or if it is not working properly.
8. Do not handle the appliance with wet hands.
9. Never immerse the appliance in water or any other liquid.
10. Make sure the appliance has been unplugged before cleaning.
11. This appliance must be installed following the national regulations for electrical installations.
12. This appliance is for household use only.
13. In case that you need a copy of the instruction manual, you can find it in www.orbegozo.com.
14. WARNING: In case of misuse, there is a risk of possible injury.

IMPORTANT

- Do not plug a device if it exceeds 16 Amp.
- Always make sure the device is properly connected to the device.
- If you need to clear the device, unplug it from the mains and wipe with a dry cloth.
- Do not immerse the timer in water or other liquid.
- Radiators and the like should not be left unattended while running. The manufacturer does not recommend connecting such devices to the timer.

Description

1. Remote control ON/OFF transmitter.
2. Receptor grounding plug.
3. ON/OFF button with indicator light.



Installation

1. Take the double-side sticker, stick one side on rear side of remote control transmitter.
2. Now look for a suitable place on the wall for transmitter. Ensure it is flat and clean it of any dirt, then stick firmly transmitter on the wall with double-side sticker on its rear side.
3. Plug receptor to socket, which should be placed within 40 m of transmitter and switch on.
4. You just have to plug any electronic appliance in the socket and use remote control to turn on and turn off.

This plug doesn't have battery, so that you won't need to remove transmitter from the wall once installed. Besides, it doesn't need tool for installing.

ATTENTION: the remote control needs to be away from a strong electromagnetic environment, or near a piece of metal.

Specifications

| | |
|-------------------------------|------------------------------|
| Transmitter | |
| Frequency of transmission: | 433MHz. |
| Range of working temperature: | -10°C – 60°C. |
| Distance range: | 150 m outdoor / 40 m indoor. |
| Receptor | |
| Tension: | AC 100-240V 50/60Hz 0.1A. |
| Range of working temperature: | -25°C – 75°C. |
| Supported power: | 3680W, 16 A. |

Disposal of old electrical appliances.

The European directive 2012/19/EU on Waste Electrical and Electronic Equipment (WEEE), requires that old household electrical appliances must not be disposed of in the normal unsorted municipal waste stream. Old appliances must be collected separately in order to optimize the recovery and recycling of the materials they contain, and reduce the impact on human health and the environment


The crossed out “wheeled bin” symbol on the product reminds you of your obligation, that when you dispose of the appliance, it must be separately collected.

Consumers should contact their local authority or retailer for information concerning the correct disposal of their old appliance.

DECLARATION OF CONFORMITY: This device complies with the requirements of the Low Voltage Directive 2014/35/EU and the requirements of the EMC directive 2014/30/EU.



Documents / Resources

| | |
|---|--|
|  | <p>Orbegozo ENM 2000 Plug with Remote Control [pdf] Instruction Manual ENM 2000, Plug with Remote Control, ENM 2000 Plug with Remote Control</p> |
|---|--|

References

-  [Orbegozo Electrodomésticos | Todo para tu hogar y cocina](#)