

Orbegozo

**NO 3100 Nose
and Ears
Clipper**



Orbegozo NO 3100 Nose and Ears Clipper Instruction Manual

[Home](#) » [Orbegozo](#) » Orbegozo NO 3100 Nose and Ears Clipper Instruction Manual 

Contents

- [1 Orbegozo NO 3100 Nose and Ears Clipper](#)
- [2 Product Usage Instructions](#)
- [3 SPARE PARTS](#)
- [4 USE](#)
- [5 FAQs](#)
- [6 Documents / Resources](#)
 - [6.1 References](#)

Orbegozo

Orbegozo NO 3100 Nose and Ears Clipper



Specifications

- Model: NO 3100
- Power Source: 1.5V AA LR6 battery (alkaline recommended)
- Components: Protective cap, Clipping head, Operating lamp, ON/OFF switch, Battery compartment lid, Holder

Product Usage Instructions

Safety Precautions:

- Keep the trimmer and batteries out of children's reach.
- Do not insert the trimmer more than 0.5 cm into the ear or nose.
- Ensure the clipping head or trimming attachment are firmly attached.
- Do not recharge non-rechargeable batteries.
- When cleaning, ensure the battery lid is tightly closed.

Inserting the Battery

- Turn the battery lid anticlockwise to remove it.
- Insert a 1.5V AA LR6 battery with the positive terminal facing the clipping head.
- Replace and turn the battery lid clockwise to secure it in place.

Use

- Remove nose hairs by moving the trimmer in a circular motion carefully.

Cleaning:

Caution: Never immerse the appliance in water.

After Each Use:

- Turn off the trimmer before cleaning.
- Rinse the clipping head and trimming attachment in hot water.
- Wipe the outside of the trimmer with a dry cloth.
- Replace the protective cap on the trimmer.

Troubleshooting:

- The trimmer does not work: Check if the battery is low.
- Motor operates irregularly: Clean the clipping head.
- Motor stops: Ensure the battery compartment lid is fitted properly.

SAFETY PRECAUTIONS

1. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children must never play with the appliance. Cleaning and user maintenance must never be carried out by children without supervision.
2. Children should be supervised to ensure that they do not play with the appliance.
3. **WARNING:** In order to ensure your children's safety, please keep all packaging (plastic bags, boxes, polystyrene etc.) out of their reach.
4. Do not handle the appliance with wet hands.
5. Never immerse the appliance in water or any other liquid.
6. Make sure the appliance has been unplugged before cleaning.
7. This appliance must be installed following the national regulations for electrical installations.
8. This appliance is for household use only.
9. In case that you need a copy of the instruction manual, you can find it in www.orbegozo.com
10. **WARNING:** In case of misuse, there is a risk of possible injury.

NO 3100

- The trimmer has been designed to trim hair in the nose and ears.
- Non-reusable and rechargeable batteries may cause death if swallowed. Therefore, keep the battery and trimmer out of children's reach. If a battery has been swallowed, see a doctor immediately.
- Do not insert the trimmer more than 0.5 cm into the ear or nostril as this may cause injury to the eardrum or nasal mucous membrane.
- When using the trimmer, make sure that the clipping head or trimming attachment are firmly attached.
- Non-rechargeable batteries must not be recharged or reactivated, taken apart or thrown in the rubbish. When depleted, take to the appropriate recycling container.
- When cleaning the appliance, make sure that the battery lid is tightly closed.
- Stop the appliance after use, replace the clipping head (if it has been taken off), and put on the protective cap.

SPARE PARTS



1. Protective cap
2. Clipping head
3. Operating lamp
4. ON/OFF switch
5. Battery compartment lid
6. Holder

INSERTING THE BATTERY

The appliance operates with a 1.5V AA LR6 battery. It is best to use an alkaline battery. However, the appliance can also operate with an AA rechargeable battery.

- Turn the battery lid anticlockwise and remove it. The battery lid has a bayonet-type latch.
- Insert the battery with the positive terminal (+) facing the clipping head.
- Replace the battery lid and turn it clockwise until it fits into place.

USE

Warning: Do not insert the trimmer more than 0.5 cm into the ear or nostril as this may cause injury to the eardrum or nasal mucous membrane.

Attention: Always use a mirror

1. Turning on the trimmer
 - Remove the protective cap.
 - Move the ON/OFF switch towards the clipping head.
2. Turning off the trimmer
 - Move the ON/OFF switch toward the battery lid.
 - Clean the trimmer (see “Cleaning”).
 - Fit the clipping head and then place the protective cap on the clipping head.
3. Trimming ear hair
 - Turn on the trimmer and insert carefully in the outer ear.
 - Carefully move the trimmer along the areas with ear hairs.

4. Trimming nostril hair

- Turn on the trimmer and insert carefully in the nostrils.
- Remove nose hairs by carefully moving the trimmer in a circular motion.

CLEANING

- **Caution:** Never immerse the appliance in water.
- Always clean the trimmer after use.

AFTER EACH USE

- Turn off the trimmer before cleaning.
- Rinse the clipping head and trimming attachment in hot water.
- Wipe the outside of the trimmer with a dry cloth.
- Replace the protective cap on the trimmer.

TROUBLESHOOTING

- The trimmer does not work – Low battery?
- The motor operates irregularly – Clipping head dirty?
- The motor stops – Is the battery compartment lid fitted properly?

DISPOSAL OF OLD ELECTRICAL APPLIANCES



■ The European directive 2012/19/EU on Waste Electrical and Electronic Equipment (WEEE), requires that old household electrical appliances must not be disposed of in the normal unsorted municipal waste stream. Old appliances must be collected separately in order to optimize the recovery and recycling of the materials they contain, and reduce the impact on human health and the environment. The crossed out “wheeled bin” symbol on the product reminds you of your obligation that when you dispose of the appliance, it must be separately collected. Consumers should contact their local authorities or retailer for information concerning the correct disposal of their old appliance.

DECLARATION OF CONFORMITY:

This device complies with the requirements of the Low Voltage Directive 2014/35/EU and the requirements of the EMC directive 2014/30/EU.

GUARANTEE

- This appliance is covered and is entitled to the legal guarantee in accordance with the legislation in force from the date of purchase. Keep the purchase receipt to be able to claim your right to the guarantee. To find the closest service to your location, contact through the following web link: <https://orbegozo.com/asistencia-tecnica/>
- For any type of query, doubt or incident, you can contact us through our email shown on the main page of this manual or through our technical assistance service at <https://orbegozo.com/contacto/>
- Orbegozo is not responsible for components and accessories that are subject to wear and tear due to use, as

well as perishable compounds or those that have deteriorated due to improper use. Nor will it be held responsible if the owner has technically modified the device. Check the legal conditions on our website.

FAQs

Q: How should I dispose of old batteries?

A: Old batteries should be collected separately and disposed of according to local regulations. Contact your local authority or retailer for guidance.

Q: What is the warranty coverage for this appliance?

A: The appliance is covered by legal guarantee from the date of purchase. Keep the purchase receipt for warranty claims.


Q: How can I find service locations for repairs?

A: For service locations, visit Orbegozo Technical Assistance webpage.

Q: What components are not covered under warranty?




A: Components subject to wear and tear, perishable compounds, and those modified by the owner are not covered under warranty. Refer to Orbegozo's website for more information.

Documents / Resources

 <p>Orbegozo ELECTRODOMESTICOS S.A. CALLE 100 N. 100-100 BOGOTÁ, COLOMBIA TEL: 01 (57) 312 2000 WWW.ORBEGOZO.COM</p>	<p>Orbegozo NO 3100 Nose and Ears Clipper [pdf] Instruction Manual NO 3100 Nose and Ears Clipper, NO 3100, Nose and Ears Clipper, Ears Clipper</p>
---	--

References

-  [Orbegozo Electrodomésticos | Todo para tu hogar y cocina](#)

-  [Asistencia técnica - Orbegozo Electrodomésticos](#)
-  [Orbegozo Electrodomésticos | Todo para tu hogar y cocina](#)
-  [Contacto - Orbegozo Electrodomésticos](#)
- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.