



Orbegozo PA 4350 Popcorn Maker Instruction Manual

[Home](#) » [Orbegozo](#) » Orbegozo PA 4350 Popcorn Maker Instruction Manual 

Orbegozo PA 4350 Popcorn Maker Instruction Manual



Read this manual carefully before running this appliance and save it for reference in order to obtain the best results and ensure safe use.

Contents

- [1 General Safety Instructions](#)
- [2 OPERATION GUIDELINES](#)
- [3 CARE AND CLEANING](#)
- [4 RECIPES](#)
- [5 SPECIFICATIONS](#)
- [6 Documents / Resources](#)
 - [6.1 References](#)
- [7 Related Posts](#)

General Safety Instructions

1. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children must never play with the appliance. Cleaning and user maintenance must never be carried out by children without supervision.
2. Children should be supervised to ensure that they do not play with the appliance.
3. Keep the appliance and the cable cord out of the reach of children less than 8 years old.
4. **WARNING:** In order to ensure your children's safety, please keep all packaging (plastic bags, boxes, polystyrene etc.) out of their reach.
5. If the supply cord is damaged it must be repaired by the Authorized Service Agent.
6. Never pull on the cord when unplugging.
7. Do not use the unit with a damaged cord or plug, or if it is not working properly.
8. Do not handle the appliance with wet hands.
9. Never immerse the appliance in water or any other liquid.
10. Make sure the appliance has been unplugged before cleaning.
11. This appliance must be installed following the national regulations for electrical installations.
12. This appliance is for household use only.
13. In case that you need a copy of the instruction manual, you can find it in our website: www.orbegozo.com
14. **WARNING:** In case of misuse, there is a risk of possible injury.

Safety instructions



- **CAUTION:** The surface can remain hot during or after use.
- **VERY IMPORTANT:** Do not use in places where it could get wet (water splashes, etc.).
- **DO NOT USE OIL, SALT OR ANY OTHER PRODUCT** in the popcorn making chamber.
- Unplug from the mains when it is not being used, during storage, before fitting or removing attachments, and before cleaning.
- Do not leave the power cord touching hot objects.
- Use this appliance only for its intended purpose. Use the original attachments supplied by the manufacturer or an authorized distributor.
- This appliance should not be used outdoors or placed near a hot gas or electric cooker or placed in a hot oven.
- Do not use under or near inflammable materials, such as curtains or cloth hangings or any other type of combustible material.
- Do not leave the power cord hanging over the edge of a table or counter.
- Do not leave any electrical appliance unsupervised while it is plugged in to the mains.
- This appliance is intended for domestic use only and not for commercial or industrial use.
- Make sure that the popcorn maker has cooled completely before putting it away.
- No liability will be accepted for any damage caused by not following these instructions or any other inappropriate use or incorrect handling.

- Do not operate the device connected to an external timer or a separate remote control system.

OPERATION GUIDELINES

NOTE: Before using Popcorn Maker for the first time, we recommend you clean the unit following the instructions under CARE AND CLEANING.

- Remove the transparent cover from the main body.
- Using the measuring spoon provided, measure one level spoon of popping corn and place it into the main chamber. One measuring spoon of kernels will make approximately 3 cups of popped corn. Do not use more than one spoon of corn in your Popcorn Maker at once. NEVER PLACE BUTTER, OIL OR SALT IN THE POPPING CHAMBER.
- Reposition the transparent cover so it sits firmly on the body of the unit.
- Place the measuring spoon in position on the top of the transparent cover.
- Place a large bowl beneath the Popcorn Makers chute to catch the popped corn.
- Inset the plug into an AC220-240V, 50Hz power outlet and switch the power on.
- Turn the ON/OFF switch to the ON position.
- The Popped corn will shoot out the chamber and into the bowl.

CAUTION: Do not touch the popcorn maker cover during or immediately after operation. The unit will be extremely hot.

Do not operate the popcorn maker for more than 5 minutes at a time. Allow a 10 minutes break between cooking a second cycle of popped corn. This will allow the units motor to cool down.

- When the rate of popping becomes less than about 1 per second, turn the ON/OFF switch to the OFF position. Allow the unit to cool for at least 2 minutes before removing the transparent cover. We recommend oven mitts are used to remove the cover. Due to variations in the kernels, you may find not all kernels have popped.
- Ensure the appliance is turned off after use. Allow to cool before re using, cleaning or storing. Helpful hints:
- This product uses hot air circulation in the popping chamber to pop the kernels. To avoid damaged to your Popcorn Maker, never add butter, oil or any other substance to the popping chamber.
- Never use microwave popcorn in your Popcorn Maker.
- Use only fresh popcorn kernels. Old or stale kernels may cause scorching or smoking during operation.
- Take care when selecting the bowl for catching your popcorn.
 - A metal bowl may become hot, exercise caution when moving the bowl.
 - If using a plastic bowl, ensure it can withstand the heated air which flows from the Popcorn Maker while in use.

CARE AND CLEANING

- Turn the Popcorn Maker's ON/OFF switch to the OFF position and ensure it is unplugged from the power supply.
- Ensure the unit has cooled fully prior to cleaning, reusing or storing.
- Wash the transparent cover and measuring spoon in warm soapy water, rinse and dry thoroughly.
- Use a soft, dry cloth to wipe the internal popping chamber.
- Clean the base of the unit with a damp cloth and dry thoroughly.

- Never immerse the Popcorn Maker's body, cord set or plug in water or any other liquid. Do not place any part of the appliance in a dishwasher.
- Do not use abrasive cleaning products on this appliance.
- Store the assembled appliance in a clean, dry area.

RECIPES

After making the popcorn in the Popcorn maker various ingredients can be added to the popcorn in the dish. This allows a variety of different tasting popcorn to be made. Sweet popcorn can be made by shaking caster sugar over the popcorn while it is still hot and savoury popcorn can be made by adding parmesan cheese or salt to the popcorn, for example. The recipes given below are also ideally suited for making special varieties.

Spicy popcorn with nuts

Ingredients: 1 measuring cup corn, 2 dessert spoons olive oil, 125 g almonds, 125 g cashew nuts, 1 teaspoon cayenne pepper, 1 teaspoon paprika powder.

Preparation: make the popcorn as described earlier. Roast the cashew nuts and the almonds in a pan. Add the spices to this. Mix the nuts and the popcorn together in a dish. Let it all cool down and the popcorn is ready for eating.

Walnut popcorn snack

Ingredients: 1 measuring cup corn, 1 small cup of apple syrup, 2 dessert spoons honey and 100 grams ground walnuts.

Preparation: make the popcorn as described earlier. Mix the apple syrup and the honey together and warm this in a pan until it is all very thin and runny. Grease a dish with a little oil. Add the popcorn and the ground walnuts to the dish and pour the syrup/honey mixture over it. Let it all cool down and the popcorn is ready for eating.

Chocolate popcorn

Ingredients: 60 g popcorn, 80 g cooking chocolate, 2 tablespoons (30 ml) sugar, 1 tablespoon (15 ml) milk, 1 tablespoon (15 ml) butter (or margarine).

Preparation: Melt chocolate, milk and butter before sweetening. Allow the mixture to cool until lukewarm, then pour it into the bowl, add the popcorn and mix. Put the popcorn in the refrigerator to chill. Finally, remove from the refrigerator and turn the bowl upside down to release the chocolate popcorn.

Caramel popcorn

Ingredients: 60 g popcorn, 100 g of sugar, 250 ml water, one cup of water and ice Preparation: Melt the sugar with water in order to obtain caramel. Put the warm popcorn in the hot caramel and drop this into the cup containing water and ice so that caramel becomes hard. Dry well.

Popcorn crisp with almonds (or nuts)

Ingredients: 60 g popcorn, 200 g sugar, 250 ml water, 30 g almonds or nuts Preparation: Melt the sugar with water, in order to obtain caramel, and then pour popcorn in the bowl with almonds or nuts. Mix and let it cool.

SPECIFICATIONS

Model No.:PA 4350

Supply Voltage:220-240V AC~ 50Hz

Power consumption:1200W

Disposal of old electrical appliances.



The European directive 2002/96/EC on Waste Electrical and Electronic Equipment (WEEE), requires that old household electrical appliances must not be disposed of in the normal unsorted municipal waste stream. Old appliances must be collected separately in order to optimize the recovery and recycling of the materials they contain, and reduce the impact on human health and the environment. The crossed out “wheeled bin” symbol on the product reminds you of your obligation, that when you dispose of the appliance, it must be separately collected. Consumers should contact their local authority or retailer for information concerning the correct disposal of their old appliance.

DECLARATION OF CONFORMITY: This device complies with the requirements of the Low Voltage Directive 2014/35/EU and the requirements of the EMC directive 2014/30/EU.

Sonifer, S.A.

Avenida de Santiago, 86


30007 Murcia

España

E-mail: sonifer@sonifer.es/ web: www.orbegozo.com

MADE IN PRC

Documents / Resources

 <p>PA 4350</p>	<p>Orbegozo PA 4350 Popcorn Maker [pdf] Instruction Manual PA 4350, Popcorn Maker</p>
--	---

References

-  [Orbegozo Electrodomésticos | Todo para tu hogar y cocina](#)