



# Orbic R100ML5 5G Module User Manual


[Home](#) » [Orbic](#) » Orbic R100ML5 5G Module User Manual 

## Contents

- [1 Orbic R100ML5 5G Module](#)
- [2 HISTORY](#)
- [3 Overview](#)
- [4 Hardware Description](#)
- [5 Software Introduction](#)
- [6 Module Environmental and Package](#)
- [7 Ordering Information](#)
- [8 FCC Information](#)
- [9 Documents / Resources](#)
- [10 Related Posts](#)



**Orbic R100ML5 5G Module**

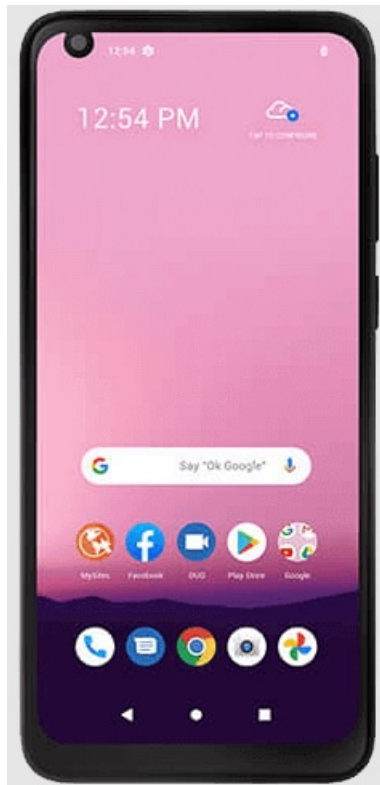

FCC ID:2ABGH-R100ML5

Doc Title	Orbic 5G Module Datasheet	Number	20210623
		Version	0.2

## HISTORY

Version	Date	Description
0.1	06/18/2021	Initial version release
0.2	06/23/2021	Modify working temperature and storage temperature

Doc Title	Orbic 5G Module Datasheet	Number	20210623
		Version	0.2

Doc Title	Orbic 5G Module Datasheet	Number	2021060901
		Version	0.1

## Overview

Orbic 5G Module is a 5G universal module, can be used for MIFI, notebooks and other products. It supports both mmW bands and Sub-6bands. It integrates the low-power Qualcomm SDX55 application processor that is designed for the 5G Module.

The SDX55 device is the second 5G modem from Qualcomm Technologies. Inc. (QTI). It implements the 5G NR standard for millimeter-wave (mmW) bands and sub-6 GHz bandsSDX55 uses the advanced 7 nm process.SDX55 is designed as a stand-alone 5G modem for MBB.

Parameter


Type	Items	Performance
Hardware	WorkingVoltage	3.6-4.4V
	WorkingCurrent	200~2000mA
	StandbyCurrent	10mA
	OperatingAmbient Temperature	0°C~55°C
	StorageTemperature	-5°C~60°C

Doc Title	Orbic 5G Module Datasheet	Number	2021060901
		Version	0.1

Hardware Description

Description of Hardware Interface

Orbic 5G Module provides 8 RF connectors for the external antenna connection. As shown in Figure 2-1, “M” is the RF main antenna, which is used for receiving and receiving RF signals. “D/G” is the Diversity antenna for receiving the Diversity radio signals, and M1 and M2 are the MIMO receiving antennas. “PS” is the GPS receiving antenna.”mmW1”-“mmW3” are the mmW antenna connections.

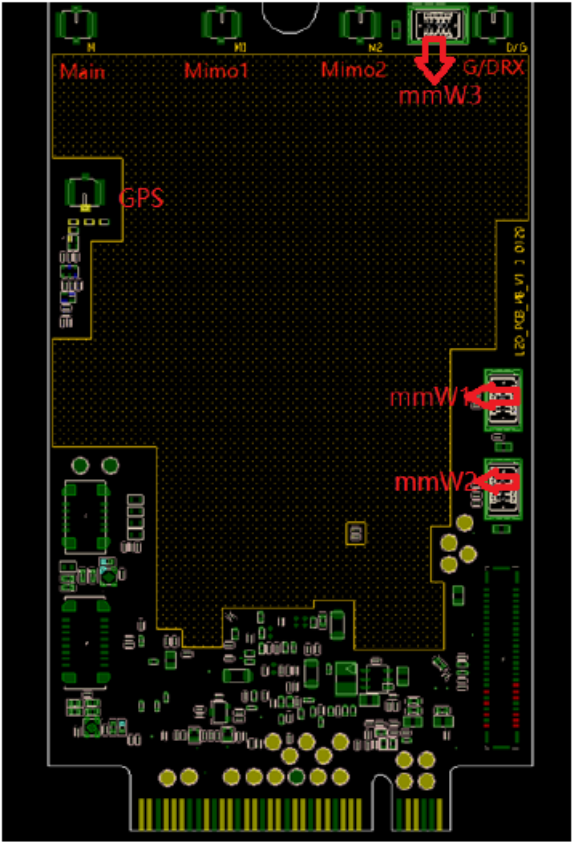

P.2-1

Doc Title	Orbic 5G Module Datasheet	Number	2021060901
		Version	0.1


BAND	MAIN	G/DRX	MIMO1	MIMO2
LTE TRX B2 B4 B5 B12 B13 B66 B41 B71 WCDMA TRX:B2 B4 B5 5G NR TRX: N2 N5 N66 N71 N77 N78 5G NR PRX MIMO:N41	√			
LTE DRX: B2 B4 B5 B12 B13 B66 B41 B71 WCDMA DRX:B2 B4 B5 GNSS L1 5G NR DRX: N2 N5 N66 N71 N77 N78 5G NR DRX MIMO:N41		√		
LTE PRX MIMO:B2 B4 B66 B41 5G NR TRX:N41 5G NR PRX MIMO: N2 N66 N77 N78			√	
LTE DRX MIMO:B2 B4 B66 B41 5G NR DRX:N41 5G NR DRX MIMO: N2 N66 N77 N78				√

P2–2 RFAntenna distribution table


<b>Doc Title</b>	Orbic 5G Module Datasheet	<b>Number</b>	2021060901
		<b>Version</b>	0.1

#### Pin Description.

The following figures is the PIN identification of the module:

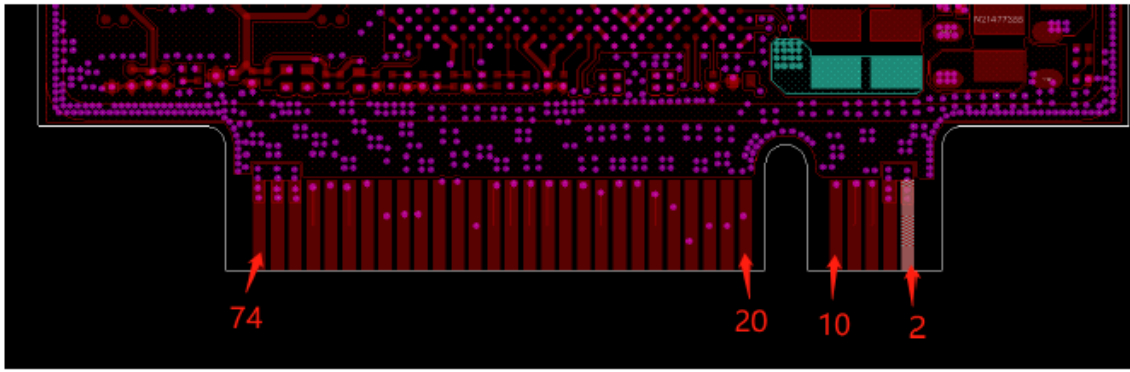

P. 2-2-1

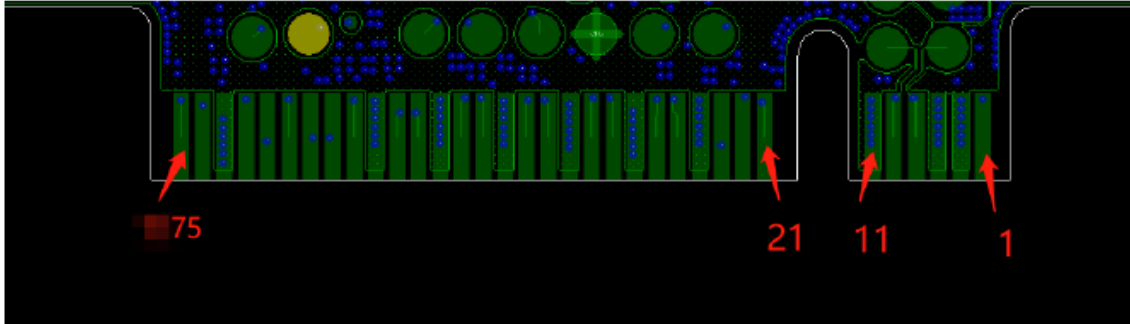

P. 2-2-2

Doc Title	Orbic 5G Module Datasheet	Number	2021060901
		Version	0.1

Pin Description:

<b>PIN #</b>	<b>PIN name</b>	<b>I/O</b>	<b>ResetValue</b>	<b>PIN description</b>	<b>characteristic</b>
1	CONFIG_3	O	NC	NC Module internal configuration	1.8V
2	VCC	PI	–	Power input	Power
3	GND	–	–	GND	Power
4	VCC	PI	–	Power input	Power
5	GND	–	–	GND	Power
6	FULL_CARD_POWER_OFF#	I	PU	Module switch machine control, low level off, or high-level boot.	CMOS 1.8V
7	USBD+	I/O	–	USB2.0data +	0.3-3V
8	W_DISABLE1#	I	PU	NA	CMOS 1.8V
9	USBD-	I/O	–	USB2.0data –	0.3-3V
10	LED1#	O	T	NA	CMOS 1.8V
11	GND	–	–	GND	Power
12	Notch	–	–	Notch	–
13	Notch	–	–	Notch	–
14	Notch	–	–	Notch	–
15	Notch	–	–	Notch	–
16	Notch	–	–	Notch	–
17	Notch	–	–	Notch	–
18	Notch	–	–	Notch	–
19	Notch	–	–	Notch	–
20	I2S_CLK	O	PD	I2S-reserve	CMOS1.8V
21	CONFIG_0	–	NC	NC	–
22	I2S_DATA0	I	PD	I2S-reserve	CMOS1.8V
23	M2_WOWWAN_	O	PD	NA	CMOS1.8V
24	I2S_DATA1	O	PD	I2Sreserve	CMOS1.8V

<b>PIN #</b>	<b>PIN name</b>	<b>I/O</b>	<b>ResetValue</b>	<b>PIN description</b>	<b>characteristic</b>
25	M2_DPR	I	PU	reserve	CMOS1.8V
26	M2_W_DISABLE 2#	I	PU	reserve	CMOS 1.8V
27	GND	–	–	GND	Power
28	I2S_WS	O	PD	I2Sreserve	CMOS1.8V
29	USB_SS-TX-	O	–	USB3.0 reserve	–
30	UIM1_RESET	O	L	SIM1	CMOS 1.8V
31	USB_SS-TX+	O	–	USB3.0 reserve	–
32	UIM1_CLK	O	L	SIM1	CMOS1.8V
33	GND	–	–	GND	Power
34	UIM1_DATA	I/O	L	SIM1	CMOS1.8V
35	USB_SS-RX-	I	–	USB3.0 reserve	–
36	UIM1_PWR	PO	–	SIM1	CMOS1.8V
37	USB_SS-RX+	I		USB3.0 reserve	–
38	NC	–	–	–	–
39	GND	–	–	GND	Power
40	SIM2_DETECT	I	PU	SIM2	CMOS1.8V
41	PCIE_TX0_M	O	–	PCIe	–
42	UIM2_DATA	I/O	L	SIM2	CMOS1.8V
43	PCIE_TX0_P	O	–	PCIe	–
44	UIM2_CLK	O	L	SIM2	CMOS1.8V
45	GND	–	–	GND	Power
46	UIM2_RESET	O	L	SIM2	CMOS1.8V
47	PCIE_RX0_M	I	–	PCIe	–



<b>PIN #</b>	<b>PIN name</b>	<b>I/O</b>	<b>ResetValue</b>	<b>PIN description</b>	<b>characteristic</b>
48	UIM2_PWR	PO	–	SIM2	CMOS1.8V
49	PCIE_RX0_P	I	–	PCle	–
50	PCIE_RST_N	I	PD	PCle	CMOS 1.8V
51	GND	–	–	GND	Power
52	PCIE_CLKREQ_N	I/O	T	PCle	CMOS 1.8V
53	PCIE_REFCLK_M	I	–	PCle	–
54	PXIE_WAKE_N	O	T	PCle	CMOS 1.8V
55	PCIE_REFCLK_P	I	–	PCle	–
56	ANTCTL5	O	PD	Antenna switch	CMOS1.8V
57	GND	–	–	GND	Power
58	ANTCTL6	I/O	PD	Antenna switch	CMOS1.8V
59	LAA_TX_EN	O	PD	NA	CMOS1.8V
60	WLAN_TX_EN	I	–	5GHz WLANswitch	CMOS1.8V
61	ANTCTL1	O	PD	Antenna switch	CMOS1.8V
62	COEX_UART_RX	I	PD	WiFi/BTUART	CMOS1.8V
63	ANTCTL2	O	PD	Antenna switch	CMOS1.8V
64	COEX_UART_TX	O	PD	WiFi/BTUART	CMOS1.8V
65	ANTCTL3	O	PD	Antenna switch	CMOS1.8V

PIN #	PIN name	I/O	ResetValue	PIN description	characteristic
66	SIM_DETECT	I	PU	SIM1	CMOS1.8V
67	M2_RESET_N	I	PU	Module reset	CMOS1.8V
68	FORCE_USB_BOOT			Download mode switch	CMOS1.8V
69	CONFIG_1			NC	—
		O	GND		
70	VCC	PI	—	VCC	Power
71	GND	—	—	GND	Power
72	VCC	PI	—	VCC	Power
73	ANTCTL4	—	—	Antenna switch	
74	VCC	PI	—	VCC	Power
75	CONFIG_2	O	NC	NC	


#### Reset Value:

- H: High level
- L: Low level
- PD: pull down
- PU: pull up
- T: Hi-Z
- OD: Open drain
- PP: Push-Pull
- PI: Power in
- PO: Power out

#### Mechanical Dimension


Module has the dimension of 52 mmx 30.2 mm. The detailed layout will be given shortly below. Unit: mm

Module has the dimension of 52mmx30.2mm. The detailed layout will be given shortly below. Unit:mm

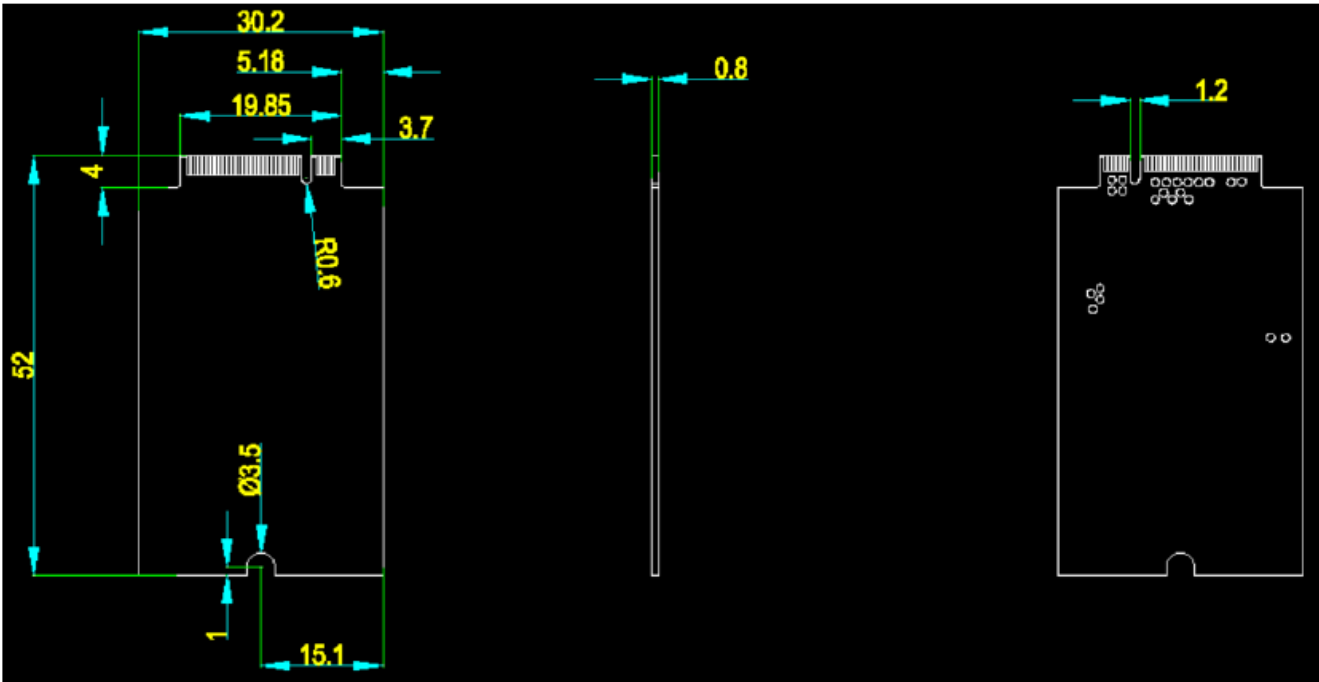


PLUGPCB dimensions:


PLUGPCB dimensions:

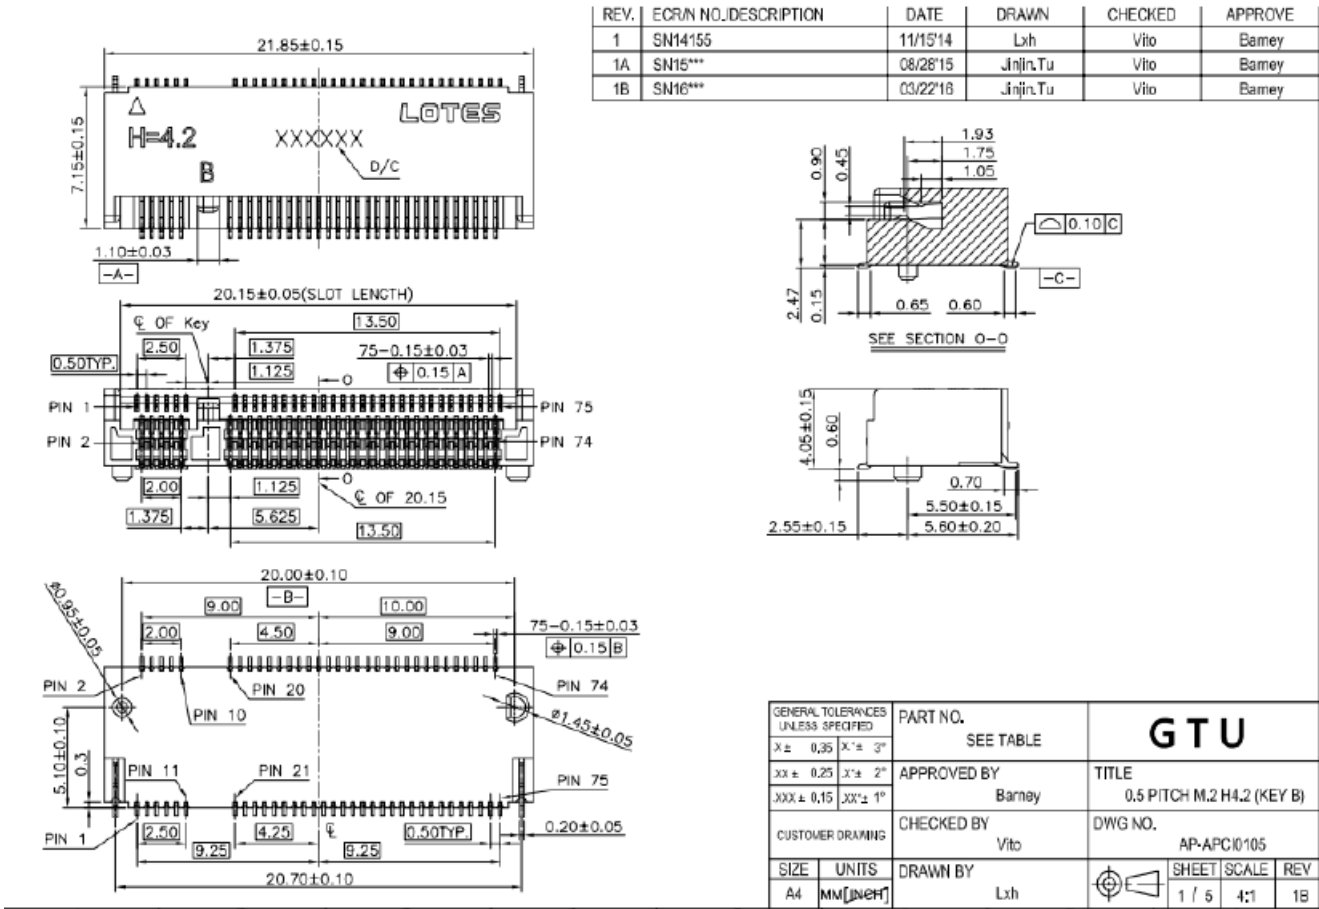

Software Introduction

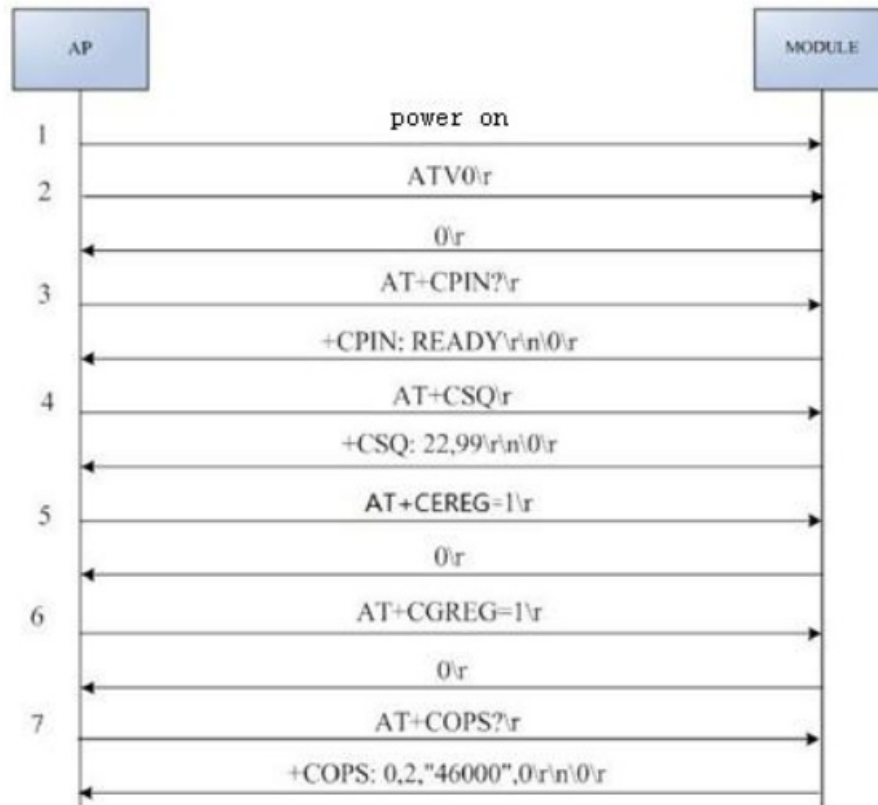

**PIN code needed power on**

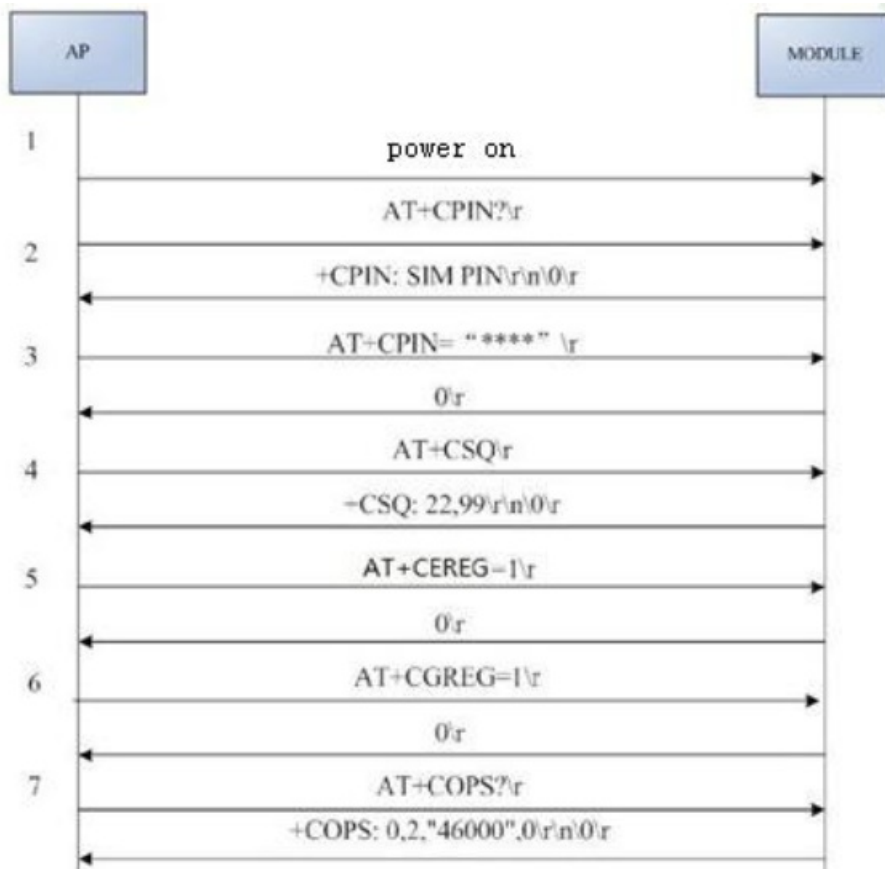

## Module Environmental and Package

### Environmental Ratings

The environmental ratings are shown as the following table.

Characteristic	Value	Units	Conditions/Comments
StorageTemperature	-5~60	°C	
Relative humidity	Lessthan60	%	Storage
	Lessthan80	%	Operation

## Electrostatic Discharge Specifications

Extreme caution must be exercised to prevent electrostatic discharge(ESD) damage. Proper use of wrist and heel groundings traps to discharge static electricity is required when handling the devices. Always store unused material in its antistatic packaging.

### ESD Specifications

Type	Symbol	Condition	ESDRating	Unit
ESDHandling	ESD_HAND_HBM	HumanBodyModelContactD ischarge per JEDECEID/JESD22-A114	1000	V
MachineModel (MM )	ESD_HAND_MM	MachineModelContact	30	V
CDM	ESD_HAND_CDM	ChargedDeviceModelContactD ischargeper JEDECEIA/JESD22-C101	300	V

## Ordering Information

Table5-1 Part Ordering Information

PartNumber	Package	Description	Remark
A98M	67-PINNGFFGoldenFingers	RAM:128MB Flash:128MB	
A98M-12	67-PINNGFFGoldenFingers	RAM:128MB Flash:256MB	
A98M-22	67-PINNGFFGoldenFingers	RAM:256MB Flash:256MB	
A98MG	67-PINNGFFGoldenFingers	RAM:512MB Flash:512MB	

## FCC Information

### RF Exposure Information:

To maintain compliance with FCC RF exposure requirements, use the product that maintain a 20cm separation distance between the user's body and the host.

### FCC statements:

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

1. this device may not cause harmful interference, and
2. this device must accept any interference received, including interference that may cause undesired operation.

**NOTE:** The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications or changes to this equipment. Such modifications or changes could void the user's authority to operate the equipment.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

### This device is intended only for OEM integrators under the following conditions:

1. The antenna must be installed such that 20 cm is maintained between the antenna and users.
2. The transmitter module may not be co-located with any other transmitter or antenna. As long as the two conditions above are met, additional transmitter testing will not be required. However, the OEM integrator is still responsible for testing their end-product for any additional compliance requirements required for the installed module.

### Important Note:

In the event that these conditions cannot be met (for example certain laptop configurations or co-location with another transmitter), then the Federal Communications Commission of the U.S. Government (FCC) and the Canadian Government authorizations are no longer considered valid and the FCC ID cannot be used on the final product. In these circumstances, the OEM integrator shall be responsible for re-evaluating the end-product (including the transmitter) and obtaining a separate FCC authorization in the U.S. and Canada.

### OEM Integrators – End Product Labeling Considerations:


This transmitter module is authorized only for use in device where the antenna may be installed such that 20 cm may be maintained between the antenna and users. The final end product must be labeled in a visible area with the following: "Contains, FCC ID: 2ABGH-R100ML5". The grantee's FCC ID can be used only when all FCC

compliance requirements are met.

**OEM Integrators – End Product Manual Provided to the End User:**

The OEM integrator shall not provide information to the end user regarding how to install or remove this RF module in end product user manual. The end user manual must include all required regulatory information and warnings as outlined in this document.

**Documents / Resources**

	<p><a href="#">Orbic R100ML5 5G Module</a> [pdf] User Manual</p> <p>R100ML5, 2ABGH-R100ML5, 2ABGHR100ML5, R100ML5 Orbic 5G Module, Orbic 5G Module , 5G Module, Module, R100ML5 5G Module</p>
---	---