



Orbit 56082 Three Port Digital Timer User Manual

[Home](#) » [Orbit](#) » Orbit 56082 Three Port Digital Timer User Manual 



Three-Port Digital timer
User Manual



Contents

1 INSTALLING THE BATTERIES

2 INSTALLATION

3 PROGRAMMING THE TIMER

4 TROUBLESHOOTING

5 Documents / Resources

5.1 References

INSTALLING THE BATTERIES


- Remove the tray on the back of the timer by sliding it out.
- Insert two AA (1.5V) alkaline batteries (batteries not included) and replace the tray.
- Replace batteries when low battery icon appears.

INSTALLATION

- After it is programmed attach it to your outdoor faucet.

Mounting to the wall:

1. Use nut and bolt to attach brace to timer bracket.
2. Mark where support rod touches the wall.
3. Drill a pilot hole.
4. Attach the support rod using the screw provided.

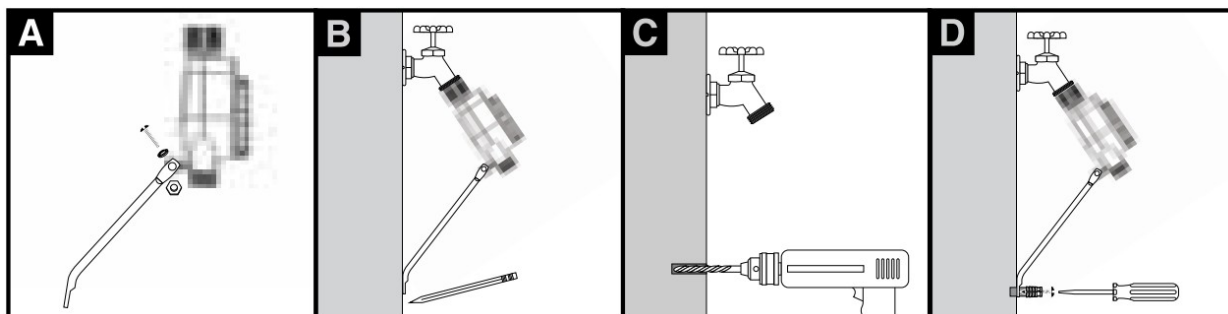

PROGRAMMING THE TIMER

- Rotate the dial to positions indicated or setup.
- Press the arrow button to switch between station 1, 2, or 3 for all programming.

SET CLOCK

- Press the + button to advance clock time (hold button for quick advance).
- Press the – button to reverse clock time (hold button for quick reverse).

START TIME

- Press the + button to advance start time (hold button for quick advance).
- Press the – button to reverse start time (hold button for quick reverse).

HOW LONG

Set watering duration from 1 to 240 minutes using the + and – buttons.

HOW OFTEN

Set watering frequency as every 6 hrs, 12 hrs, or from 1 to 7 days using the + and – buttons. 1 is every day, 2 is every other day etc. up to 7 days.

AUTO

Timer waters according to programmed time, station, duration, and frequency.

RAIN DELAY

- When in AUTO, press + button for 24 hrs, 48 hrs, or 72 hrs.
- Screen will flash between clock and hours remaining before programmed cycle resumes.
- To remove rain delay, turn dial to OFF and then back to AUTO MANUAL/hand watering.

To water without interrupting the set cycle, press [MANUAL] button and then use + and – buttons to set from 1 to 240 minutes.

- To remove manual watering [turn off], turn dial to OFF.
- To resume programmed cycle turn the dial back to AUTO.

TROUBLESHOOTING

Timer shows 6 am all the time:

Check if:

1. There is a sticker over the display.

Valve will not open/close.

Check if:

1. Pressure exceeds 100 PSI.
2. Batteries are low.

Water does not come on at desired time.

Check if:

1. Clock is set to correct time including AM and PM.
2. Start time is set to desired time including AM and PM.
3. Rain Delay is on.
4. There are overlapping start time.

Timer does not water.

Check if:

1. Timer is set to AUTO.
2. Hose faucet and manifold shut-off for that station are open.
3. Batteries are low.
4. Clock is set to correct time including AM and PM.
5. Rain Delay is on.

Water won't turn off.**Check if:**

1. Watering duration is set to desired time.
2. Start times overlap.

Working Water Pressure:

Minimum: 25 psi Maximum: 100 psi

Working Temperature:

Maximum: Do not exceed 120°F


Minimum: Keep from freezing

Warnings:

For outdoor use with cold water only.

PRODUCT INCLUDES:

- A** (1) 7 1/4 in. Brace
- B** (1) #14 Round Head Screw
- C** (1) Bolt
- D** (1) Lock Washer
- E** (1) Nut
- F** (1) Timer Bracket

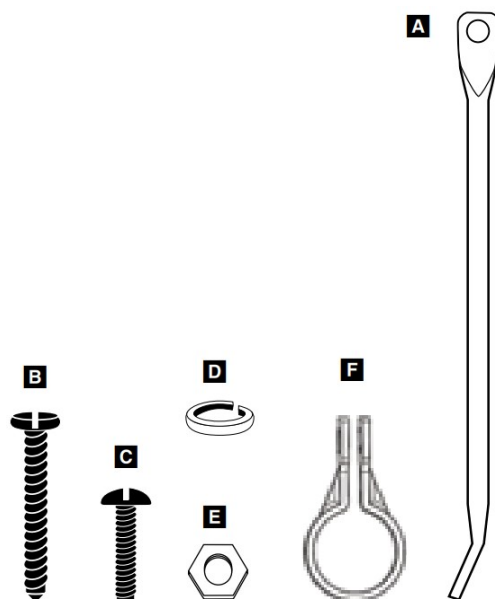

WHEN EXPECTING FREEZING TEMPERATURES, TIMERS SHOULD BE REMOVED FROM THE HOSE

BIB TO AVOID POTENTIAL FREEZE DAMAGE.



CUSTOMER SERVICE

1-800-488-6156

www.orbitonline.com

Orbit® Irrigation Products, Inc.

North Salt Lake, UT 84054

1-800-488-6156

www.orbitonline.com

© 2011 Orbit Irrigation Products, Inc.

All rights reserved. All trade names are
registered trademarks of respective manufacturers listed.

PN 56497-24 rA

Documents / Resources



[Orbit 56082 Three Port Digital Timer](#) [pdf] User Manual

56082 Three Port Digital Timer, 56082, Three Port Digital Timer, Digital Timer, Timer

References

- [© Smart Watering, Sprinkler & Drip Systems | Orbit Irrigation – OrbitOnline](#)
- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.