



Orbit 56619 Hose Faucet Timer User Manual

[Home](#) » [Orbit](#) » Orbit 56619 Hose Faucet Timer User Manual 





1 Dial 1 Outlet
HOSE FAUCET TIMER
Important, please read!

 
Contents

- 1 56619 Hose Faucet Timer
- 2 TIMER FEATURES
- 3 TIMER FEATURES
- 4 INSTALLING THE BATTERIES
- 5 PROGRAMMING THE TIMER
- 6 CONGRATULATIONS!
- 7 ADDITIONAL FEATURES
- 8 TROUBLESHOOTING
- 9 Documents / Resources
 - 9.1 References
- 10 Related Posts

56619 Hose Faucet Timer


	<p>When expecting freezing temperatures, timers should be removed from the hose faucet and stored indoors to avoid potential freeze damage.</p>
	<p>Filter traps dirt particles, prolonging life of timer. Clean filter regularly and replace if worn.</p>

TIMER FEATURES

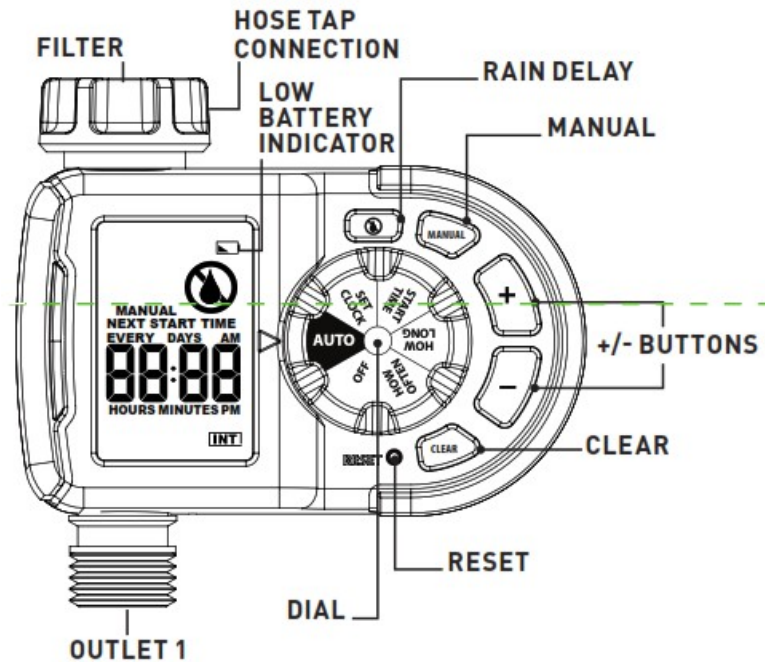

TIMER FEATURES

 - DIAL**—Rotate the dial to customize your watering schedule
- RAIN DELAY**—Use this button to select RAIN DELAY mode
- RESET**—Press to clear all programming
- MANUAL**—Press to water manually
- CLEAR**—Press to clear programming

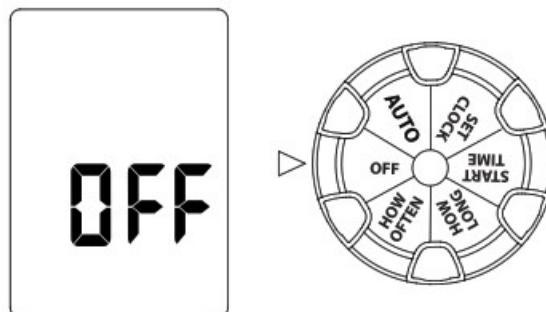

- +/- BUTTONS**—Use these buttons to adjust time and system setup
- AUTO**—Timer waters according to your customized schedule
- SET CLOCK**—Set the time of day
- START TIME**—Select what time you would like to start watering
- HOW LONG**—Determine how long to water
- HOW OFTEN**—Choose how often you will water
- OFF**—Turn off all watering

 
INSTALLING THE BATTERIES

1. Remove the tray on the back of the timer by sliding or pulling it out.
2. Insert two AAA (1.5V) alkaline batteries (not included) and replace the tray.

NOTE: Firmly replace the battery tray to ensure water resistance and increase battery life. You will know the battery tray is fully inserted if it does not pull out easily. Used up or dead batteries must be removed from the timer and disposed of properly. Replace batteries when low battery icon appears on display. Do not dispose of batteries in fire. Batteries may explode or leak.


PROGRAMMING THE TIMER

SET CLOCK

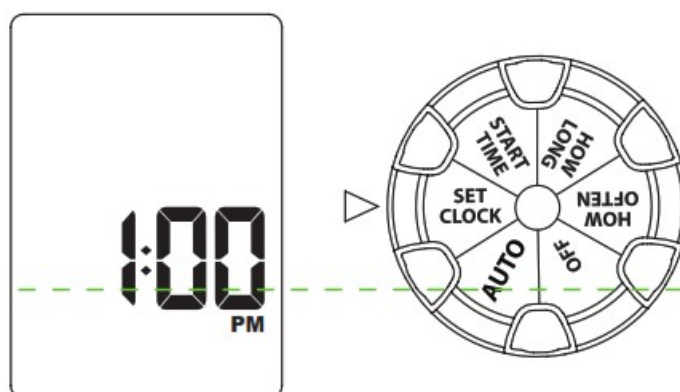


1. Turn dial to SET CLOCK.
2. Using the +/- buttons, set the time of day, including AM and PM. Timer advances faster if button is held down.
3. Turn dial to save changes.

 START TIME

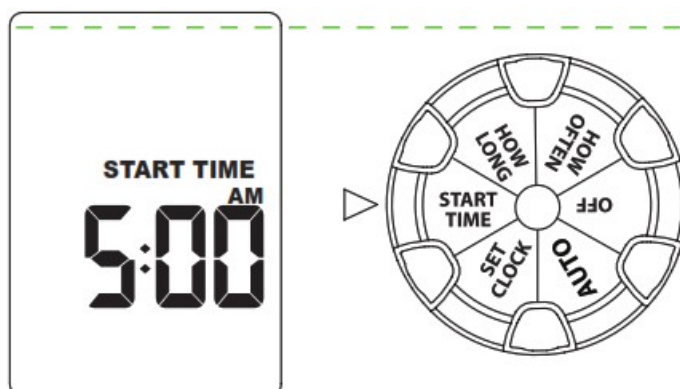


1. Turn dial to START TIME.
2. Using the +/- buttons, set your start time, including AM and PM. Timer advances faster if button is held down.
3. Turn dial to save changes.

 HOW LONG

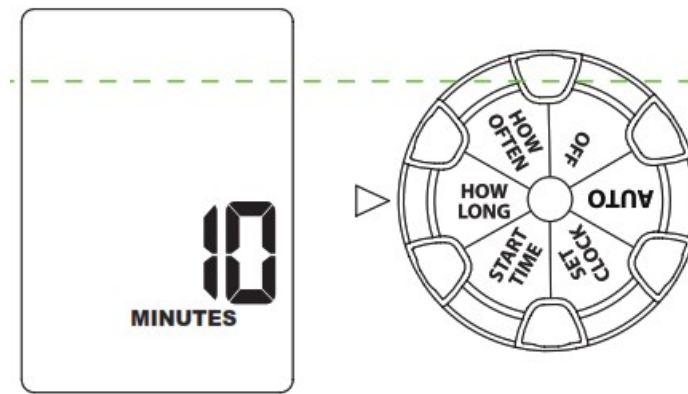

1. Turn dial to HOW LONG.
2. Using the +/- buttons, select watering duration from 1 to 360 minutes. Timer advances faster if button is held down.
3. Press CLEAR button to reset run time.
4. Turn dial to save changes.

 HOW OFTEN

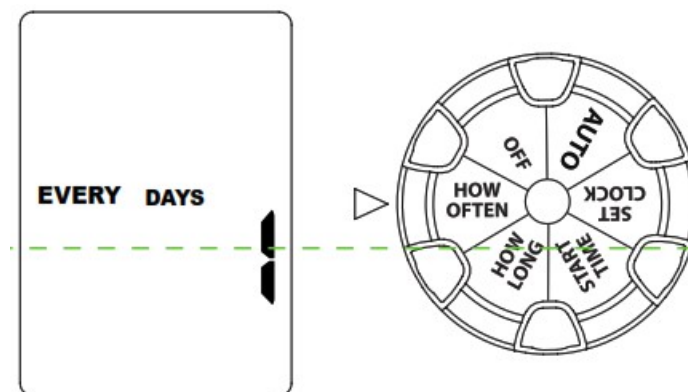

1. Turn dial to HOW OFTEN.
2. Using the +/- buttons, set your watering frequency. You may choose to water every 1 hour, 2 hours, 4 hours, 6 hours, 12 hours, or from 1 to 7 days.

NOTE: 1 is every day, 2 is every other day, etc

 
3. Turn dial to save changes

CONGRATULATIONS!


Your timer is now programmed. Turn your dial to AUTO to allow your timer to water according to programmed time, station, duration, and frequency.

ADDITIONAL FEATURES


RAIN DELAY

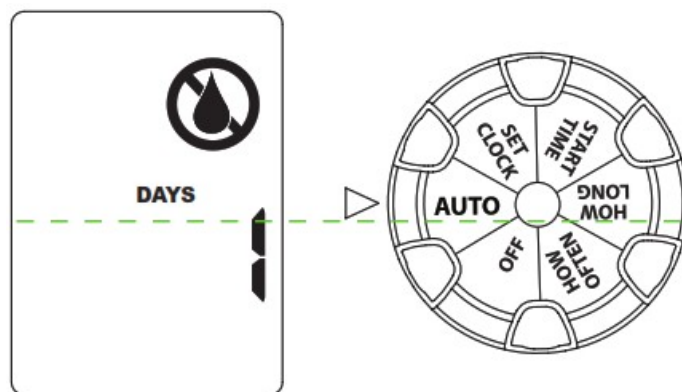

Rain delay allows you to postpone watering for a set period of time. To access the rain delay, follow the steps below.

1. With the dial on AUTO, press the  button to select a delay of 1 to 7 days.
2. Screen will flash between clock and hours remaining before programmed cycle resumes.
3. To remove rain delay, turn dial to OFF and then back to AUTO.

 MANUAL/HAND WATERING

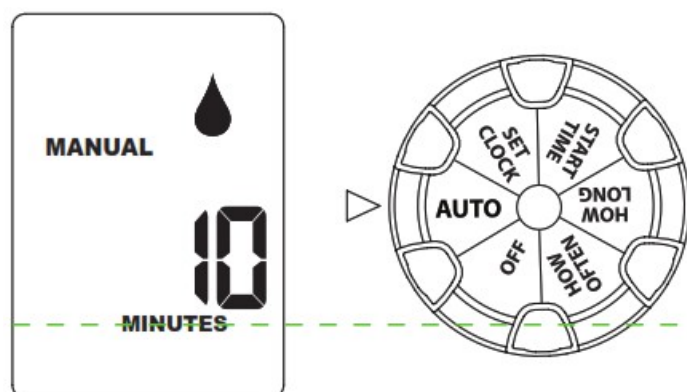

This feature allows you to water without interrupting your set schedule. To access this feature, follow the steps below.

1. With the dial on AUTO, press the MANUAL button.
2. Use the +/- buttons to select watering time from 1 to 360 minutes.
3. Screen will flash between clock and hours remaining before programmed cycle resumes.

NOTE: There may be a slight delay between the time the manual button is pressed and when watering begins.

4. To stop manual watering, turn the dial to OFF.
5. Turn the dial back to AUTO to resume your programmed watering schedule.

TROUBLESHOOTING

WATER DOES NOT COME ON AT DESIRED TIME.

Check if:

- Clock is set to correct time, including AM and PM.
- Dial is set to "Auto"

- Start time is set to desired time, including AM and PM.
- Rain Delay is on.

TIMER DOES NOT WATER.**Check if:**

- Timer is set to AUTO.
- Hose faucet is on.
- Batteries are low.
- Clock is set to correct time, including AM and PM.
- Rain Delay is on.

WATER WON'T TURN OFF.**Check if:**

- HOW LONG is set to desired time.
- HOW OFTEN is set to desired interval hour or day.

WORKING WATER PRESSURE:

- Minimum: 10 psi
- Maximum: 100 psi

WORKING TEMPERATURE:

- Maximum: Do not exceed 120°F
- Minimum: Keep from freezing

WARNINGS:

For outdoor use with cold water only.
Not for use with appliances.

**Customer Service**

1-800-488-6156

Orbit® Irrigation Products, Inc.


North Salt Lake, UT 84054

© 2014 Orbit Irrigation Products, Inc.

All rights reserved. All trade names are registered trademarks of respective manufacturers listed.

PN 56619-24 rB

Documents / Resources

	Orbit 56619 Hose Faucet Timer [pdf] User Manual 56619 Hose Faucet Timer, 56619, Hose Faucet Timer, Faucet Timer, Timer
-----------------------------------------------------------------------------------	-------------------------------------------------------------------------------------------------------------------------------------------

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.