



Orbit HT25 Smart Hose Watering Timer from B-hyve User Guide

[Home](#) » [Orbit](#) » Orbit HT25 Smart Hose Watering Timer from B-hyve User Guide 

Orbit HT25 Smart Hose Watering Timer from B-hyve User Guide

 


Contents


- 1 [Box Contents](#)
- 2 [A. Hose Faucet Timer](#)[B. Wi-Fi Hub](#)[C. Quick Start Guide](#)
- 3 [Open the B-hyve App](#)
- 4 [Power Your Wi-Fi Hub](#)
- 5 [Enter Pairing Mode](#)
- 6 [Power Your Hose Faucet Timer](#)
- 7 [Install the Timer](#)
- 8 [Turn on Your Water](#)
- 9 [Manual Watering](#)
- 10 [Timer](#)
- 11 [Hub](#)
- 12 [Documents / Resources](#)
- 13 [Related Posts](#)

Box Contents

A. Hose Faucet Timer

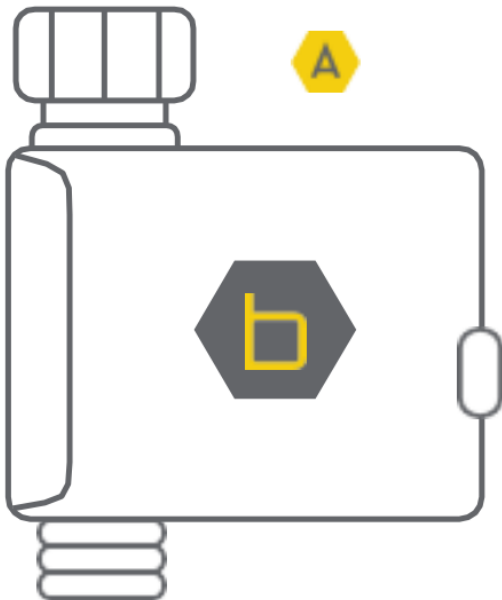

 B. Wi-Fi Hub

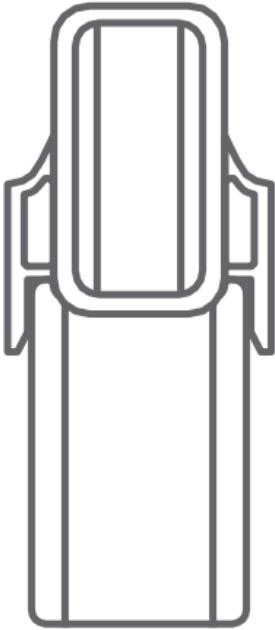

C. Quick Start Guide



Open the B-hyve App

 
Log into your B-hyve account and go to devices under settings to add the Hose Faucet Timer as a new device. The app will walk you through the rest of the process.



For new users, search for “B-hyve” and download the free Android or iOS app. Create an account to begin timer setup.

Power Your Wi-Fi Hub

Write down the MAC address:
12-digit alphanumeric code on the back of the hub.

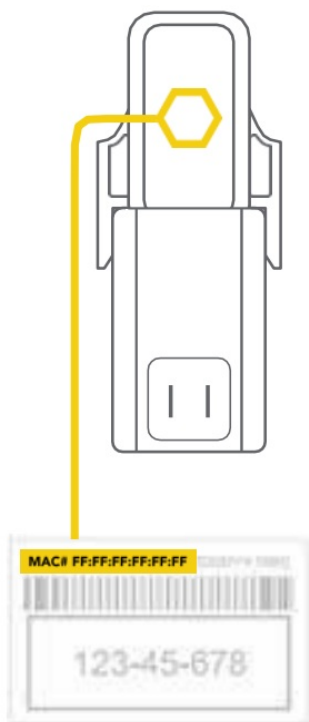

Hub Mac Address: ____:____:____:____:____:____

 
Plug the hub into an indoor outlet within range of your B-hyve device and Wi-Fi signal..



Avoid areas where the signal must travel through dirt or thick steel barriers.

Enter Pairing Mode

Press the B-hyve button to enter into pairing mode. Your hub will flash a blue light every 5 seconds.

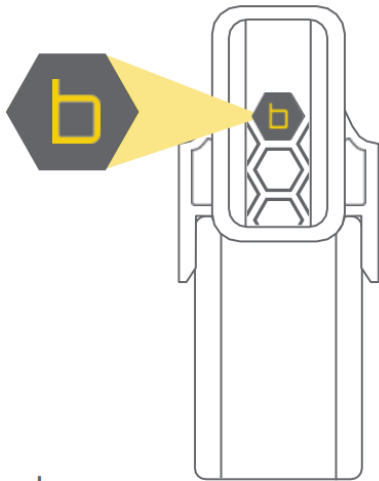

Power Your Hose Faucet Timer

Insert two new AA Batteries*, the timer is now in pairing mode and will flash a blue light every 5 seconds.

You will also hear two clicks about 6 seconds apart, this is normal and ensures the valve is closed before you turn on the water.

 
Write down the MAC address: 12 digit alphanumeric code on the bottom of the timer.

Timer MAC Address: ____:____:____:____:____:____



If at any time you need to re-pair or do a factory reset, press the on/off button quickly 5 times.

Batteries are sold separately. Replace batteries when timer flashes a red light every 5 seconds, or when the app notifies you that batteries need replacing.

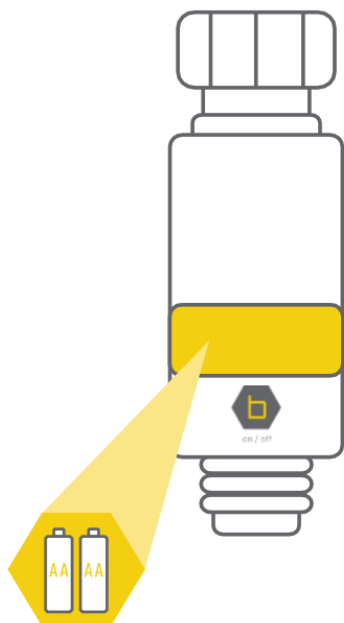

If you remove or change the batteries you will need to reconnect to Bluetooth® to set the correct time and date.

 
Install the Timer

Your timer is now ready to be used with any product that can be attached to a standard hose faucet.



Do not place the timer in an underground valve box.

Turn on Your Water

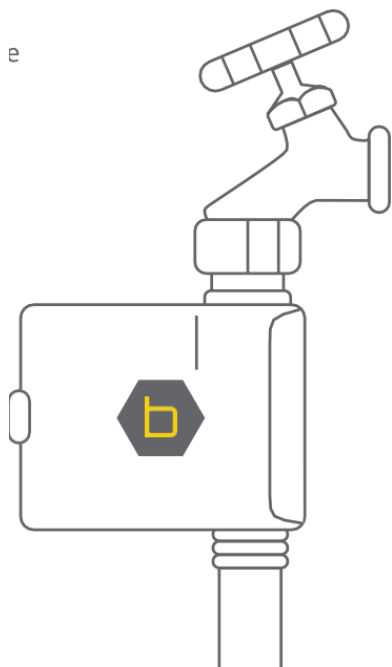


The water must remain on for the timer to work properly.

Manual Watering

Simply press and hold the on/off button for 5 seconds to activate manual watering.

 Need to stop watering, even during a programmed time? Press the on/off button once to stop watering.

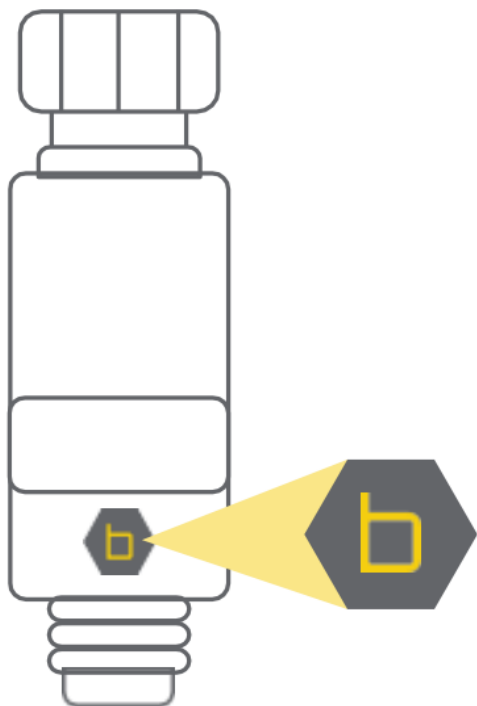

Timer

Range: 150 ft without interference

Pressure Operating Range: 10-100 PSI

Temperature Operating Range:

32°F-158°F (0-70°C)

For Outdoor Use With Cold Water Only

Not For Use With Appliances
Do Not Mix Alkaline, Standard (Carbon-Zinc), or
Rechargeable (Nickel Cadmium) Batteries.
Used up or dead batteries must be removed from the
timer and disposed of properly.
Do not dispose of batteries in fire.
Batteries may explode or leak.

Hub

Range: 150 ft without interference
Temperature Operating Range: 32°F-104°F (0-40°C)
Storage Temperature: -4°F to 140°F (-20 °C to 60 °C)
Humidity Operating Range: 0–90%
Input: 100-240V ~ 50/60Hz 0.2A
Output: 5V-1.0A
For Indoor Use Only

FCC Statement: FCC ID: ML6HT25 & ML6-BH1

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. FCC Warning: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment. Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the

following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from the receiver's.
- Consult the dealer or an experienced radio/TV technician for help

This device meets the FCC and IC requirements for RF exposure in public or controlled environments. The end user is advised to maintain a distance 20 cm from the timer and any personnel to ensure compliance with RF exposure regulations.

IC Statement: IC: 3330A-HT25 & 3330A-BH1 This device complies with Industry Canada license exempt RSS standard(s). Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. This Class B digital apparatus complies with Canadian ICES-003.

Need Help?

If you encounter a problem, please use the following resources before retuning your B-hyve to the store.

Scan the QR Code for access to a full user manual, videos, and more.



call us

1-800-488-6156



 
Text us

801-797-2319



Community.Orbitonline.com

Documents / Resources

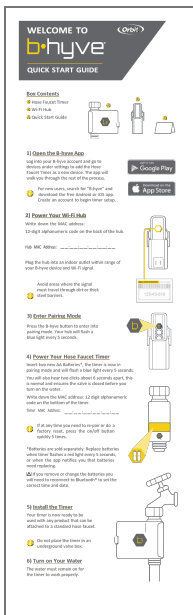

[Orbit HT25 Smart Hose Watering Timer from B-hyve](#) [pdf] User Guide

HT25 Smart Hose Watering Timer from B-hyve, HT25, Smart Hose Watering Timer from B-hyve , Watering Timer from B-hyve, Timer from B-hyve