



# origo CF-1318R 3D Convection Fan Instruction Manual

[Home](#) » [origo](#) » origo CF-1318R 3D Convection Fan Instruction Manual 

## Contents

- [1 origo CF-1318R 3D Convection Fan](#)
- [2 Important Safety Information](#)
- [3 3D Convection fan](#)
- [4 Main Parts](#)
- [5 Function Setting](#)
- [6 Remote Control](#)
- [7 Maintenance](#)
- [8 Specification](#)
- [9 Origin Map](#)
- [10 Warranty Card\(1 year carry-in\)](#)
- [11 Documents / Resources](#)
- [12 Related Posts](#)



**origo CF-1318R 3D Convection Fan**



Read all instructions carefully before using the FAN, and keep this instruction for future reference when necessary. This instruction manual can be acquired at [www.origin.hk](http://www.origin.hk)

### Important Safety Information

 
- Read all instructions carefully before using the Fan.
- Use this Fan only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electrical shock or injury to persons
- Open the package and ensure that the Fan is undamaged. In case of doubt do not use the FAN Cooler and contact your supplier
- Do not let children play parts of package.
- Before using the Fan, check if the voltage marked on the rating label corresponds to the mains at your home.



### 3D Convection fan

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance. Avoid using extension cord as it may overheat and cause fire.

- Do not pull the power cord to disconnect from power source. Always grasp the plug to pull out.

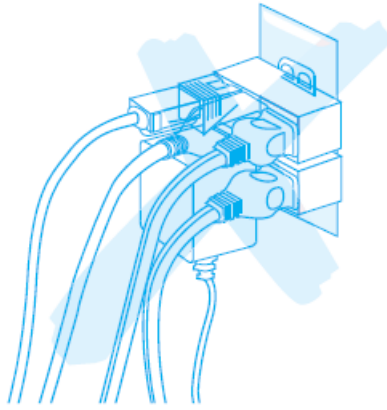



- Do not insert any objects into the Fan as it may cause an electric shock or damage. Do not block or tamper with the Fan in any manner while it is in operation.
- Do not leave the Fan unattended. Always unplug the Fan Cooler when not in use.
- **WARNING:** The On/Off switch should not be used as the sole means of disconnecting power. Always unplug the power cord before servicing or moving the unit.
- This Fan is intended for household use **ONLY** and not for industrial
- Always disconnected the Fan from the power supply when moving it from one location to another.
- This product contains recyclable materials. Do not dispose this product as unsorted municipal or outdoor use. Please contact your local municipality for the nearest collection
- The Fan is not intended for use in wet or damp locations. Never locate the Fan where it may fall into a bathtub or other water container.



- Do not place the Fan near a source of heat or fire.
- Keep the Fan clean to maintain in good condition (refer to maintenance section).
- Ensure that the fan is switched off from the supply mains before removing the guard.
- **WARNING:** To avoid danger of electric shock, unplug from outlet when not in use and before cleaning. If the power cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid hazard

## Main Parts

  
The picture is for reference only, everything in kind shall prevail.

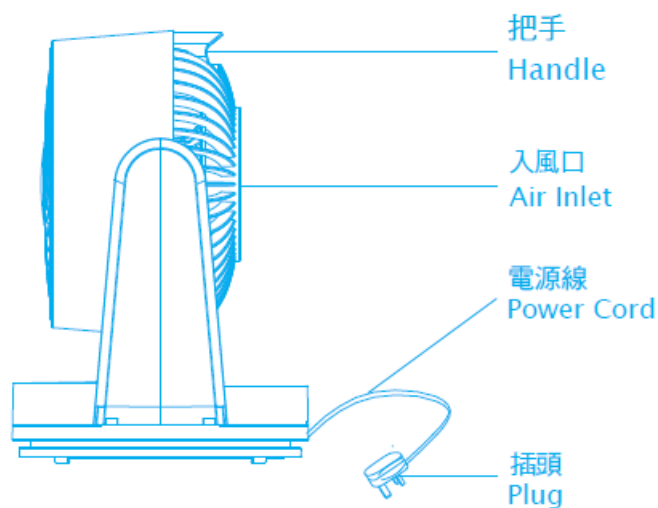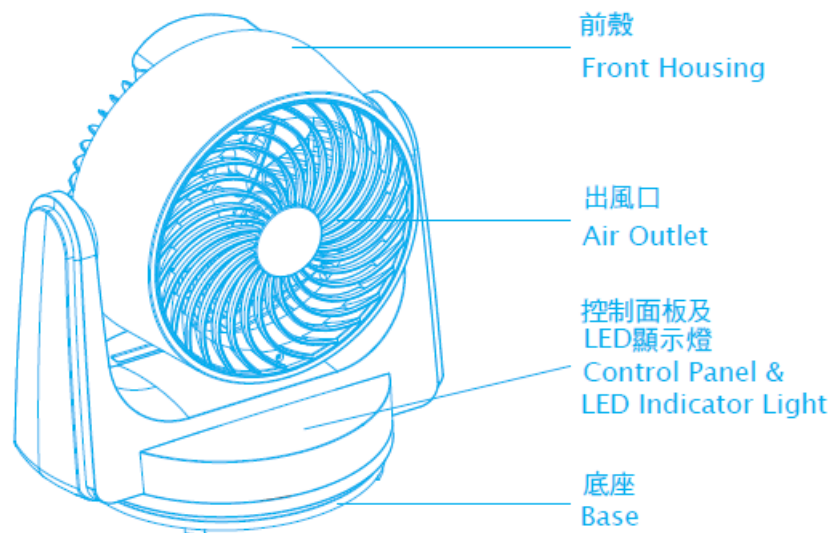

## Function Setting

The Fan may be operated by the control panel (as shown in Figure 1) or by your remote control.

 
1. Place the Fan on a stable and flat surface. Plug the Power Cord into an 220-230V~,50Hz electrical outlet.
2. POWER: Turn the Fan ON by pressing the key, the Fan start at low speed.

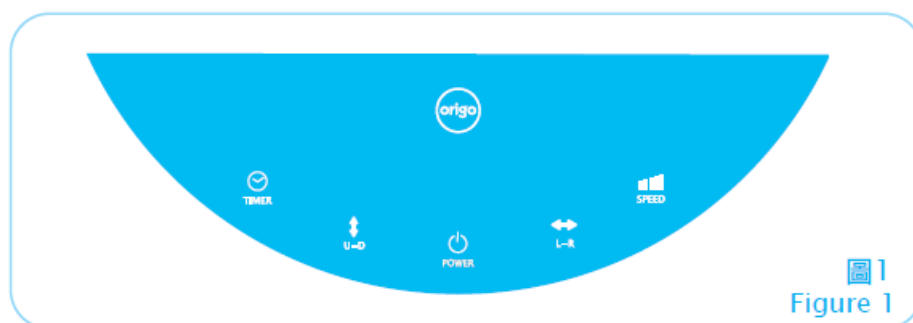

3. The picture is for reference only, everything in kind shall prevail. 3 . SPEE D : Adjust the Fan speed to the desired level: Breeze, Low, Medium, or High by pressing key. The speed setting is displayed on the LED display.


4. OSC(UP/DOWN): Press the key to allow the Fan to UP/DOWN oscillate the wind direction. To stop the oscillation, press the key again.
5. OSC(LEFT/RIGHT): Press the key to allow the Fan to LEFT/RIGHT oscillate the wind direction. To stop the oscillation, press the key again.
6. TIMER: Pressing the key to set desired auto power off time, There are 8 time intervals, from 1-hour to 8-hour .

## Remote Control

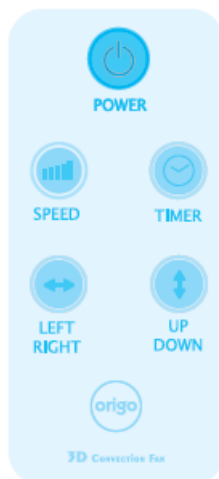 

1. All functions performed by the Remote Control work are identical to the Manual.
2. Battery replacement: Install one 3V Lithium battery.

## WARNING

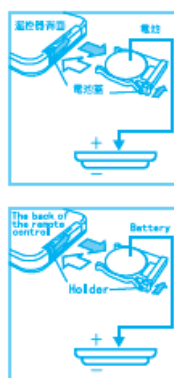 

1. Keep batteries out of reach of children. Should a child swallow a battery, consult a doctor immediately.
2. Do not recharge or dispose in fire.
3. Keep in a dry and cool place.
4. Insert battery in right direction. Battery disposal – Please dispose the used battery per municipal or provincial law.

## Maintenance

 
**WARNING:** ALWAYS UNPLUG THE POWER CORD BEFORE MOVING OR SERVICING. DO NOT IMMERSE THE FAN IN WATER! BEFORE CLEANING, MAKE SURE THAT THE UNIT HAS BEEN SWITCHED OFF AND IT IS UNPLUGGED FROM THE MAIN OUTLET. House: Clean the outside of the Fan with a soft cloth, to remove persistent dirt or grime wipe down with a cloth that has been dampened with warm soapy water. CAUTION: Do NOT use gasoline, benzene, thinner, harsh cleaners, etc., as they will damage the Fan. NEVER use ALCOHOL or

any other SOLVENTS.STORAGE: Store the Fan with these instructions in the original box in a cool and dry place.

## Specification

- Model Number CF-1318R
- Power Supply 220-230V~ 50Hz
- Rated Power 55W
- Product Dimension 325 x 241 x 360 mm

## Origin Map

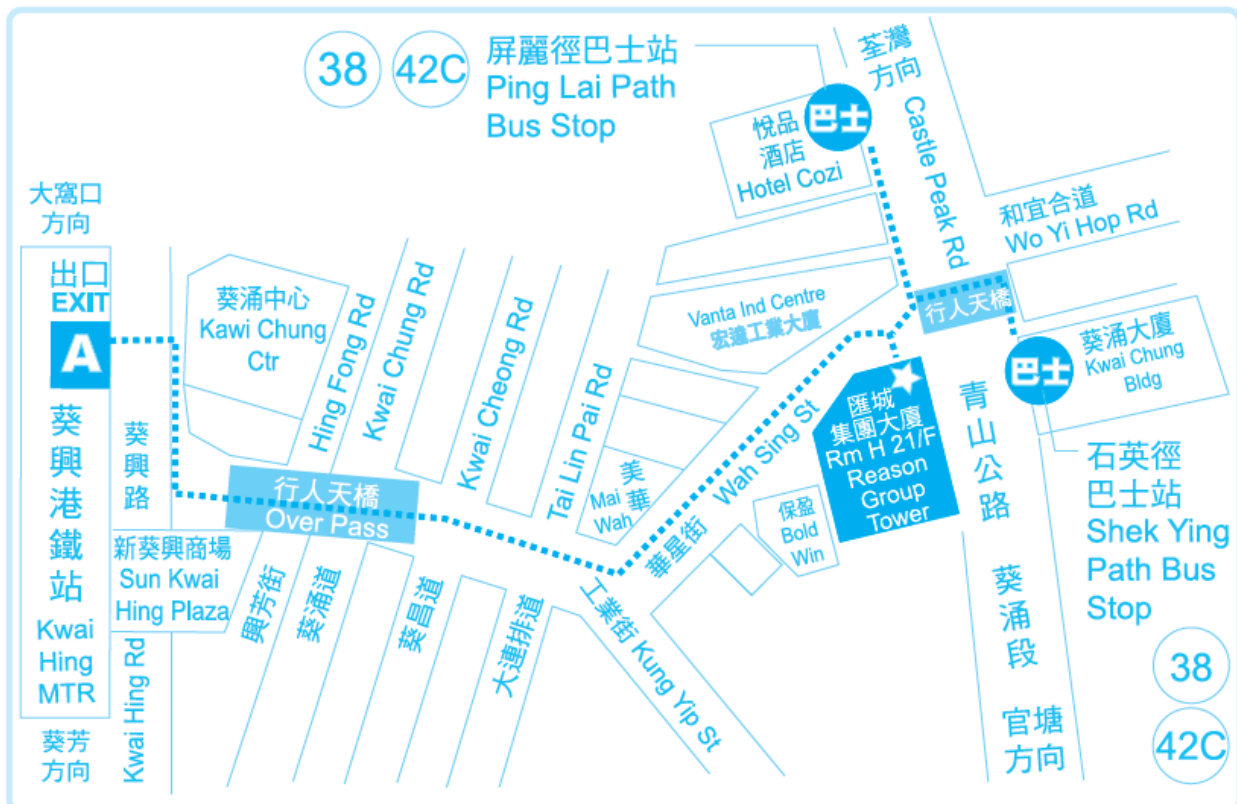

- 10:30am – 12:30pm
- 02:30pm – 05:30pm
- 10:30am – 12:30pm

## OFFICE HOURS

- 10:30am – 12:30pm (Mon to Fri)
- 02:30pm – 05:30pm (Mon to Fri)
- 10:30am – 12:30pm (Saturday)
- (Closed on Sunday and Holiday)

## Warranty Card(1 year carry-in)

This product is warranted for 1year (commercial use for 3 months) from the date of purchase under the following conditions:

1. For any defect, in the judgment of our technician, if it is caused under normal use, we are responsible for repairing the product, and/or replacing parts at free of charge.
2. This warranty DOES NOT apply to:
  - If the product has been damaged through abuse, misuse, negligence or accidents;
  - Unauthorized repair, alteration/modification;
  - The remote control, housing, cover or accessories.
3. The customer is requested to bring the unit to and from our Service Centre whenever service is needed.
4. Any defective parts, which had been replaced, shall be of our property.
5. This warranty is valid in H.K.S.A.R. only.
6. Please show the Invoice to get free service.

Extra 3 months warranty: just complete Online Warranty Registration within 10 days from the date of receipt, free warranty will be extended to 15 months (not applicable to commercial use). Please enter our website:

 
[www.origo.hk](http://www.origo.hk)

### Service Centre

ORIGIN MARKETING LIMITED

Unit H, 21/F., Reason Group Tower (nearby 12 Wah Sing Street), 403 Castle Peak Road,  
Kwai Chung, N.T., Hong Kong. Tel: 2156 8238 [www.origo.hk](http://www.origo.hk)

### Documents / Resources

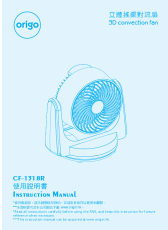	<p><a href="#">origo CF-1318R 3D Convection Fan</a> [pdf] Instruction Manual CF-1318R 3D Convection Fan, CF-1318R, 3D Convection Fan, Convection Fan, Fan</p>
---	---