



## origo CF-1608 Convection Fan Instruction Manual

[Home](#) » [origo](#) » origo CF-1608 Convection Fan Instruction Manual 

 


### CF-1608 Convection Fan Instruction Manual

#### Contents

- [1 CF-1608 Convection Fan](#)
- [2 Important Safety Information](#)
- [3 Main Parts](#)
- [4 Maintenance](#)
- [5 Specifications](#)
- [6 Documents / Resources](#)
  - [6.1 References](#)
- [7 Related Posts](#)

**CF-1608 Convection Fan**

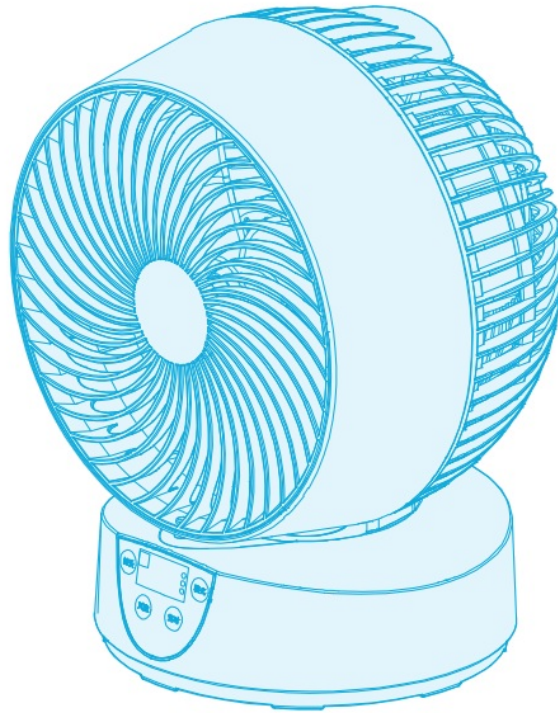


### Important Safety Information

- Read all instructions carefully before using the Fan.
- Use this Fan only as described in this manual. Any other use not recommended by the manufacturer may casue fire, electrical shock or injury to persons.
- Open the package and ensure that the Fan is undamaged. In case of doubt do not use the FAN Cooler and contact your supplier.
- Do not let children play parts of package.
- Before using the Fan, check if the voltage marked on the rating label corresponds to the mains at your home.




- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- Avoid using extension cord as it may overheat and casue fire.

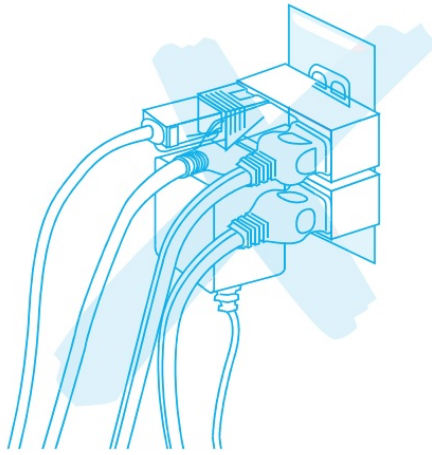

- Do not pull the power cord to disconnect from power source. Always grasp the plug to pull out.

•

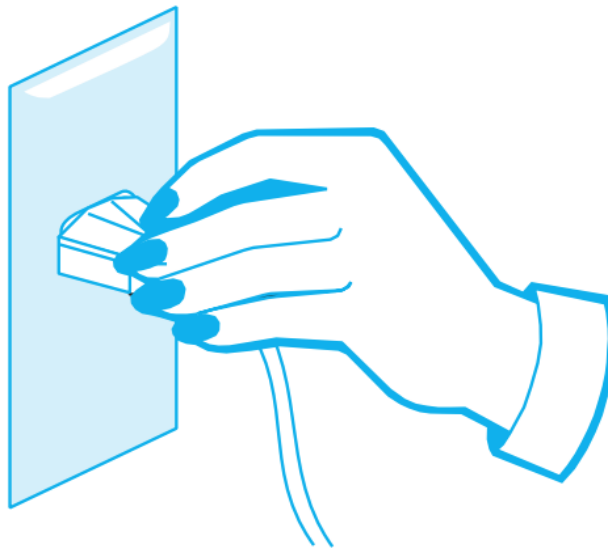

Do not insert any objects into the Fan as it may cause an electric shock or damage. Do not block or tamper with the Fan in any manner while it is in operation.

- Do not leave the Fan unattended. Always unplug the Fan Cooler when not in use.
- **WARNING:** The On/Off switch should not be used as the sole means of disconnecting power. Always unplug the power cord before servicing or moving the unit.
- This Fan is intended for household use ONLY and not for industrial or outdoor use.

Always disconnected the Fan from the power supply when moving it from one location to another.



This product contains recyclable materials. Do not dispose this product as unsorted municipal waste. Please contact your local municipality for the nearest collection


- The Fan is not intended for use in wet or damp locations. Never locate the Fan where it may fall into a bathtub or other water container.



- Do not place the Fan near a source of heat or fire. Keep the Fan clean to maintain in good condition (refer to maintenance section).
- Ensure that the fan is switched off from the supply mains before removing the guard.
- **WARNING:** To avoid danger of electric shock, unplug from outlet when not in use and before cleaning. If the power cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid hazard.

## Main Parts


The picture is for reference only, everything in kind shall prevail.

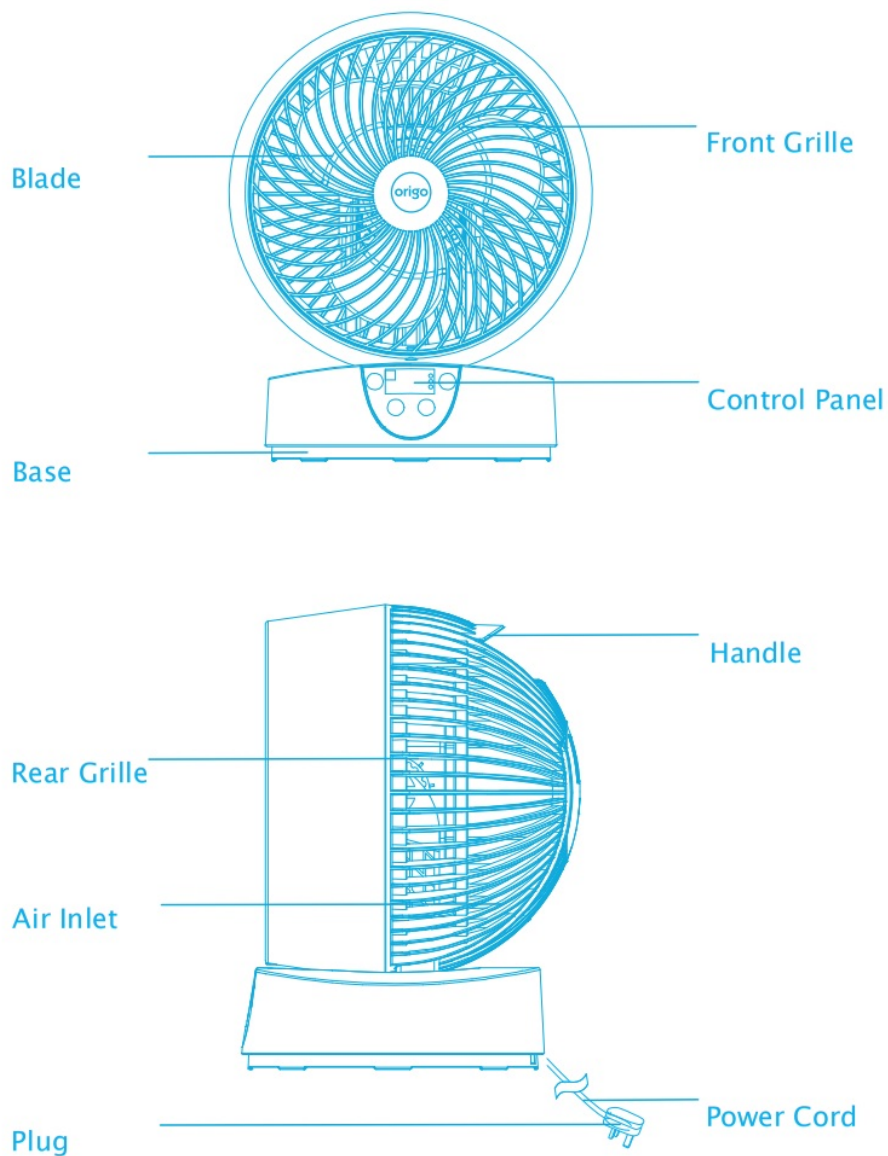



### Function Setting

The Fan may be operated by the control panel (as shown in Figure 1) or by your remote control.

1. Place the Fan on a stable and flat surface. Plug the Power Cord into an 220V~ 50Hz electrical outlet. The LED screen will display the current room temperature.

2. POWER: Turn the Fan ON by pressing the  key, the Fan start at low speed.

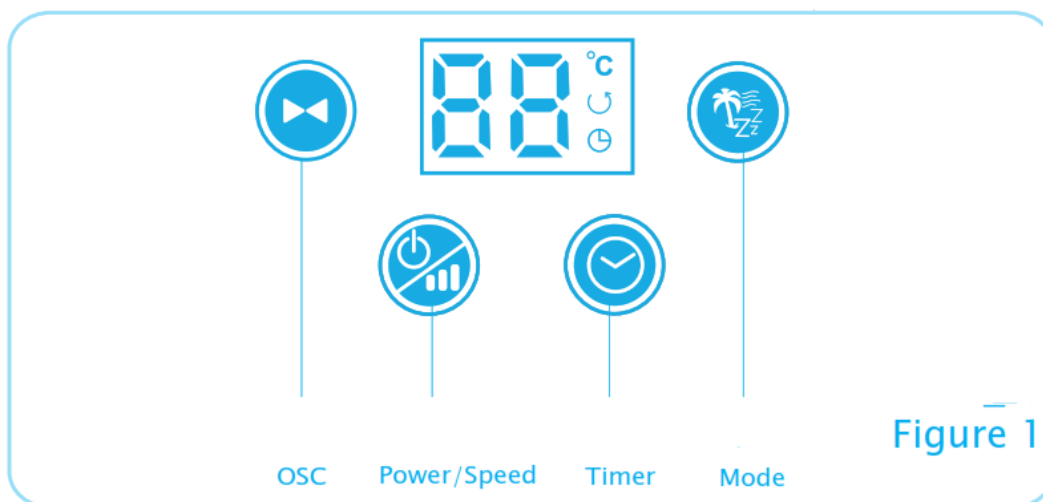

3. SPEED: Adjust the Fan speed to the desired level: Low, Medium, High by pressing  key. The speed

setting is displayed on the LED screen.



4. MODE: Press the key to set the Fan as Natural, Sleep mode or ECO mode. The mode is displayed on the LED screen. Press the mode key 4 times, it will come back to default setting normal mode and the LED indicator of wind mode will be off.

4.1. Sleep mode: "SL" is always displayed in sleep wind mode, and the wind speed drops every 10 minutes. After the wind speed drops to the lowest wind speed, the Fan always runs at low wind speed.

4.2. ECO Function:



- When the fan is running, long press the mode key for more than 3 seconds to enter the ECO mode. The wind speed will be change automatically according to the indoor temperature in ECO mode.
  - In ECO mode, the LED display shows "EC", and the indoor temperature is displayed alternately every 5 seconds. If there is a timer setting, "EC", room temperature, and timer are displayed alternately every 5 seconds.
  - In ECO mode, the indoor temperature needs to be maintained for 5 minutes after changing to another temperature, and the fan speed is switched accordingly.
  - When the indoor temperature is lower than 18°C, the display shows "LO". When the indoor temperature is higher than 35°C, the display shows "HI", and the specific temperature is no longer displayed.
  - Press the ECO mode button on the remote control to directly enter into ECO mode, the wind speed will change with the indoor temperature. Press it again to exit ECO mode and restore the original state.
  - In ECO mode, press the switch / wind speed key to cancel the ECO mode and automatically switch to normal wind and adjust the wind speed.
5. OSC(LEFT/RIGHT): Press the key to allow the Fan to LEFT/RIGHT oscillate the wind direction. To stop the oscillation, press the key again.
6. OFF TIMER: When the Fan is running, pressing the key to set desired auto power off time, There are 9 time intervals, from 1-hour to 9-hour. The LED of timer will be on and displayed the off time setting on the LED screen.
7. PRESET START TIME: In Standby mode, pressing the key to set desired preset power start time, There are 9 time intervals, from 1-hour to 9-hour. The LED will be flash on and displayed the start time setting on the LED screen. OSC, MODE and SPEED can be set at the same time when the LED indicator flashes.
8. To turn the Fan off, press the key until it stops.

## Remote Control

1. All functions performed by the Remote Control work are identical to the Manual.
2. Battery replacement: Install one 3V Lithium battery.


## WARNING

1. Keep batteries out of reach of children. Should a child swallow a battery, consult a doctor immediately.

2. Do not recharge or dispose in fire.
3. Keep in a dry and cool place.



Insert battery in right direction. Battery disposal – Please dispose the used battery per municipal or provincial law.

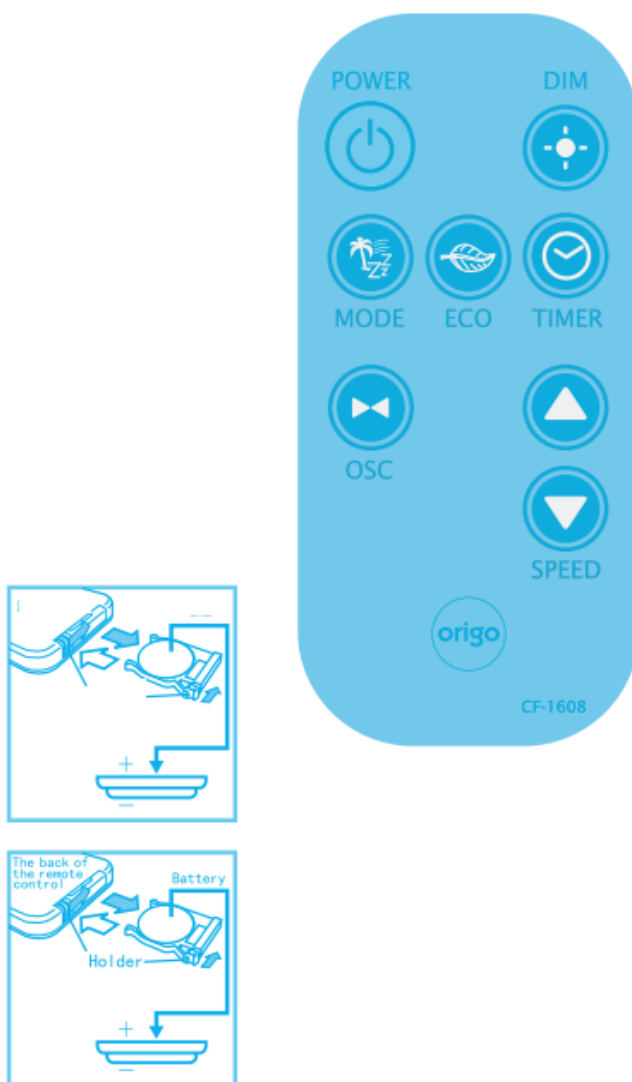

## Maintenance

### WARNING:


ALWAYS UNPLUG THE POWER CORD BEFORE MOVING OR SERVICING. DO NOT IMMERSE THE FAN IN WATER! BEFORE CLEANING, MAKE SURE THAT THE UNIT HAS BEEN SWITCHED OFF AND IT IS UNPLUGGED FROM THE MAIN OUTLET.

Housing & Rear Grille: Clean the outside and grille of the Fan with a soft cloth. To remove persistent dirt, wipe down with a cloth that has been dampened with warm soapy water.

Blade: Loosen the screw, turn the front grille anti-clockwise and pull it out. Clean the blade with a soft damp cloth, place back and fix the front grille with the screw after cleaning.

**CAUTION:** Do NOT use gasoline, benzene, thinner, harsh cleaners, etc., as they will damage the Fan. NEVER use ALCOHOL or any other SOLVENTS.


**STORAGE:** Store the Fan with these instructions in the original box in a cool and dry place.

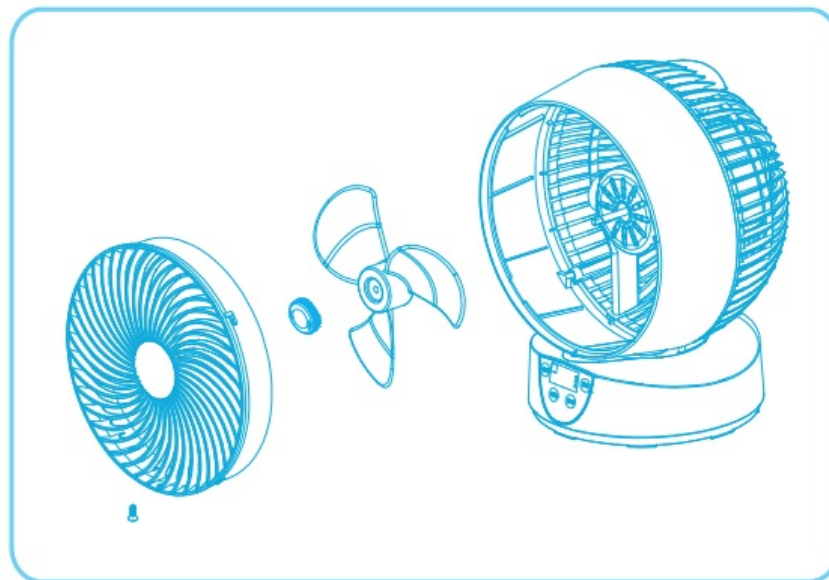

## Specifications

Model Number	CF-1608
Power Supply	220-240V- 50Hz
Rated Power	28-30W
Product Dimension	300 x 240 x 230 mm (*7/Approx.)
 
## Origin Map

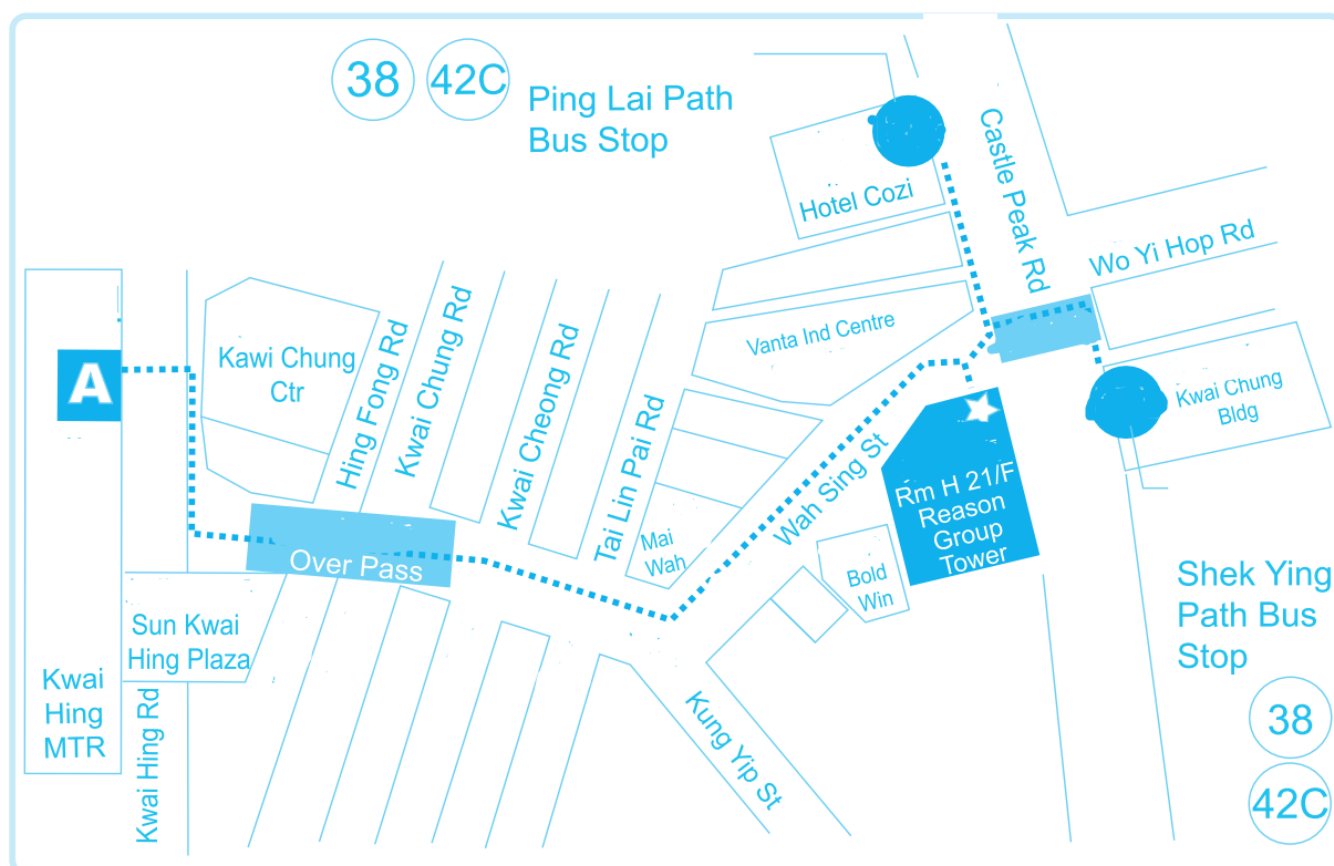

	OFFICE HOURS
10:30am – 12:30pm	10:30am – 12:30pm (Mon to Fri)
02:30pm – 05:30pm	02:30pm – 05:30pm (Mon to Fri)
10:30am – 12:30pm	10:30am – 12:30pm (Saturday)
	(Closed on Sunday and Holiday)

Item : Convection Fan

Model : CF-1608

This product is warranted for 1year (commercial use for 3 months) from the date of purchase under the following conditions:

1. For any defect, in the judgment of our technician, if it is caused under normal use, we are responsible for repairing the product, and/or replacing parts at free of charge.
2. This warranty DOES NOT apply to:
  - If the product has been damaged through abuse, misuse, negligence or accidents;
  - Unauthorized repair, alteration/modification;
  - The remote control, housing, cover, blade or accessories.
3. The customer is requested to bring the unit to and from our Service Centre whenever service is needed.
4. Any defective parts, which had been replaced, shall be of our property.
5. This warranty is valid in H.K.S.A.R. only.
6. Please show the Invoice to get free service.

\*\*\*Extra 3 months warranty: just complete Online Warranty Registration within 10 days from the date of receipt, free warranty will be extended to 15 months (not applicable to commercial use). Please enter our website:

[www.origo.hk](http://www.origo.hk)

#### Service Centre

ORIGIN MARKETING LIMITED


Unit H, 21/F., Reason Group Tower (nearby 12 Wah Sing Street), 403  
Castle Peak Road, Kwai Chung, N.T., Hong Kong.

Tel: 2156 8238

[www.origo.hk](http://www.origo.hk)



 
[www.origo.hk](http://www.origo.hk)

Find us on 





<https://www.facebook.com/Origin-Marketing-Limited-327710507631440/>
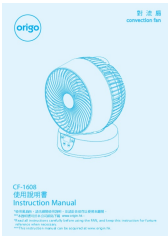
## Documents / Resources

	<p><a href="#">origo CF-1608 Convection Fan</a> [pdf] Instruction Manual CF-1608 Convection Fan, CF-1608, Convection Fan, Fan</p>
---	---

## References

-  [ORIGIN](#)
-  [ORIGIN](#)