



ororo B07WFHJ1YG Soft Shell Heated Jacket User Guide

[Home](#) » [ororo](#) » ororo B07WFHJ1YG Soft Shell Heated Jacket User Guide 

Contents


- [1 ororo B07WFHJ1YG Soft Shell Heated Jacket](#)
- [2 OPERATING INSTRUCTIONS](#)
- [3 CLEANING INSTRUCTIONS](#)
- [4 SAFETY INSTRUCTIONS & WARNINGS](#)
- [5 BATTERY SAFETY INSTRUCTIONS](#)
- [6 WARRANTY](#)
- [7 Documents / Resources](#)
 - [7.1 References](#)
- [8 Related Posts](#)

ororo

ororo B07WFHJ1YG Soft Shell Heated Jacket



OPERATING INSTRUCTIONS

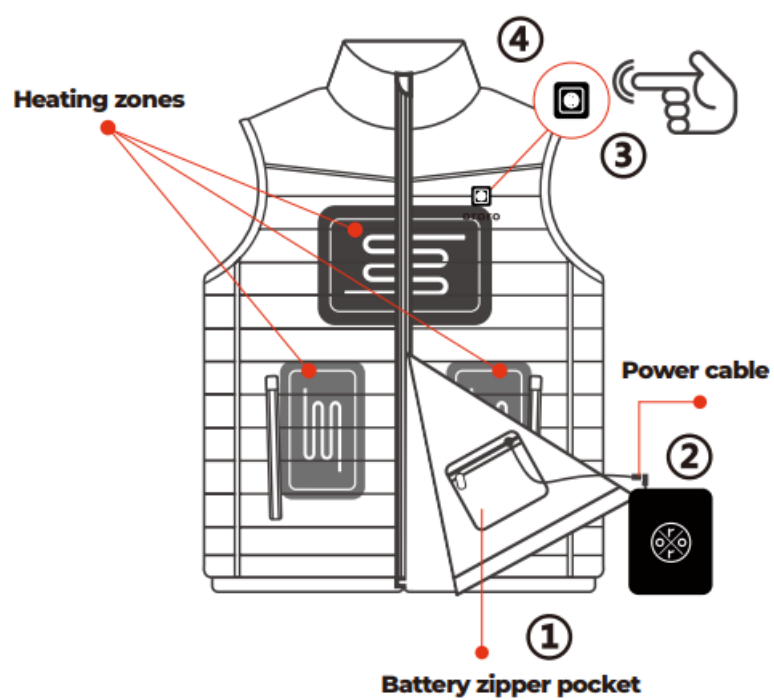

1. Locate the battery zipper pocket and the power cable on the inside of the apparel.
2. Insert power cable into the designated port on the battery.
3. To power on, press and hold the power button on the GARMENT (usually located on the left chest area) for three seconds.

Heating zones* are now activated, and the apparel begins to preheat for five minutes (power button/logo illuminates and flashes red). When fully preheated, the apparel will automatically adjust to medium heat (power button/logo illuminates solid white). The heating level can be adjusted by a short press of the power button. To indicate the setting has changed, the logo/power button will cycle through solid red, white and blue illumination with each press.



4. To power off, press and hold the power button for three seconds until the lighted logo/power button turns off.

CLEANING INSTRUCTIONS



WARNING:

DISCONNECT and REMOVE the battery from the inside zipper pocket, put the connector cable back inside of the pocket, and make sure the pocket is fully zippered closed before washing the apparel.



Place the apparel inside of a mesh laundry bag before putting it in the washing machine. Follow Care Instructions on the garment tags. Machine wash, gentle cycle or hand wash in cold water.

- DO NOT iron.
- DO NOT use bleach or any other harsh cleaning agents.
- DO NOT wring or twist the apparel.
- DO NOT dry clean.
- DO NOT machine dry.

Line dry, hang dry, or lay flat to dry only

SAFETY INSTRUCTIONS & WARNINGS

Read all safety warnings and instructions below. They apply to all ORORO heated apparel including, but not

limited to, jackets, vests, parkas, and hoodies. Failure to follow the instructions and warnings may result in electric shock, fire, serious injury, and/or product damage.

SAFE PRACTICES

- Prolonged close contact with the body of the heating system can cause burns. NEVER wear directly against the skin.
- ALWAYS wear a base layer between the product and the skin.
- ALWAYS use the lowest possible setting for comfort.
- DO NOT wear tight over-garments.
- DO NOT use for prolonged periods particularly at high heat setting.
- DO NOT use when wet. This includes excessive sweat. If the inner lining becomes wet, allow the product to dry completely before wearing. A wet, heated apparel increases the risk of electric shock.
- DISCONTINUE USE IMMEDIATELY at any sense of discomfort. Power off the product immediately if any discomfort occurs while wearing. Temperatures high enough to cause burns could occur regardless of the heat setting.
- Check connection cable and connectors regularly for signs of fatigue.
- To reduce the risk of the product powering on unintentionally, disconnect the battery from the power cable, and remove the battery pack from the garment before storing or washing.
- Use the product only as stated in this manual, taking into account the environment in which the product will be worn. Use of the product for operations other than specified herein may result in injury to the user or product damage. That use may also void the warranty for the product.
- If you have a medical condition, device, or take medication that may affect your sensitivity to heat, consult your physician before use.
- If the product malfunctions or does not operate properly, stop using it immediately.
- DO NOT power on your heated apparel while exercising or engaging in outdoor sports (e.g. skiing, running, etc.). Burns could result due to decreased sensitivity to temperature fluctuation.
- Clean this product only in accordance with the instructions specified on the product's washing label, and in the Cleaning Instructions section of this manual.
- Make sure the inner pocket containing the battery is completely zippered closed at all times.

THINGS TO AVOID

- This product is NOT intended for:
 - An infant or young child.
 - An incapacitated or immobile person.
 - A person with diabetes.
 - A person who is paralyzed, or who has skin that is sensitive to temperature changes.
 - Anyone with heat-sensitivity medical issues (e.g. poor blood circulation).
 - Anyone who cannot clearly comprehend the instruction manual and/or operate controls.
- DO NOT use the product if the power button is malfunctioning.
- DO NOT use the product while sleeping, or when there is the potential to fall asleep while wearing.
- DO NOT use the product under the influence of drugs or alcohol, as this can decrease skin sensitivity, and/or impair the ability to recognize the sensation of a burn.

- DO NOT use the product on open wounds.
- DO NOT use the product continuously for a long period of time. Excessive heat levels over prolonged periods of time can lead to burns.
- DO NOT allow the heating elements to make contact with bare skin

PRODUCT CARE

- DO NOT allow the cord to become tangled, pinched, kinked, or damaged inside the battery pocket. Fire could result.
- DO NOT attach pins or any other object(s) to the product. Electrical wiring damage could result
- DO NOT dry clean the product.
- DO NOT use bleach when hand-washing. Harsh cleaning solvents may damage, or lessen the effectiveness of, the insulated heating elements.

BATTERY SAFETY INSTRUCTIONS

Rechargeable, lithium-ion batteries are potentially hazardous and can present a serious fire hazard if damaged, defective, or used improperly. Before using the battery and charger, read all of the safety instructions below.

SAFE PRACTICES

- Use only the original ORORO battery, charger, and charging cord that came with your heated apparel.
- Fully charge the battery before first use. Four light-emitting diodes (LEDs) will be illuminated solid orange when fully charged. If any of the LEDs is flashing orange, the battery is still charging. When the battery is disconnected from a power source, check the charge level by pressing the battery-status indicator button.
- When the product is being stored, fully charge the battery at least once every six months
- Charge the battery in an environment that falls within the recommended temperature range of 32 to 104 °F (0 to 40 °C).
- Use the battery only in a climate that falls within the recommended temperature range of 14 to 86 °F (–10 to 30 °C).
- Keep the battery away from moisture. Store the battery pack in an environment where the relative humidity is 60±15 percent.

THINGS TO AVOID

- DO NOT use generic or incompatible battery chargers. Otherwise, it may cause the battery to malfunction, shorten the lifespan of the battery, or cause a fire. ORORO is not responsible for personal safety or product damage when chargers, or other accessories, that were not issued with your product purchase are used.
- DO NOT charge or use the battery in explosive atmospheres (e.g. in the presence of flammable liquids, gasses, or dust). Inserting or removing the battery from the charger may ignite the dust or fumes.
- DO NOT force the charger into the battery pack.
- DO NOT disassemble, drop or break open the battery pack or charger.
- DO NOT modify the battery pack in any way to fit into a non-compatible charger. This could cause the battery pack to rupture and may result in serious personal injury.

- DO NOT splash or immerse the battery in water or other liquids.
- DO NOT expose the battery to excessive heat or cold, can damage the battery, reduce charging capacity, and shorten lifespan. Charging the battery at an below freezing, temperature risks an explosion and may cause serious injury.
- DO NOT store or use the battery pack in locations where the temperature may reach, or exceed, 104 °F (40 °C).
- DO NOT store or leave the product unattended with a battery connected.
- DO NOT store the battery pack along with any other metal objects.
- DO NOT dispose used batteries in household trash or by burning.
- DO NOT incinerate the battery pack, even if it is severely damaged or completely worn out. Lithium-ion battery pack can explode in a fire and emit toxic fumes when burned.

FIRE HAZARDS

- When transporting individual battery packs, make sure that the battery ports are protected and well insulated from materials that could come into contact with them and cause a short circuit.
- DO NOT attempt to open the battery pack for any reason.
- DO NOT insert it into the charger, if the battery pack case is cracked or damaged.
- DO NOT crush, drop, or damage the battery pack.
- DO NOT use a battery pack or charger that has received a sharp blow, has been dropped, run over, or damaged in any way (e.g. pierced with a nail, hit with a hammer, stepped on, run over by a vehicle tire, etc.).
- DO NOT store or carry the battery pack so that metal objects can contact exposed battery terminals (e.g. in aprons, pockets, tool boxes, product kit boxes, drawers, along with loose nails, screws, keys, etc.).
- DO NOT place the battery pack in or on heating devices (e.g. microwave ovens, stoves, or radiators). The battery pack may explode if overheated.

BURN HAZARDS

- If battery acid contacts bare skin, wash it off immediately with soap and water.
- If battery acid gets into the eyes, splash eyes thoroughly with water for at least 10 minutes. Immediately seek medical attention or call your local poison control center.
- DO NOT contact with any battery acid if leaking from a damaged battery pack.
- DO NOT expose the battery to a spark or flame; liquid may be flammable.

WARRANTY

IMPORTANT: PLEASE RETAIN PROOF OF PURCHASE

- ORORO's limited warranty applies to all BRAND NEW items sold by ororowear.com and other authorized distributors.
- ONE (1) YEAR limited warranty covers any defects and malfunctions of this product from the date of purchase.
- This warranty is non-transferable and proof of original purchase from us or authorized distributors is required for warranty service.
- Damage to the parts resulting from accidental fire, flood, misuse, unauthorized service, or negligence as


outlined herein will void the warranty. Warranty does not cover commercial use.

- The warranty is limited to the repair or replacement of the defective product at the manufacturer's sole discretion. The manufacturer shall not be liable for any incidental or consequential damages, whether direct or indirect.
- If warranty service should be necessary, please contact our customer service for instructions. Once a warranty claim is filed and approved, you may then return the product with proper packaging and paid postage along with the proof of purchase and warranty claim number issued by us. Any product or parts, upon examination, are found to be defective, will be replaced with the same or a similar product during the warranty period.

Supporting Customer Happiness

+1 (702) 751-7639 support@ororowear.com

Documents / Resources

	ororo B07WFHJ1YG Soft Shell Heated Jacket [pdf] User Guide B07WFHJ1YG, Soft Shell Heated Jacket, B07WFHJ1YG Soft Shell Heated Jacket, Shell Heated Jacket, Jacket
---	--

References

-  [ORORO® Heated Apparel | Heated Jacket, Vest, Gloves for Everyday](#)
-  [ORORO® Heated Apparel | Heated Jacket, Vest, Gloves for Everyday](#)
-  [Product Registration – ORORO](#)