



OSD AUDIO SRT1 WiFi Preamp Streaming Module User Guide

[Home](#) » [OSD AUDIO](#) » OSD AUDIO SRT1 WiFi Preamp Streaming Module User Guide 

Contents

- [1 OSD AUDIO SRT1 WiFi Preamp Streaming Module](#)
- [2 SAFETY INSTRUCTIONS](#)
- [3 FEATURES](#)
- [4 REMOTE FEATURES](#)
- [5 SETUP](#)
- [6 TROUBLESHOOTING](#)
- [7 SPECIFICATIONS](#)
- [8 WARRANTY](#)
- [9 FCC WARNINGS](#)
- [10 Documents / Resources](#)
- [11 Related Posts](#)

 


 
OSD AUDIO SRT1 WiFi Preamp Streaming Module



SAFETY INSTRUCTIONS

- To reduce the risk of fire or electrical SHOCK do not expose the product to rain or moisture
- The product should not be exposed to any dripping or splashing liquid.
- Keep the remote control battery away from children. Dispose of used battery promptly, replace only with a battery of the correct type.
- Protect the power cord from damage. Do not pull push the power cord excessively, and take care not to let the power cord become pinched, particularly at or near the plug.
- Keep the product away from heat sources such as heat registers, stoves or other appliances that produce heat.
- Avoid direct sunshine. Do not operate in a sealed box.
- Do not open the cover or touch the inner parts, refer servicing to our customer service.

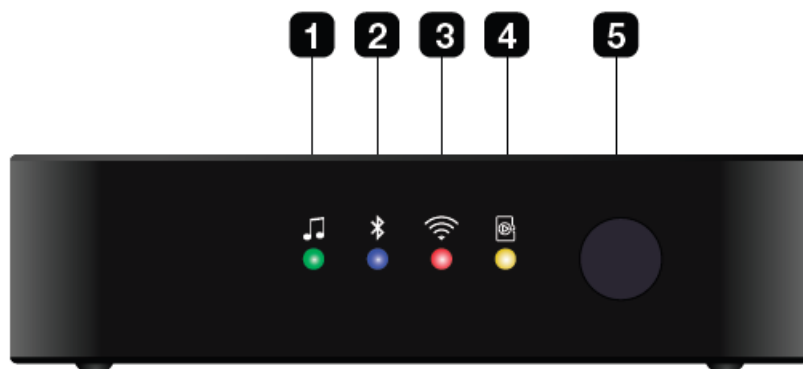

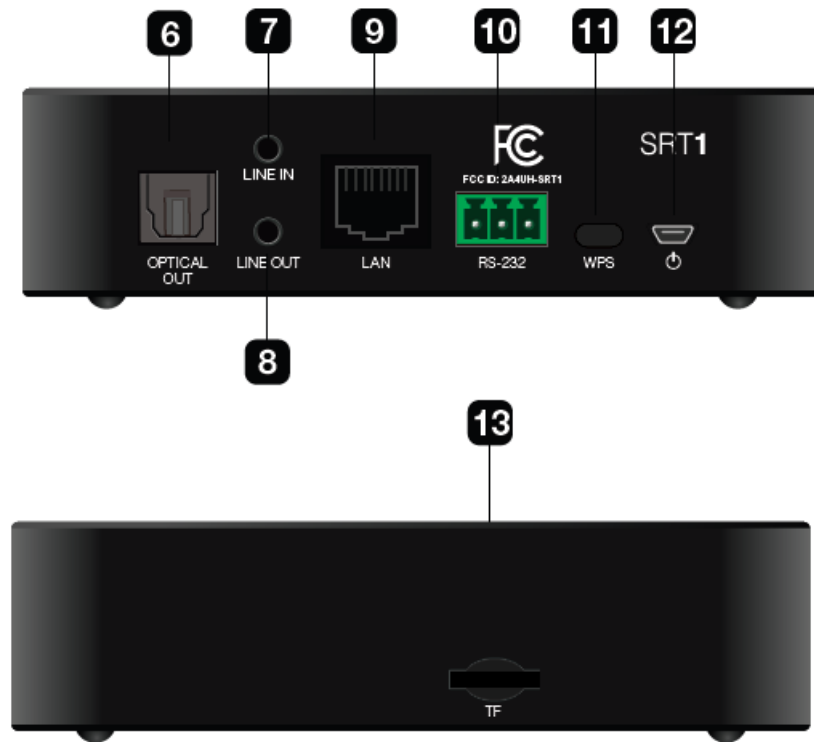


FEATURES

1. Line Indicator
2. Bluetooth® Indicator
3. Wi-Fi® Indicator
4. TF Card Indicator
5. IR receiving window
6. Optical Output
7. Line In
8. Line Out
9. LAN Input
10. RS232
11. WPS
12. 5V DC In
13. TF Card Port

REMOTE FEATURES

1. On/Off Button
2. WiFi® Source
3. Volume Up
4. Volume Down
5. Next Track
6. Previous Track

 7. TF Source
8. Play All Source
9. Line Source
10. Play/Pause
11. Bluetooth® Source

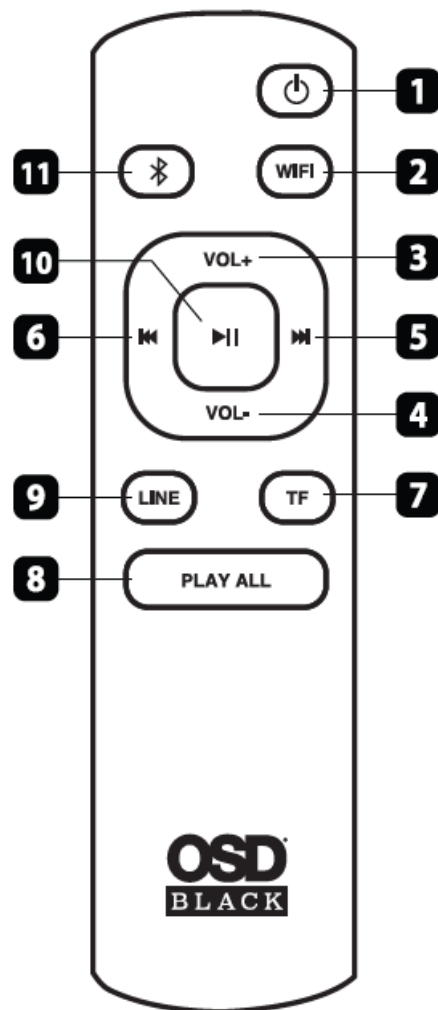

SETUP

- Connect the power cord to the back of the SRT1 then connect it to a wall outlet.
- Connect your devices to a suitable input
- Press the Bluetooth®, OPT, LINE or AUX button on the remote or the volume knob to choose a audio source.
Control the playback via the remote control by pressing the buttons.

Note

Always press the desired source button on the remote control for the audio source to work.

Connect Your Device

Connect your CD/phone/tablet/MP3 etc... via the appropriate cable your device is compatible with to one of the source input s on the back of the SRT1.

Bluetooth® Pairing

1. Press the Bluetooth® on the remote to activate the Bluetooth source.
2. Activate Bluetooth on your phone/tablet and start searching for new Bluetooth devices.
3. When your phone/tablet finds SRT1, choose this unit and begin pairing.
4. To unpair an existing source, press and hold the Bluetooth button on the remote for 3 seconds.

Wi-Fi® Connection

1

1. Download and install the OSD Player App for your iOS or Android device.
2. Press the Wi-Fi® button on the remote to activate the Wi-Fi source.
3. WPS: – Link your device to the SRT1 and your Wi-Fi network by following the setup steps in the app.

TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSE
No Power	<ul style="list-style-type: none"> – The power cord is disconnected. – Poor connection at the wall socket or the wall socket is inactive.
No Sound	<ul style="list-style-type: none"> – Volume control at lowest level. – Check if the signal cables are damaged. – Check if the LEDs are blinking. If not, re start the unit and ensure that the LED displays is in standby. If it still doesn't work, contact customers service.
Sudden Sound Loss	<ul style="list-style-type: none"> – Check the audio source.
Poor Sound Quality	<ul style="list-style-type: none"> – Audio source problem – Bad or incorrect speakers connections. – Treble and bass control are too low.
LED Off	<ul style="list-style-type: none"> – Check if the unit is connected with the power outlet

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by OSD BLACK is under license. Other trademarks and trade names are those of their respective owners.

SPECIFICATIONS

- Inputs: Wi-Fi®, Bluetooth®, LAN, TF, 3.5mm
- Output: 3.5mm Headphone Jack, Optical
- DAC: Cirrus Logic CS8406 24 Bit/192kHz DAC
- Wi-Fi Frequency: 2.4 GHz
- Bluetooth Version: 4.2 V/ aptX™

- Dimensions: 4.5 x 4.5 x 1.18" inch

WARRANTY

All OSD BLACK electronics have (2) year Limited Warranty against defects in materials and workmanship. Proof of purchase must accompany all claims. During the warranty period, OSD BLACK will replace any defective part and correct any defect in workmanship without charge for either parts or labor.

OSD BLACK may replace returned electronics with a product of equal value and performance. In such cases, some modification to the mounting may be necessary and are not OSD BLACK's responsibility

Damage to or destruction of components due to the application of excessive power voids the warranty on those parts. In these cases, repairs will be made on the basis of the retail value of the parts and labor. To return for repairs, you must email customer service at RMA@audiogeargroup.com for a Returned Merchandise Authorization (RMA) number then the unit must be shipped to OSD BLACK at the owner's expense, along with a note explaining the nature of service required. Be sure to pack the product(s) in a corrugated container with at least 3 inches of resilient material to protect the unit from damage in transit. This Warranty Does Not Cover Damage caused by abuse, accident, misuse, negligence, or improper operation (installation). altered, defaced, or removed. Normal wear and maintenance.


FCC WARNINGS

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: -Reorient or relocate the receiving antenna. -Increase the separation between the equipment and receiver. -Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. -Consult the dealer or an experienced radio/TV technician for help. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

Documents / Resources

	<p>OSD AUDIO SRT1 WiFi Preamp Streaming Module [pdf] User Guide</p> <p>SRT1, 2A4UH-SRT1, 2A4UHSRT1, SRT1 WiFi Preamp Streaming Module, SRT1, WiFi Pream p Streaming Module</p>
---	--