




## OSMO Pocket Quick Start Guide

[Home](#) » [OSMO](#) » OSMO Pocket Quick Start Guide 

### Contents


- 1 OSMO Pocket Quick Start Guide
- 2 In the Box
- 3 Introduction
- 4 Downloading the DJI Mimo App
- 5 Activating the Osmo Pocket
- 6 Installing the MicroSD Card
- 7 Operating the Osmo Pocket
- 8 Charging the Osmo Pocket
- 9 Storing the Osmo Pocket
- 10 Read More About This Manual & Download PDF:
- 11 Related Posts

## OSMO Pocket Quick Start Guide

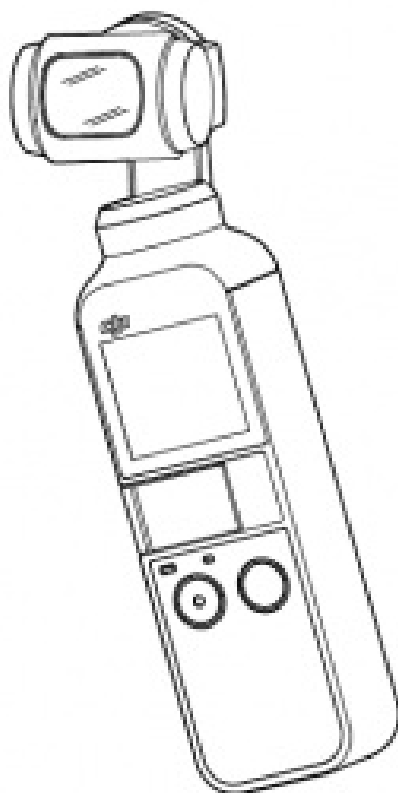


### In the Box

Osmo Pocket ×1

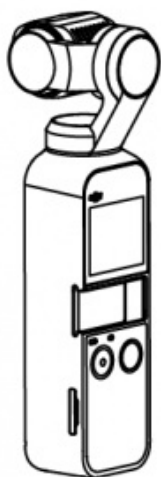

Cover ×1

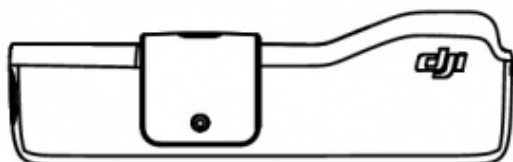


**Wrist Strap x1**




**Smartphone Adapter (USB-C) x1**



**Smartphone Adapter (Lightning) x1**

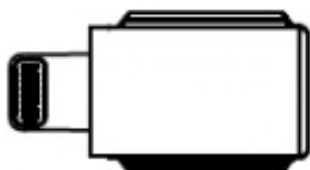


**Power Cable x1**

 

## Introduction

The OSMOTM Pocket is a handheld gimbal camera that combines mobility and stability in one device. It shoots sharp 12 MP still photos and stable video at up to 4K 60fps. The onboard touch screen displays a live feed from the camera and can control camera and gimbal movements. A mobile device connects to the DJI Mimo app where professional-quality videos can be created in Story Mode. Intelligent Modes such as ActiveTrack, Panorama, and Timelapse give you everything you need for the perfect shot.

1. Camera
2. Tilt Motor
3. Roll Motor
4. Pan Motor
5. Ventilation Area

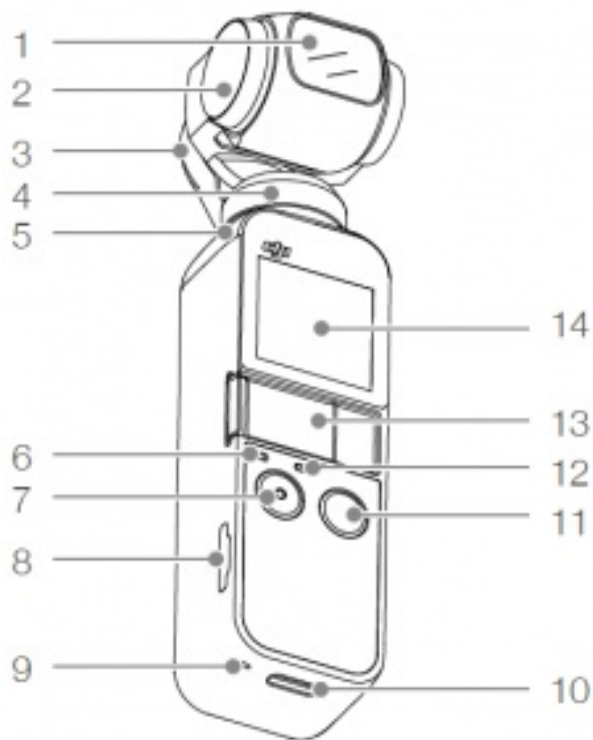


6. Status LED
7. Shutter/Record Button
8. MicroSD Card Slot
9. Microphone
10. USB-C Port
11. Power/Function Button
12. Microphone
13. Universal Port
14. Touch Screen




## Downloading the DJI Mimo App

Search for 'DJI Mimo' in the App Store or Google Play, or scan the QR code to download the app.

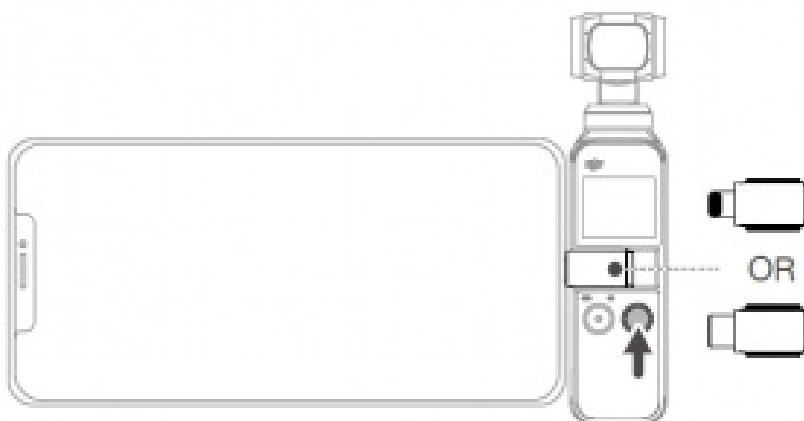


## Activating the Osmo Pocket

Press and hold the power/function button to power on/off. Activate the Osmo Pocket when using it for the first time by following the steps in the DJI Mimo app.

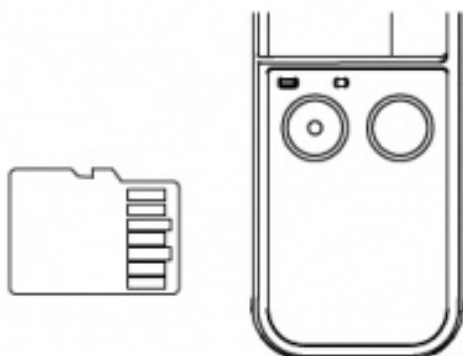


## Installing the MicroSD Card

It is recommended to use a microSD card with a UHS-I Speed Grade 3 rating (not included).

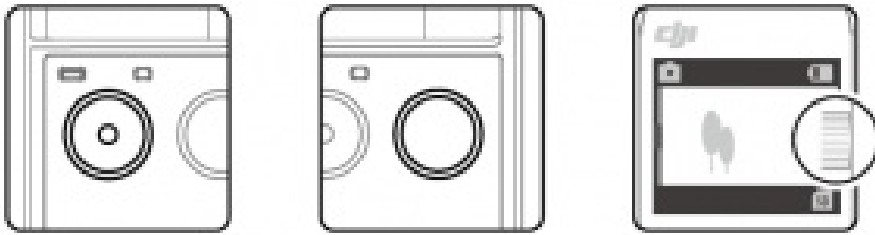



## Operating the Osmo Pocket

To operate the Osmo Pocket, press the shutter/record button, power/function button or slide the touchscreen.

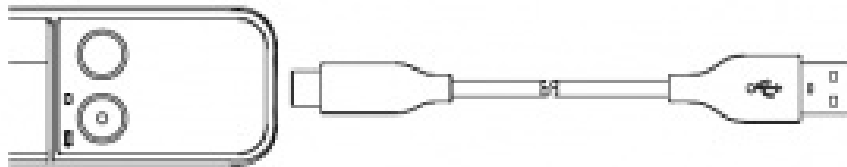

## Charging the Osmo Pocket

To charge the Osmo Pocket, connect a USB adapter (not included) to the USB-C port using the provided power cable. The battery is fully charged when the status LED stops blinking.

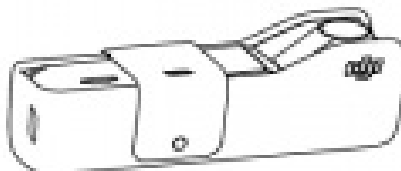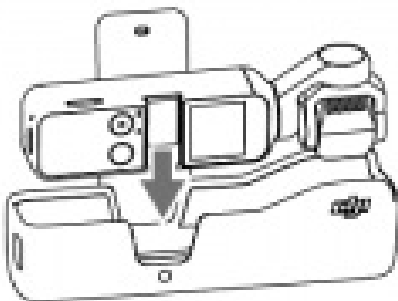

## Storing the Osmo Pocket

Place the Osmo Pocket into its cover as shown above for safer transportation and storage.

For more information, read the user manual in DJI Mimo or on the DJI website:

**[www.dji.com/osmo-pocket](http://www.dji.com/osmo-pocket)**

※This content is subject to change without prior notice.

OSMO is a trademark of DJI OSMO.

Copyright © 2019 DJI OSMO All Rights Reserved.

***Read More About This Manual & Download PDF:***

OSMO Pocket Quick Start Guide – [Download \[optimized\]](#)

OSMO Pocket Quick Start Guide – [Download](#)

Manuals+.