



Oster BLSTPEG-GPB Blender with Glass Jar Instruction Manual

[Home](#) » [Oster](#) » Oster BLSTPEG-GPB Blender with Glass Jar Instruction Manual 



Instruction Manual
BLENDER

READ ALL INSTRUCTIONS BEFORE USING THIS APPLIANCE



MODELS

BLSTPEG-GPB, BLSTPEG-RPB, BLSTPEG-BPB
BLSTPEG-CPB, BLSTPEG-NPB, BLSTPEG-BRT
BLSTPEG-MRT, BLSTPEG-CRT, BLSTPEG-NRT
BLSTPEG-BGB, BLSTPEG-BGR

Contents

1 IMPORTANT INFORMATION PRECAUTIONS

2 IMPORTANT SAFEGUARDS

3 APPLIANCE DESCRIPTION

4 GETTING TO KNOW YOUR OSTER® BLENDER

5 ASSEMBLING THE JAR

6 USING YOUR OSTER® BLENDER

7 CARING FOR AND MAINTAINING YOUR OSTER® BLENDER

8 Documents / Resources

8.1 References

IMPORTANT INFORMATION PRECAUTIONS

1. This appliance is not intended for use by children or by persons with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance. Keep the appliance and its cord out of reach of children.
2. Unplug from outlet when not in use, before putting on or taking off parts and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning. To disconnect, turn any control to OFF, then unplug power cord from outlet. Do not disconnect by pulling on cord.
3. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or is dropped or damaged in any manner. Take the appliance to the nearest Authorized Oster® Appliance Service Center for examination, repair or electrical or mechanical adjustment.
4. Blades are sharp. Handle carefully, especially when removing the blades from the container, emptying the container and during cleaning.
5. Be careful if hot liquid is poured into the food chopper as it can be ejected out of the appliance due to a sudden steaming.

SAVE THESE INSTRUCTIONS

This appliance is intended for household use and similar environments, such as:

- in shops, offices and other similar working environments;
- in farm houses;
- by clients in hotels, motels and other residential type environments;
- in bed and breakfast type environments.

The rated frequency of this appliance is 50/60 Hz. No user adjustment for different frequencies is possible or necessary.

Maximum load	Speed setting	Max run time
0.25L	Low	4 min
0.75L	Medium	4 min
1.5L	High	4 min

IMPORTANT SAFEGUARDS

1. This appliance is not intended for use by children or by persons with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance. Keep the appliance and its cord out of reach of children.
2. Unplug from outlet when not in use, before putting on or taking off parts and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning. To disconnect, turn any control to OFF, then unplug power cord from outlet. Do not disconnect by pulling on cord.
3. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or is dropped or damaged in any manner. Take the appliance to the nearest Authorized Oster® Appliance Service Center for examination, repair or electrical or mechanical adjustment.
4. Blades are sharp. Handle carefully, especially when removing the blades from the container, emptying the container and during cleaning.
5. Be careful if hot liquid is poured into the food chopper as it can be ejected out of the appliance due to a sudden steaming.
6. To protect against electric shock, do not place or immerse cord, plugs, or appliance in water or other liquid.
7. Never leave appliance unattended when in use.
8. Flashing light indicates ready to operate (models with stand-by mode). Avoid any contact with blades or moveable parts.
9. For appliances with markings on plug blade: This appliance has important markings on the plug blade. The attachment plug or entire cordset (if plug is molded onto cord) is not suitable for replacement. If damaged, the appliance shall be replaced.
10. The use of attachments, including canning jars, not recommended or sold by the manufacturer may cause fire, electric shock or injury.
11. Do not use outdoors or for commercial purposes.
12. Do not let cord hang over edge of table or counter, or touch hot surfaces, including the stove.
13. Keep hands and utensils out of container while blending to reduce the risk of severe injury to persons or damage to the blender. A scraper may be used but must be used only when the blender is not running.
14. To reduce the risk of injury, never place cutter-assembly blades on base without jar properly attached.
15. Always operate blender with cover in place. Always wait until all moving parts have stopped before removing any lid or cover.
16. When blending hot liquids, remove center piece of two-piece cover (if a two-piece cover is provided). Beware of steam. Do not blend boiling liquids.
17. Do not use appliance for other than intended use. Misuse can cause injuries. Always use appliance on a dry, stable, level surface. Never fill beyond the MAX fill line.
18. If your blender comes with a grounded plug, connect to properly grounded outlets only.
For containers with no lids or vents (when inserted in the blender), such as personal Blend and Go containers:
19. Make sure the jar is correctly placed onto the base before using the appliance.
20. Do not blend carbonated, hot or boiling liquids and ingredients, as this may create pressure buildup. Only blend non-carbonated liquids and ingredients that are at room temperature or cooler. If the container is warm to the touch, allow to cool before opening.
21. Do not use the blender for longer than 1 minute at a time to avoid heat and pressure buildup. Allow to cool for 1

minute between cycles.

For appliances with food processor or food chopper attachments:

22. Keep hands and utensils away from moving blades or discs while processing or chopping food to reduce the risk of severe injury to persons or damage to the food processor or chopper. A scraper may be used but must be used only when the food processor or chopper is not running.
23. To reduce the risk of injury, never place cutting blade or discs on base without first putting container properly in place.
24. Be certain cover is securely locked in place before operating appliance.
25. For food processors: Never feed food by hand. Always use food pusher.
26. Do not attempt to defeat the cover interlock mechanism.
27. If mixing cup or bowl is chipped, cracked or damaged in any way, discontinue use of product.
28. If blades appear to be damaged, discard food and discontinue use of product.

SAVE THESE INSTRUCTIONS


This appliance is intended for household use and similar environments, such as:

- in shops, offices and other similar working environments;
- in farm houses;
- by clients in hotels, motels and other residential type environments;
- in bed and breakfast type environments.

The rated frequency of this appliance is 50/60 Hz. No user adjustment for different frequencies is possible or necessary.

Maximum load	Speed setting	Max run time
0.25L	Low	4 min
0.75L	Medium	4 min
1.5L	High	4 min

APPLIANCE DESCRIPTION

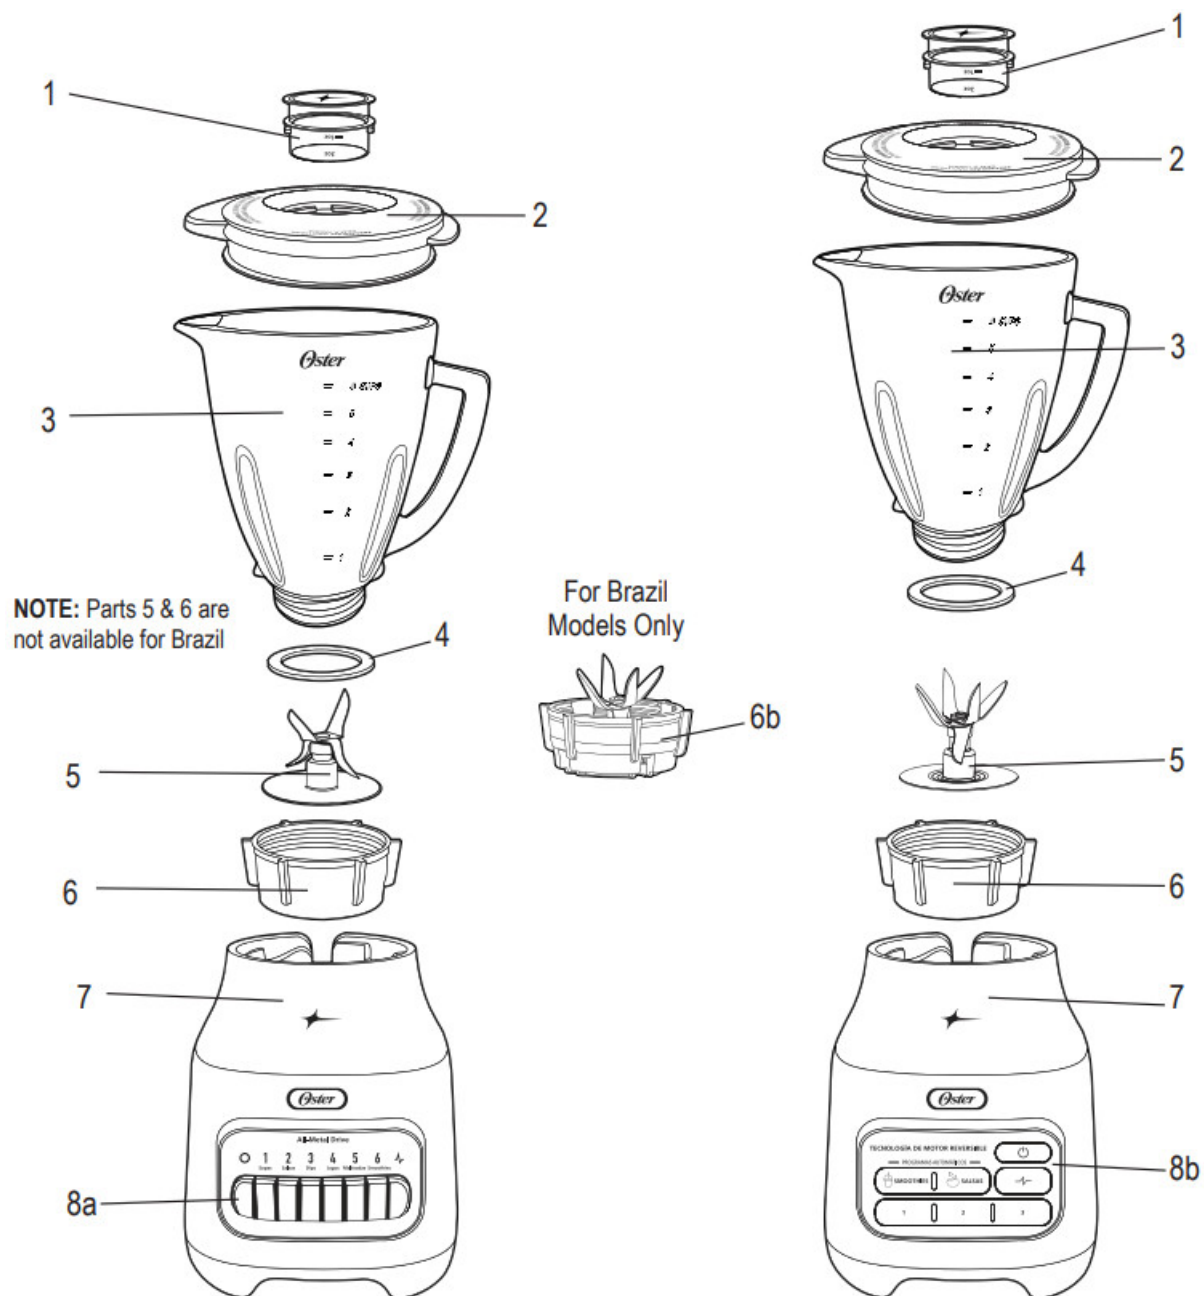

1. Filler cap
2. Lid
3. 1.5 L (6-cup) Glass Jar
4. Sealing Ring
5. Ice-crushing blade (Not available for Brazil)
6. Threaded jar bottom (Not available for Brazil)
- 6b. FOR BRAZIL MODELS ONLY: Integrated blade assembly with threaded jar bottom
7. Powerful Motor with exclusive All-Metal Drive® system for extra durability
8. Control Panel (depending on model)
 - 8a. Push button model with 6 speeds
 - 8b. Model with reversible technology, 2 automatic programs & 3 speeds

GETTING TO KNOW YOUR OSTER® BLENDER



For models BLSTPEG-XPB/BGB:

550 W POWERFUL MOTOR

ALL-METAL DRIVE®

for maximum durability

PUSH BUTTON CONTROL WITH 6 SPEEDS + PULSE

allows the flexibility of using the blender to customize your recipes

GLASS JAR RESISTANT TO BOILING INGREDIENTS*

no need to wait for hot ingredients to cool down to use your blender

REVOLUTIONARY ICE-CRUSHING BLADE

FILLER CAP / 2-OUNCE SCOOP

Scoop function that allows you to measure and add ingredients during use. Also allows you to open lid to allow steam to escape while blending hot foods.



For models BLSTPEG-XRT/BGR:

REVERSIBLE TECHNOLOGY

turns blades back and forth to completely process all ingredients

600 W POWERFUL MOTOR

ALL-METAL DRIVE®

for maximum durability
2 AUTOMATIC PROGRAMS

- SMOOTHIES – Perfect for blending any kind of beverage
- SALSAS – Allows to slice, shred or chop ingredients (i.e., soups, purees, salsas, etc.)

3 SPEEDS + PULSE

allows the flexibility of using the blender to customize your recipes

GLASS JAR RESISTANT TO BOILING INGREDIENTS*

no need to wait for hot ingredients to cool down to use your blender

REVOLUTIONARY ICE-CRUSHING BLADE

FILLER CAP / 2-OUNCE SCOOP

Scoop function that allows you to measure and add ingredients during use. Also allows you to open lid to allow steam to escape while blending hot foods.

Before you use your blender for the first time, separate the jar, jar lid, filler cap, sealing ring, blade and threaded jar bottom. Wash in warm, soapy water, or top rack in the dishwasher. Rinse and dry well.

*Up to a thermal shock of 90°C

ASSEMBLING THE JAR

1. Turn jar upside down so the small opening is at the top. (Figure 1)
2. Place sealing ring over the small opening of the jar. (Figure 2)
3. Place blade into the small opening of the jar. (Figure 3)
4. Place threaded jar bottom over blade and sealing ring and turn clockwise to tighten to jar. (Figure 4)
5. Place ingredients into jar. (Figure 5)
6. Place lid with filler cap on jar. (Figure 7)
7. Place jar assembly onto base. (Figure 8)
8. Plug the power cord into a standard household outlet of the same voltage as the one indicated in the rating plate of your blender. You are now ready to begin using your blender!

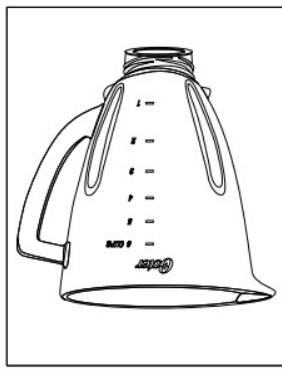 


Figure 1

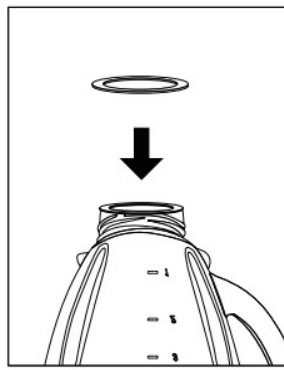 


Figure 2

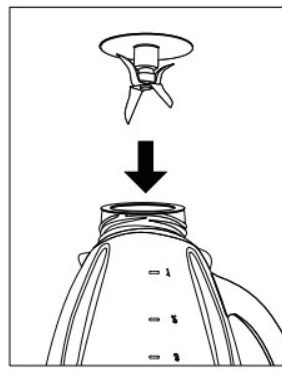 


Figure 3

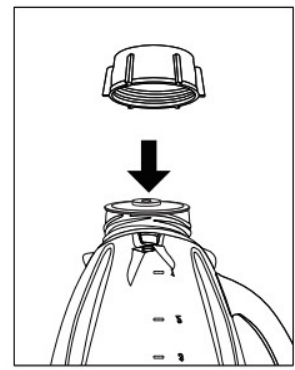 


Figure 4

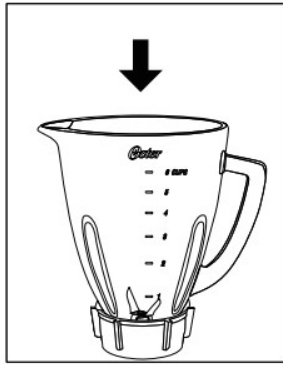 


Figure 5

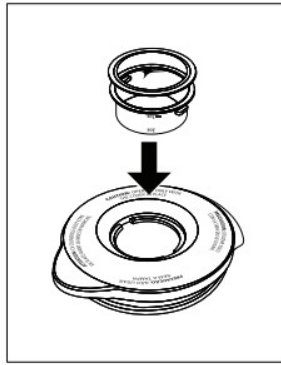 


Figure 6

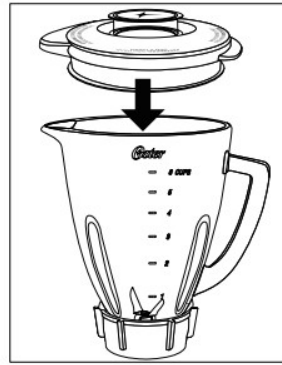 


Figure 7



Figure 8

FOR BRAZIL MODELS ONLY:

1. Turn jar upside down so the small opening is at the top. (Figure 1)
2. Place sealing ring over the small opening of the jar. (Figure 2)
3. Turn the integrated blade assembly with threaded jar bottom upside down and place into the small opening of the jar. Turn clockwise while pushing down to tighten. Be sure the integrated blade assembly with threaded jar bottom is locked securely to the jar before use. (Figure 3)
4. Place ingredients into jar. (Figure 4)
5. Place lid with filler cap on jar. (Figure 6)
6. Place jar assembly onto base. (Figure 7)
7. Plug the power cord into a standard household outlet of the same voltage as the one indicated in the rating plate of your blender. You are now ready to begin using your blender!

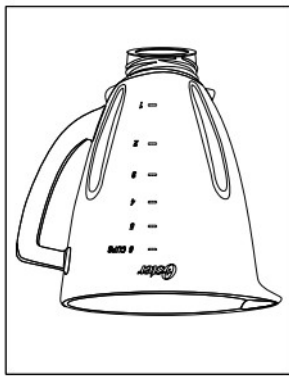 


Figure 1

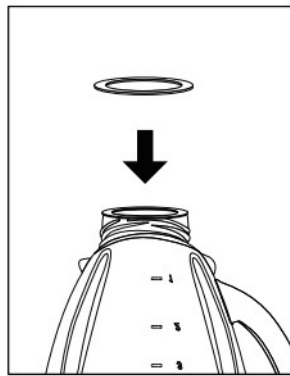 


Figure 2

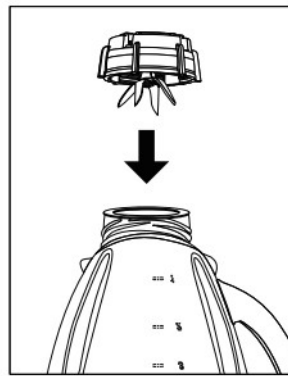 


Figure 3

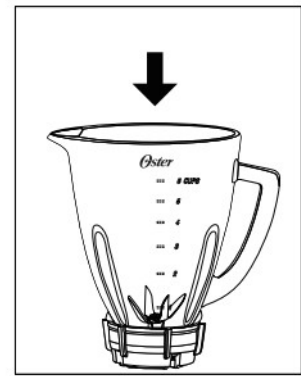 


Figure 4

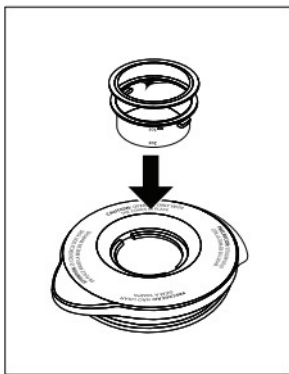 


Figure 5

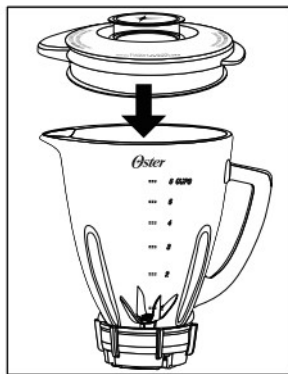 


Figure 6




Figure 7



USING YOUR OSTER® BLENDER

FOR MODELS WITH PUSH BUTTONS – 6 SPEEDS + PULSE (BLSTPEGXPB/BGB)

In the chart below, you will find a typical application, which will serve as a guide to use your blender.

	SPEED	FUNCTION
	0	OFF
	1	SOUPS
	2	SALSAS
	3	DIPS
	4	JUICES
	5	MILKSHAKES
	6	SMOOTHIES
	PULSE	

PULSE FUNCTION

1. Press and hold pulse button () for desired length of time.
2. Release pulse button () and allow blade to stop. Repeat cycle as needed. One cycle includes operating blender for about 2 seconds and then allowing blade to come to a complete stop.

NOTE: Use pulse button () to crush ice or chop food.

FOR MODELS WITH REVERSIBLE TECHNOLOGY – 2 automatic programs, 3 speeds + pulse (BLSTPEG-XRT/BGR)


USING THE AUTOMATIC PROGRAMS

1. Press the ON/OFF power button (O) to turn the blender on. The power light will blink, indicating the blender is active and ready for use. The light will stay on when the motor is running.
2. Select and press the desired automatic program button:
 - SMOOTHIES – Perfect for blending any kind of beverage
 - SALSAS – Allows to slice, shred or chop ingredients (I.e., soups, purees, salsas, etc.)
3. To change your selection, press ON/OFF power button (O) twice followed by another automatic program
4. Once the program is complete the blender will automatically stop. Please note: You may press the ON/OFF button (O) to cancel the program at any time. The blinking blue light indicates that the blender is ready.
5. Press the ON/OFF power button (O) to turn the blender off. This blender is preprogrammed to turn off automatically if not used for a period of several minutes. All lights will turn off when the unit automatically powers down.

USING THE MANUAL CONTROLS

Manual Controls include:

1. – Low Speed
2. – Medium Speed
3. – High Speed

Pulse ()

Use these controls for personal recipes or to continue blending after an automatic program is finished.

1. Press the ON/OFF power button (O) to turn the blender on. The power light will blink, meaning the blender is active and ready for use. The light will stay on when the motor is running.

Low Speed

1. Press the “1” button to run the blender at a low speed.
2. Press the ON/OFF power button (O) to turn the blender off.

Medium Speed

1. Press the “2” button to run the blender at a medium speed.
2. Press the ON/OFF power button (O) to turn the blender off.

High Speed

1. Press the “3” button to run the blender at a high speed.
2. Press the ON/OFF power button (O) to turn the blender off.


PULSE FUNCTION (⚡)

1. Press and hold the pulse button (⚡).
2. Release the pulse button (⚡) and allow blade to stop. Repeat cycle as needed. One cycle includes operating blender for about 2 seconds and then allowing blade to come to a complete stop.
3. Press the ON/OFF power button (O) to turn the blender off.

NOTE: Use pulse button (⚡) to crush ice or chop food.

USING THE BLEND-N-GO CUP ACCESSORY (WITH SELECT MODELS)

Before you use the product for the first time, separate all parts and clean them. Refer to the section 'CARING FOR AND MAINTENING YOUR OSTER® BLENDER' for cleaning instructions – the cup, lid, sealing ring, blade and threaded jar bottom are all top rack dishwasher **safe**.

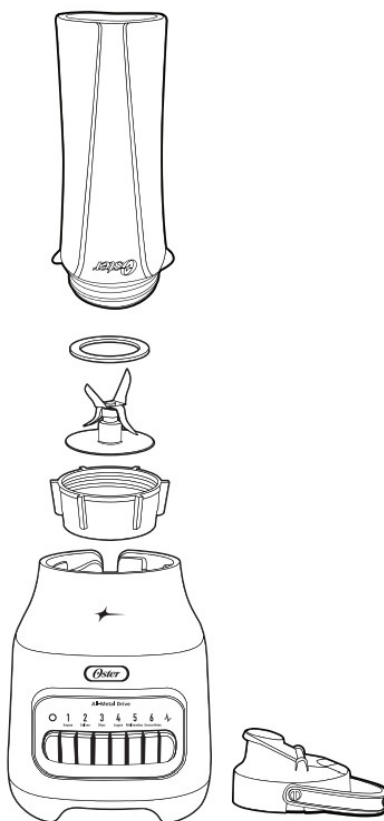

WARNING: DO NOT PROCESS HOT FOODS OR LIQUIDS IN THE BLEND-N-GO CUP.

(Cut all firm fruits, vegetables, and other foods into pieces no larger than 1.25 cm (1/2-inch) by 5.0 cm (2 inches))

1. Place ingredients into cup. (Figure 1)
2. Place sealing ring over the opening of the cup. (Figure 2)
3. Turn the blade upside-down and place onto the opening of the cup. (Figure 3)
4. Place threaded jar bottom over blade and sealing ring and turn clockwise to tighten to the cup. (Figure 4)
5. Place the assembled cup onto the motor base. (Figure 5)

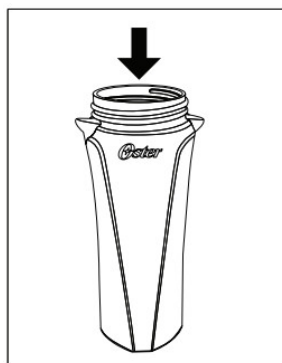 


Figure 1

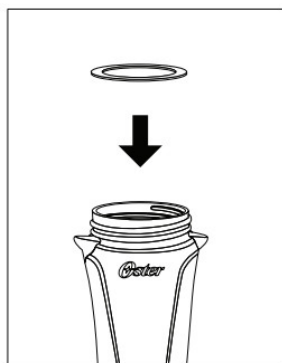 


Figure 2

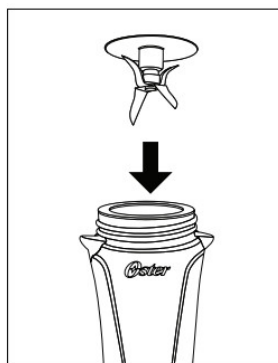 


Figure 3

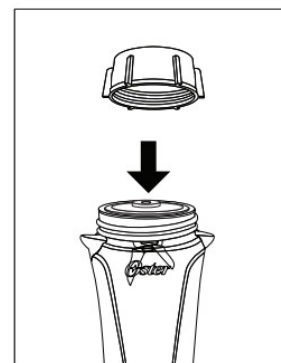 


Figure 4

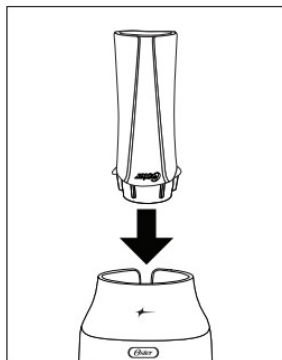 


Figure 5

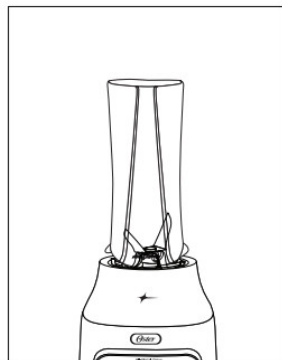 


Figure 6

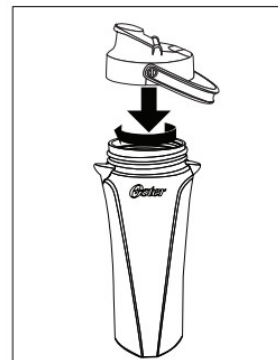 


Figure 7

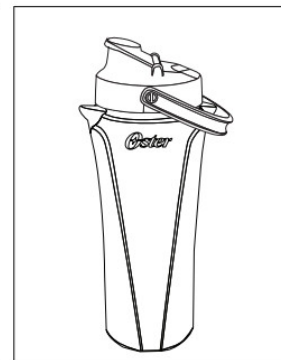


Figure 8

BLENDING TIPS

- Put liquids in the jar first unless the recipe says otherwise.
- Crushing Ice: Crush 6 ice cubes or approximately 2 cups of ice at a time.
- Do not remove the lid while in use. Remove filler cap to add smaller ingredients.
- Hot Foods: Remove the filler cap to vent steam. Tilt lid away from you. Keep hands away from the lid opening to prevent possible burns. When working with hot liquids, remove filler cap and start blending at a low speed then move to a faster speed. Do not add liquid over the 4-cup (1 liter) level.
- Cut all firm fruits and vegetables, cooked meats, fish and seafood into pieces no larger than 3/4 inch (1.8 cm) to 1 inch (2.5 cm). Cut all kinds of cheeses into pieces no larger than 3/4 inch (1.8 cm).
- Be careful if hot liquid is poured into the jar as it may be ejected out of the blender due to sudden steam.

CARING FOR AND MAINTAINING YOUR OSTER® BLENDER

AFTER USE:

1. Lift the jar straight up from the base, remove the lid and empty the jar.
2. If necessary, use a rubber spatula to scrape foods away from the sides of the jar.

IMPORTANT: UNPLUG BEFORE CLEANING.

CLEANING

The blade is sharp! Gently remove it.

Release the blade from the bottom of the jar by turning the threaded jar bottom counterclockwise.

The jar lid, jar lid filler cap and blade are dishwasher safe. Wash them on the top rack of the dishwasher. Place sealing ring into bottom basket of dishwasher. You can also wash the parts in warm, soapy water. Rinse well and dry. Wipe the base with a soft, damp cloth to clean. Never submerge the motor base in any liquid. Check the parts

as you put them back together.

IMPORTANT: DO NOT IMMERSE THE BLENDER BASE IN WATER OR ANY OTHER LIQUIDS.

EASY CLEAN

Pour 3 cups of warm water in the blender jar. Add 1 – 2 drops of liquid dishwashing detergent. Blend detergent for 10 –15 seconds. Empty jar of soapy water into sink. Rinse jar thoroughly with clean water.

NOTE: Easy Clean is not a substitute for regular cleaning described above. It is especially important to disassemble and thoroughly clean your blender when processing milk, dairy products, meats, seafood and eggs.

STORING

Reassemble the blender for storage. Leave the lid open a gap so no odors are retained.

WARNING: Never put the jar, or any other parts, in a microwave oven. Never store foods or drinks in the jar.

NOTES —

The following information is intended for Mexico only.

LICUADORA OSTER®

MODELOS: BLSTPEG-GPB, BLSTPEG-GPB-013, BLSTPEG-RPB,
BLSTPEG-RPB-013, BLSTPEG-BPB, BLSTPEG-BPB-013, BLSTPEG-CPB,
BLSTPEG-CPB-013, BLSTPEG-NPB, BLSTPEG-NPB-013, BLSTPEG-BRT,
BLSTPEG-BRT-013, BLSTPEG-MRT, BLSTPEG-MRT-013, BLSTPEG-CRT,
BLSTPEG-CRT-013, BLSTPEG-NRT, BLSTPEG-NRT-013, BLSTPEG-BGB,
BLSTPEG-BGB-013, BLSTPEG-BGR, BLSTPEG-BGR-013

LA SIGUIENTE INFORMACIÓN ES PARA MÉXICO:

IMPORTADOR NEWELL BRANDS DE MÉXICO S.A. DE C.V.

BLVD. MANUEL ÁVILA CAMACHO NO. 32 PISO 14,

COL. LOMAS DE CHAPULTEPEC III SECCIÓN, ALC. MIGUEL HIDALGO,

C.P. 11000 CIUDAD DE MÉXICO, MÉXICO

ATENCIÓN AL CONSUMIDOR: 55 5366-0800 / 800 506 1700

RFC SME570928G90

ATENCIÓN AL CONSUMIDOR:

55 5366-0800 /800 506 1700

PAÍS DE ORIGEN: MÉXICO

PAÍS DE PROCEDENCIA: MÉXICO, EUA

LEA EL INSTRUCTIVO ANTES DE USAR EL APARATO

CARACTERÍSTICAS ELÉCTRICAS

60 Hz 127 V 600 W

CONTENIDO: 1 PIEZA

NOM



© 2023 Sunbeam Products, Inc. All rights reserved.
One year limited warranty – please see insert for details.


www.oster.com

Printed in Mexico

OSTERLATINO



P.N. 2178271 / NWL0001370314 Rev. B
BLSTPEG Series_23SEPM1 (LA)_GCDS-JC

	<p>Oster BLSTPEG-GPB Blender with Glass Jar [pdf] Instruction Manual BLSTPEG-GPB, BLSTPEG-RPB, BLSTPEG-BPB, BLSTPEG-CPB, BLSTPEG-NPB, BLSTPEG-BRT, BLSTPEG-MRT, BLSTPEG-CRT, BLSTPEG-NRT, BLSTPEG-BGB, BLSTPEG-BGR, BLSTPEG-GPB Blender with Glass Jar, Blender with Glass Jar, Glass Jar, Jar</p>
---	--

References

- [ABREE - Associação Brasileira de Reciclagem de Eletroeletrônicos e Eletrodomésticos](#)